


## User manual



Vibration function button

On / off button

Shock function button

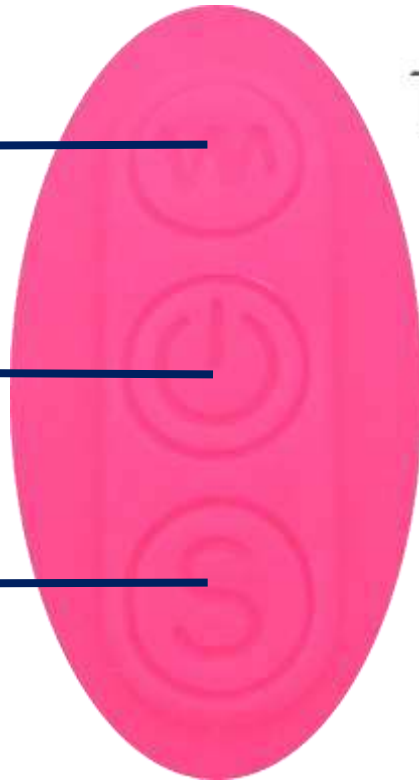

## How to use

1. Charge the battery with the USB cable
2. Press the on/off button for 3 seconds to start the vibrator
3. Press the vibration function button to change the vibration mode
4. Press the shock function mode button to change the shock mode
5. Press the on/off button for 1 seconds to stop both vibration and shock functions

## Product description

6. Made of safe silicone, soft and comfortable
7. Quiet design, protecting your privacy
8. Offer fabulous orgasms for peak sexual wellness

## Safety

1. Don't share it with others for your health
2. Stop using it if you feel uncomfortable
3. Avoid serious injury when it is used to stimulate the clitoris, use it with sex lubricant that is recommended
4. Stop using it if you find the head of the product is not smooth enough or broken
5. Keep it away from children's reach

## Cleaning and storage

1. Please clean the toy before and after use
2. Warm water and a toy cleaner can be used to clean this product
3. Avoid direct sunlight on the product
4. Store it in a dust-free place

## Attention

1. Please use a good quality personal lubricant. Lubricants containing hazardous substances cannot be used as lubricant