
DISCLAIMER

READ THIS BEFORE USE

WARNING

- Never use this device near water
- Keep the ventilation grille free from dust and dirt
- Do not remove any screws and never try to open the device yourself
- Do not use this appliance for more than 15 minutes at a time rest 30 minutes before using again
- Never charge the device overnight and only under supervision
- Disconnect the charger from the battery before use
- Suitable for adults only. Do not use this device on injuries. Consult a doctor before using this device

WARNING

DANGER: To reduce the risk of electric shock, injury to limit fire, this appliance may only be used in accordance with instructions below

- Only suitable for adults.
- Never leave the **device** massage gun unattended while charging.
- Never use this massage gun in any other way than indicated.
- Check the appliance carefully for defects before each use.
- Charge only with the supplied **device** charger.
- Never use water near the **device** massage gun.
- Keep hair, fingers and other body parts away from the shaft of the massage heads because these can get pinched.
- Bruises may occur when using a massage gun.

Check treated parts of the body regularly and stop immediately in case of pain or discomfort.

- Use the **device** massage gun only on soft body tissues, Without discomfort or pain. Don't ever use these on head and bone.
- Use the **device** massage gun only on dry skin or clothes in an up and downward movement for about 60 to 90 seconds.



DISCLAIMER

READ THIS BEFORE USE

Never use the device massage gun without approval from your doctor in the cases below:

Pregnancy, diabetes, use of pacemakers, recent surgeries, epilepsy, migraines, hernias, spondylolisthesis, spondylol-ysis, spondylosis, joint replacements, metal plates in the body or other concerned present inc. your physical health. These cases exclude the use of the device massage is not an option, but advice from a medical expert is needed.

GUARANTEE

If a manufacturing error or defect occurs within **one year** of purchase then device will repair or replace the massage gun free of charge. In case of defect please contact reseller.



SPECIFICATIONS

IMPORTANT: The massage gun shuts down after 10 minutes of use a safety measure



5 PROFESSIONAL MASSAGE HEADS



Smooth massage head

Deep massage of the whole body is suitable for the body's body



Ball Massage Head

Seven balls of balls with essential oil body



Horn massage head

Multiple triangle combination is suitable for finger pressure massage



Wavy massage head

Suitable for relaxation of soft tissue sensitive muscle group



Vermiculite

Applicable to the abdomen to wake up gastrointestinal vitality