

Do not drink this water.

TROUBLESHOOTING

Cannot turn the appliance on.

Possible cause:

The appliance is not connected to power supply.

Repair:

- Check the outlet using another device.
- Insert the plug correctly into the electrical outlet.
- Check the electrical circuit breaker.

Possible cause:

The appliance is defective.

Possible cause:

After use without water or if there was too little water in the machine, the appliance has not cooled sufficiently.

Repair:

- Allow the appliance to cool for 15 minutes.

TECHNICAL SPECIFICATIONS

Power: 220–240 V~, 50 Hz

Power input: 1800 W

Volume: max.: 27 l

USE AND DISPOSAL OF WASTE

Wrapping paper and corrugated paperboard – deliver to scrapyard. Packing foil, PE bags, plastic elements – throw into plastic recycling containers.

DISPOSAL OF PRODUCTS AT THE END OF LIFETIME

Disposal of electric and electronic equipment (valid in EU member countries and other European countries with an implemented recycling system)

The represented symbol on the product or package means the product shall not be treated as domestic waste. Hand over the product to the specified location for recycling electric and electronic equipment. Prevent negative impacts on human health and the environment by properly recycling your product.

Recycling contributes to preserving natural resources. For more information on the recycling of this product, refer to your local authority, domestic waste processing organization or store, where you purchased the product.

This product complies with EU directive requirements on electromagnetic compatibility and electrical safety.

The instruction manual is available at website www.ecg-electro.eu.

Changes in text and technical parameters reserved.



08/05



GB