

Automatic rotating curling iron

User's manual

EN



SENCOR[®]

SHS 0900GD

Translation of the original manual

CONTENTS

IMPORTANT SAFETY INSTRUCTIONS.....	3
DESCRIPTION OF THE APPLIANCE.....	7
BEFORE FIRST USE.....	7
USING THE AUTOMATIC CURLING IRON.....	7
CLEANING AND MAINTENANCE.....	9
TECHNICAL DATA.....	10
INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS.....	10
DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT.....	10

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance.
- Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.



Warning:

- Do not use this appliance in the vicinity of water.



Warning:

- Do not use this appliance near baths, showers, washbasins or other containers containing water.

- In the event that you use the appliance in the bathroom, unplug it from the socket after use by removing the plug from the socket, as the vicinity of water poses a danger, even when the appliance is turned off.
- To ensure additional safety, it is recommended to install an Residual Current Device (RCD) into the electric circuit to the bathroom with a maximum current rating of 30 mA. Ask an electrician for advice.
- Carefully unpack the appliance and take care not to throw away any part of the packaging before you find all the parts of the appliance.
- Before connecting this appliance to a power socket, make sure the voltage stated on the label of the appliance corresponds to the voltage in your power socket.
- Never use accessories, which have not been supplied with this appliance or which are not designed for this appliance.
- Ensure that the power cord and plug cannot come into contact with water or dampness.
- Do not spray the appliance with water or any other liquid. Do not submerge this product and any of its components in water, or any liquids.
- This appliance is designed for household use. Do not use it in an industrial environment, or outdoors!
- Do not use sprays in the vicinity of the appliance.
- If you will not be using the appliance, disconnect it from the electrical grid. Before cleaning or moving it, proceed in the same manner.
- Make sure that it has cooled down completely before storing it.
- Do not place the appliance on or near an electrical or gas stove. Do not place the appliance near an open flame or devices or equipment that are sources of heat.
- Do not use any attachments other than those supplied or recommended by the manufacturer.
- Do not use the appliance if it has a damaged power cord or power plug.
- In no case should you attempt to repair the product yourself, do not make any modifications to it – danger of electrical shock! Entrust all repairs and adjustments to a specialised company/service. Failure to do so will expose you to the risk of voiding the warranty policy.
- Do not place the power cord of the appliance near hot surfaces or over sharp objects. Do not place heavy objects on the power cord, position the cord so that it is not stepped on or tripped over. Make sure the power cord does not hang over the edge of a table or that it is not touching a hot surface.


Automatic rotating curling iron

SHS 0900GD


EN

- Do not disconnect the appliance from the power socket by pulling the power cord – it may damage the power cord / power socket. Disconnect the power cord from the power socket by gently pulling the plug of the power cord.
- Do not use the appliance for any other purposes than those for which it was designed.
- Ensure that when turning on the product, that the air inflow or outflow grill is not covered.
- Ensure that no hair or threads remain in any of the openings of the hair dryer.
- The manufacturer takes no responsibility for damages caused by the incorrect use of this product and its accessories (injuries, burns, scalding, fire, food spoilage, etc.).

A

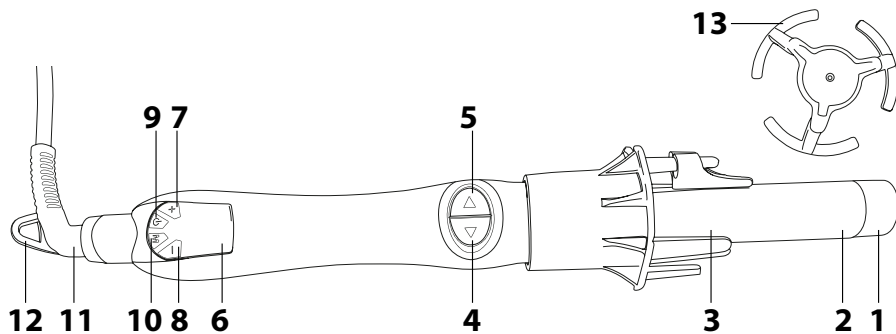

B

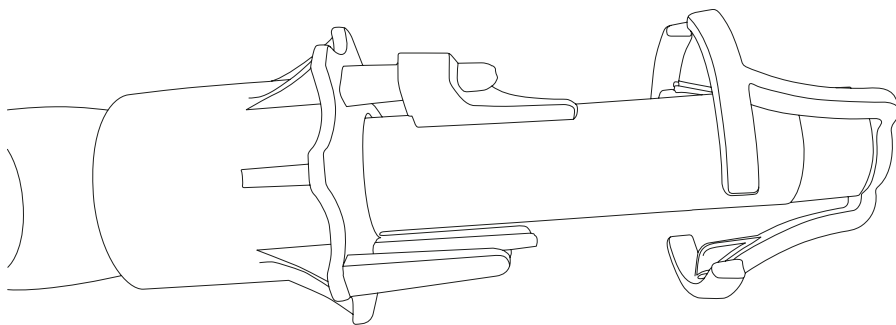

Prior to using this appliance, please read the user's manual thoroughly, even in cases, when one has already familiarised themselves with previous use of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.

We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE

- | | |
|-------------------------------|--|
| A1 Heat insulated tip | A8 Minus (-) button |
| A2 Cylinder | A9 On/Off button |
| A3 Hair winding tines | A10 Operating mode selection button |
| A4 Rotate right button | A11 Swivel power cord end (360°) |
| A5 Rotate left button | A12 Hanging loop |
| A6 Display | A13 Protective thermally-insulated attachment |
| A7 Plus (+) button | |

BEFORE FIRST USE

Before first use, take the appliance and its accessories out of the packaging material and remove all promotional labels and stickers. Check that neither the appliance nor any of its parts is damaged.

USING THE AUTOMATIC CURLING IRON

Turning on the curling iron and setting the temperature

Insert the power plug into the power socket.

Press the On/Off button **A9** and the appliance will beep.

The display **A6** will show the default temperature of "180 °C" and the curling iron will automatically start heating up to this default temperature. While the curling iron is heating up, the ready indicator will gradually light up on the display **A6**. When the curling iron heats up, the ready indicator will be lit.

If you need to change the temperature, use the + or - buttons either while the appliance is heating up or after it has finished heating up. You can set the temperature in the range 120 °C – 220 °C.

**Note:**

If you change the temperature after the appliance has finished heating up, the ready indicator will gradually light up on the display **A6**. When the curling iron heats up, the ready indicator will be lit.

**Note:**

A lower temperature is suitable for fine, dyed and damaged hair. A higher temperature is suitable for normal, thick and strong hair.

Setting the rotation speed of the cylinder

Repeatedly press button **A10** until "R" appears on the display **A6**.

Use the + or – buttons to set the desired rotation speed of the cylinder. The speed can be set in the range from 1 to 5, where speed 1 is the lowest and speed 5 is the highest.

Setting the hair strand wound on time

Repeatedly press button **A10** until "T" appears on the display **A6**.

Use the + or – buttons to set the time for which the hair strand will remain wound on to the cylinder **A2**. The time can be set in the range from 3 to 12 seconds.

Using the curling iron

1. Thoroughly comb out your hair before use.
2. Set the desired temperature, cylinder rotation speed and when necessary also the hair strand wound on time.
3. Hold the curling iron with one hand vertically next to the hair strand.
4. Carefully wind a hair strand around the cylinder **A2** and then press the rotate right button **A4** or the rotate left button **A5**. The tines will help the hair strand to automatically wind on to the cylinder **A2**.

**Note:**

It is important for the rotate right button **A4** or rotate left button **A5** to be held down for the entire winding time.

5. Once the whole (or as necessary only its part) hair strand is wound on to the cylinder **A2**, release the rotate right button **A4** or the rotate left button **A5** and wait a few seconds for the hair strand to heat up. If you have set the time for which the hair strand is to remain wound up on the cylinder **A2**, a beep will be made after this time elapses. This indicates that you should release the hair strand from the cylinder **A2**.
6. In order to release the hair strand from the cylinder **A2**, carefully pull the curling iron downwards.
7. Repeat the entire process with the remaining hair strands.

Turning off the curling iron

When you have finished using it, turn the curling iron off by pressing the On/Off button **A9**. Pull the power plug out of the power socket and allow the curling iron to cool down completely.

Automatic shut-off function

The curling iron is equipped with an automatic shut-off function and it will automatic turn off when left idle for one hour. To turn it on again, it is necessary to press the On/Off button **A9**.

Using the protective attachment

For greater safety, you can also attach the protective thermally-insulated attachment **A13** on to the tip **A1** - see fig. B, which improves protection against potential burn injuries.

CLEANING AND MAINTENANCE

Disconnect the power plug from the power socket and allow the appliance to cool down before cleaning it.

For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. that could damage the appliance. No part of this appliance is intended for washing in a dishwasher.



Warning:

To prevent the risk of injury by electrical shock, do not submerge the appliance, power cord or power plug in water or any another liquid.

To clean the outer parts of the appliance, use a soft cloth dipped in lukewarm water. Prevent water from entering into the appliance.

Storage

When not using the appliance for an extended period of time, disconnect the power plug from the power socket, allow the appliance to cool down and clean it according to the instructions in chapter "Cleaning and maintenance".

Before storing it, check that the appliance and all its accessories are thoroughly clean and dry. Store the appliance in a dry, clean and well-ventilated location not exposed to extreme temperatures and out of children's reach.

TECHNICAL SPECIFICATIONS

Rated voltage range	100 – 240 V~
Rated frequency	50 / 60 Hz
Rated power input	45 W
Noise level	35 dB(A)

The declared noise emission level of the appliance is 35 dB(A), which represents a level A of acoustic power with respect to a reference acoustic power of 1 pW.



Safety class for electrical shock protection:

Class II – Electrical shock protection is provided by double or heavy-duty insulation.

We reserve the right to change text and technical specifications.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details. In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union.

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.