

TROUBLESHOOTING

Common	
The microwave oven interferes with the television reception.	The microwave in operation may interfere with radio and television reception. It is similar to the interference of small electrical appliances like a mixer, a vacuum cleaner and an electric fan.
The light in the oven dims.	The light in the oven cavity can dim when a lower cooking power is set.
Steam appears on the door, hot air comes out of the vents.	Food can emit steam during cooking. Most of the steam is released through the exhaust vents, though some can accumulate in a cooler place, such as the door. This effect is normal.
The oven was started empty by accident.	The oven should not be operated empty. It is very dangerous.

Problem	Possible cause	Correction
The oven will not start.	(1) The cord is not firmly plugged into the outlet.	Unplug the cord from the outlet. After about 10 seconds, plug the cable back into the outlet.
	(2) Blown fuse or switched off circuit breaker.	Replace the fuse or reset the circuit breaker (repaired by a service technician from our company).
	(3) Problem with the outlet.	Try connecting another electrical appliance into the outlet.
The oven does not heat.	(4) Door is not closed correctly.	Close the door properly.
The turntable makes noises when the microwave oven is operating.	(5) The turntable or bottom of oven are dirty.	Clean the oven according to the instructions stated in chapter "Cleaning."

TECHNICAL DATA

Volume:	20 l	Nominal voltage:	230-240 V~ 50 Hz
Cooking power:	700 W	Nominal input power:	1,200 W
Timer:	30 minutes	Operating frequency:	2,450 MHz
Power setting:	5 levels	Noise level:	55 dB
Turntable:	Ø 245 mm	Grill:	900 W
Weight:	11.3 kg		
Dimensions:	452 × 262 × 364 mm		
Interior dimensions:	315 × 198 × 297 mm		

USE AND DISPOSAL OF WASTE

Wrapping paper and corrugated paperboard – deliver to scrapyard. Packing foil, PE bags, plastic elements – throw into plastic recycling containers.

DISPOSAL OF PRODUCTS AT THE END OF LIFETIME

Disposal of electric and electronic equipment (valid in EU member countries and other European countries with an implemented recycling system)

The represented symbol on the product or package means the product shall not be treated as domestic waste. Hand over the product to the specified location for recycling electric and electronic equipment. Prevent negative impacts on human health and the environment by properly recycling your product. Recycling contributes to preserving natural resources. For more information on the recycling of this product, refer to your local authority, domestic waste processing organization or store, where you purchased the product.

This product complies with EU directives on electromagnetic compatibility and electrical safety.

The instruction manual is available at the website www.ecg-electro.eu.

Changes of text and technical parameters reserved.



08/05

