


batteries (not included)

apter (not included)

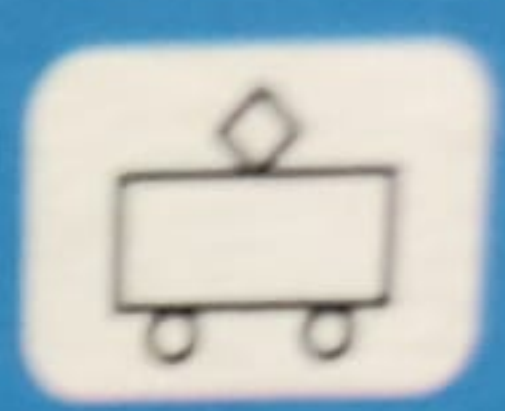

Canada use:

120 Volts AC, 60Hz. Output 6 Volts DC, 450

and Australia use:

240 Volts AC, 50Hz. Output 6 Volts DC, 450

CE RoHS MAD

Rocky Rainbow™

Amazing Rainbow Projector

SAFETY INFORMATION

Users should install and replace batteries.
 Turn power off before opening battery compartment.
 Insert batteries correctly. Match positive + and negative signs.
 Rechargeable batteries are recommended for best performance.
 Non-rechargeable batteries are not recommended.
 If rechargeable batteries are used, they are only to be charged under adult supervision.
 Rechargeable batteries are to be removed from the product before they are charged.
 Do not recharge non-rechargeable batteries.
 Use the batteries specified.
 Batteries of the same or equivalent type as recommended are to be used.
 Do not mix different types of batteries: alkaline, standard (carbon-zinc), rechargeable (nickel-cadmium).
 Do not mix old and new batteries.
 Do not mix dead or exhausted batteries.
 Remove batteries during long periods of non-use. Always remove exhausted batteries from the box.
 Avoid leakage and corrosion.