

USER MANUAL

 
Karaoke Speaker




Model No.:CH-006

Dear Customer, Thank you very much for your purchasing, Please read this user manual carefully and keep it for future reference.

Instruction of keys

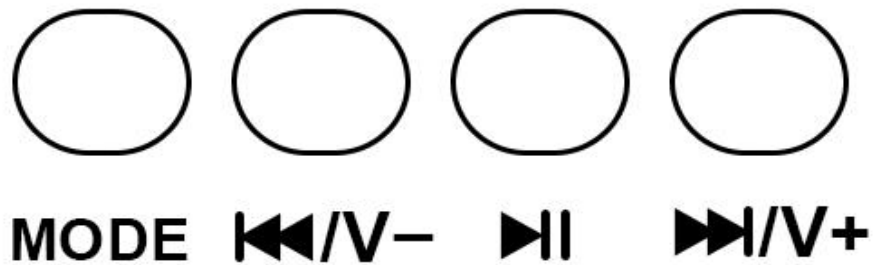

 1. Mode switching key to select mode
2. ▶▶ Pause playback
3. Press ◀◀/V- for previous song, hold on ◀◀/V- decreasing the volume
4. Press ▶▶/V+ for next song, hold on ▶▶/V+ for increasing the volume

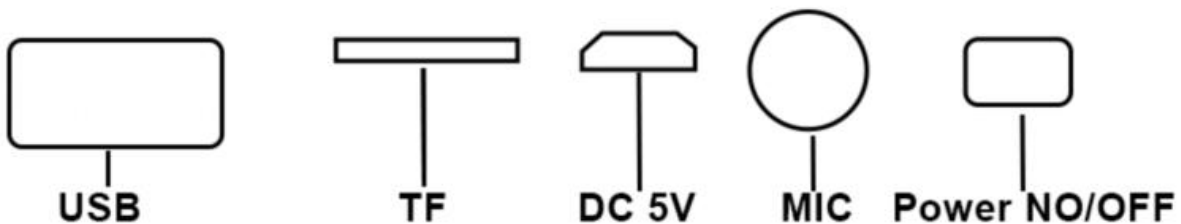


1. Power ON/OFF : Turn on/off the speaker device
2. Wired microphone jack
3. DC 5V USB charging port
4. TF card insert slot
5. USB insert slot Wired

Operation

1. Turn on the speaker device. Bluetooth mode is enabled by default. Bluetooth Name: KARAOKE SPEAKER.
2. Press “M” mode switching key for choosing FM Radio mode/Bluetooth pairing mode.
3. When speaker in FM radio mode, press **▶||** button, searching the FM channel automatic, then Press **▶||** again, stop to searching the FM radio, in to FM radio station, press **◀◀/V- / ▶▶/V+** to chose the FM channel
4. Insert the USB/TF card, you will hear prompt tone “USB Mode”, “Memory card mode”, press “M” mode switching key for choosing Bluetooth pairing mode/FM radio mode.
5. Connect the wired microphone if you want.
6. Hold on Mode button, can shut off/on LED light

 Important Safety Instructions

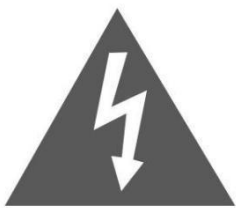

CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



1. Do not use this device near water.
2. Clean only with a dry cloth.
3. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
4. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Inside Package

Speaker	1pcs
USB charging cable	1pcs
User manual	1pcs
Wired Microphone	1pcs