






APTUR

Remote Control & Flash Trigger

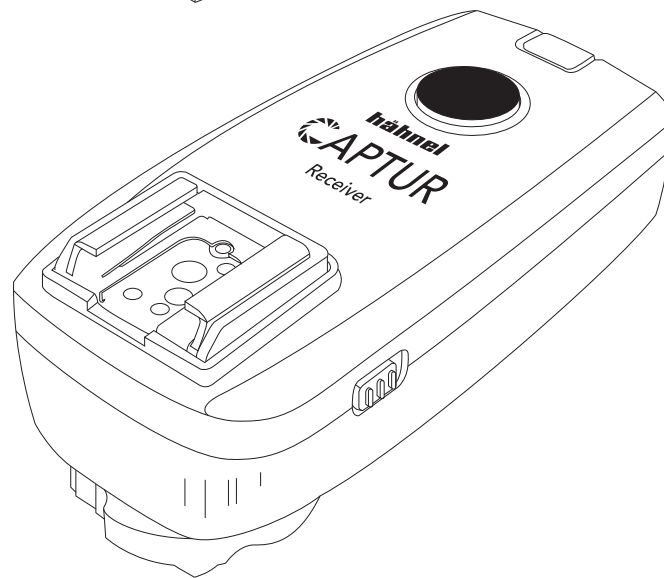


Manual

hähnel Captur - Transmitter & Receiver

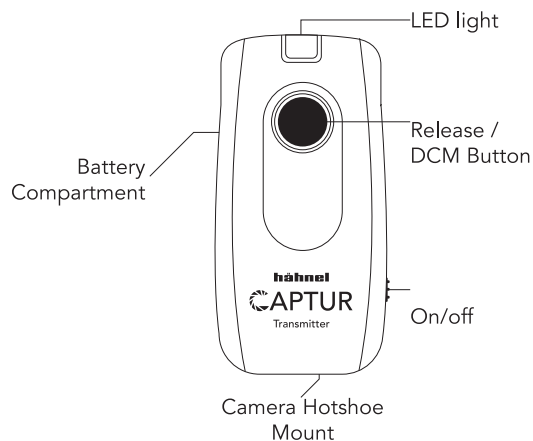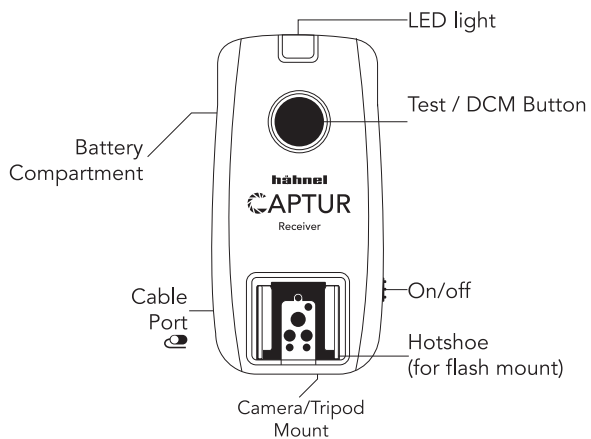


Captur - Canon C1 & C3 Cables (Captur Canon only)
 Captur - Nikon N1, N2 & N3 Cables (Captur Nikon only)
 Captur - Sony S1 & S2 Cables (Captur Sony only)
 Captur - Olympus/Pana O1, O2 & P1 Cables (Captur Olympus/Pana only)

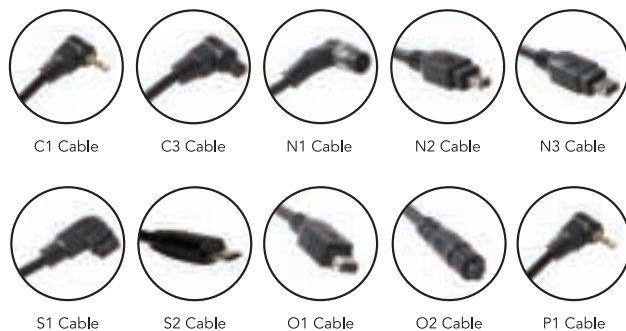

Please choose correct cable for your camera.



Batteries






4 x AA Alkaline Batteries

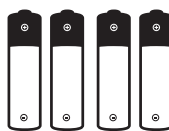

Please insert all batteries provided. Instructions in this manual assume that the Captur Receiver, Transmitter and any other equipment are already turned on.

Identify contact (3 black lines) on cable

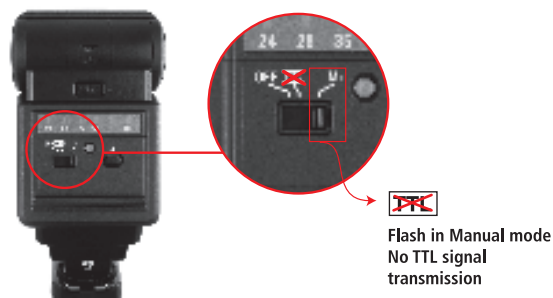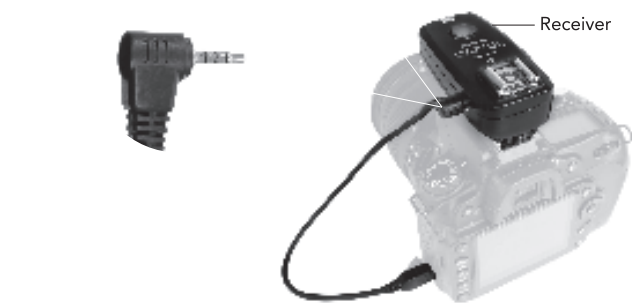

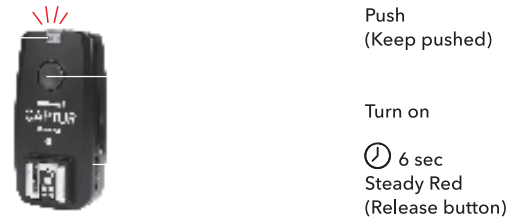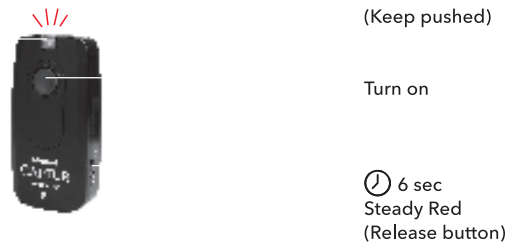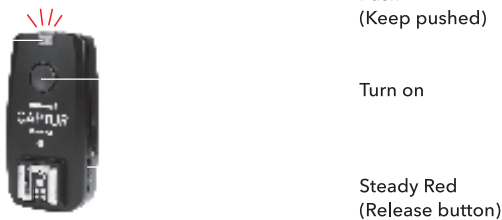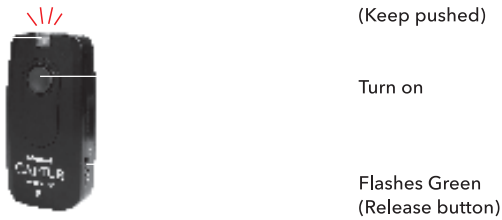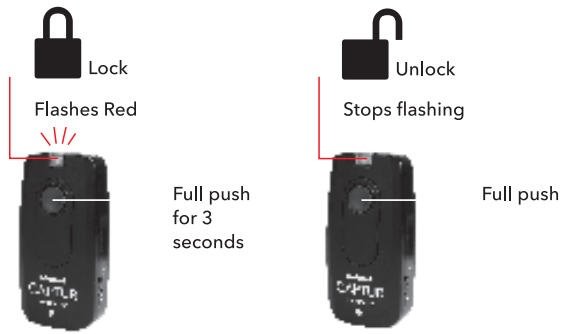

Captur Module - Pro




Captur Module - Timer



Requires 2 separate sets of the Captur. Each must be synced separately on different channels.

Please note: To ensure camera and flash gun are in sync, flash receivers must be triggered from a camera mounted transmitter.

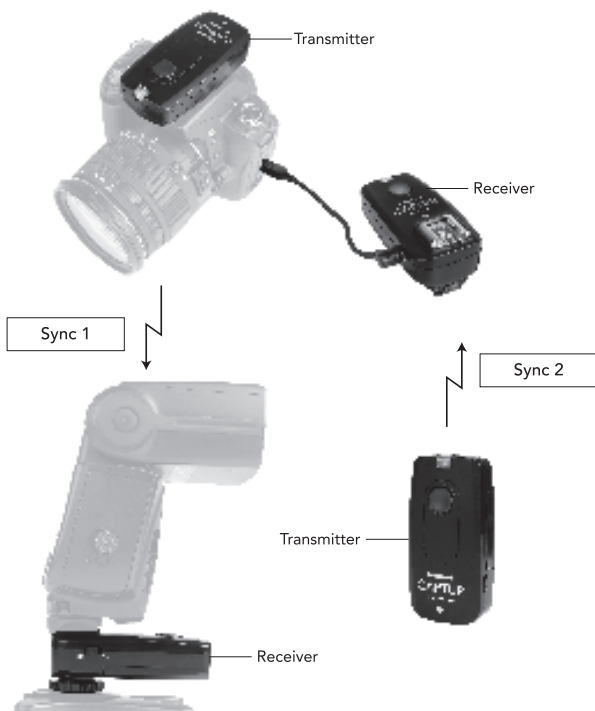

Captur Receiver



