 
 
 
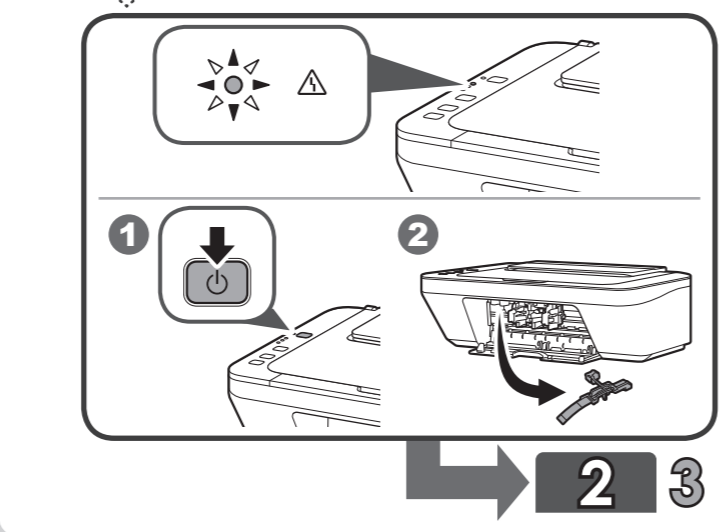 
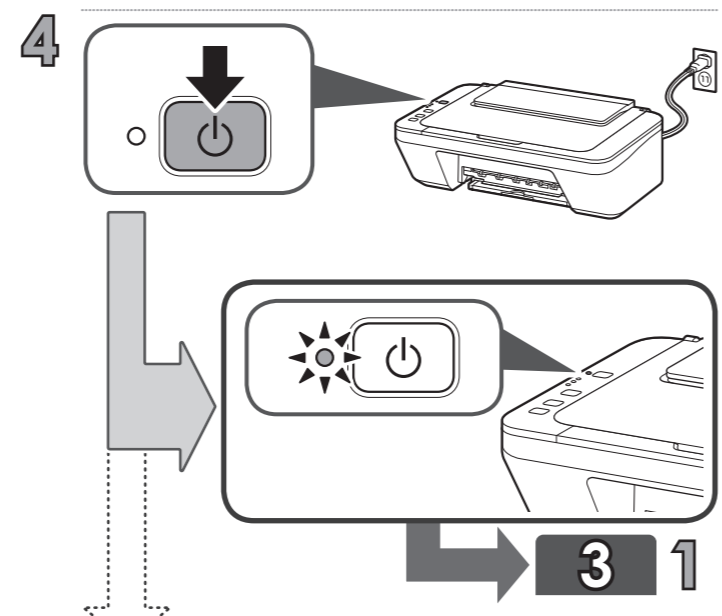 
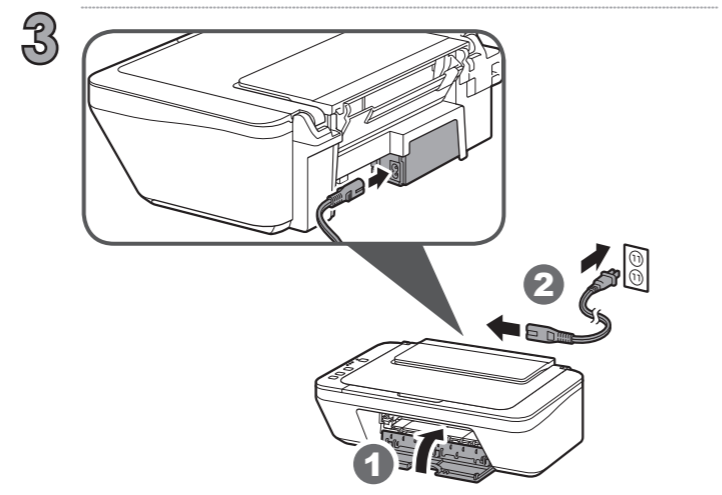 
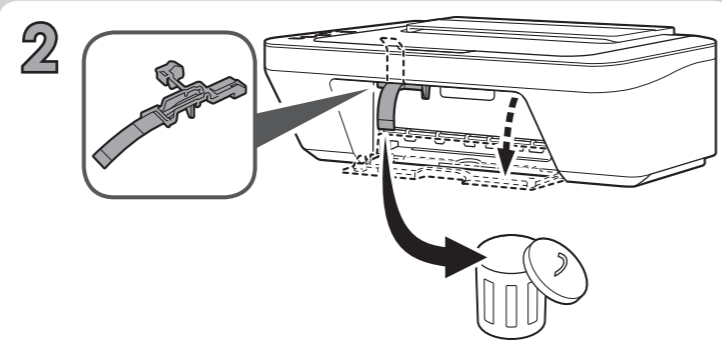 
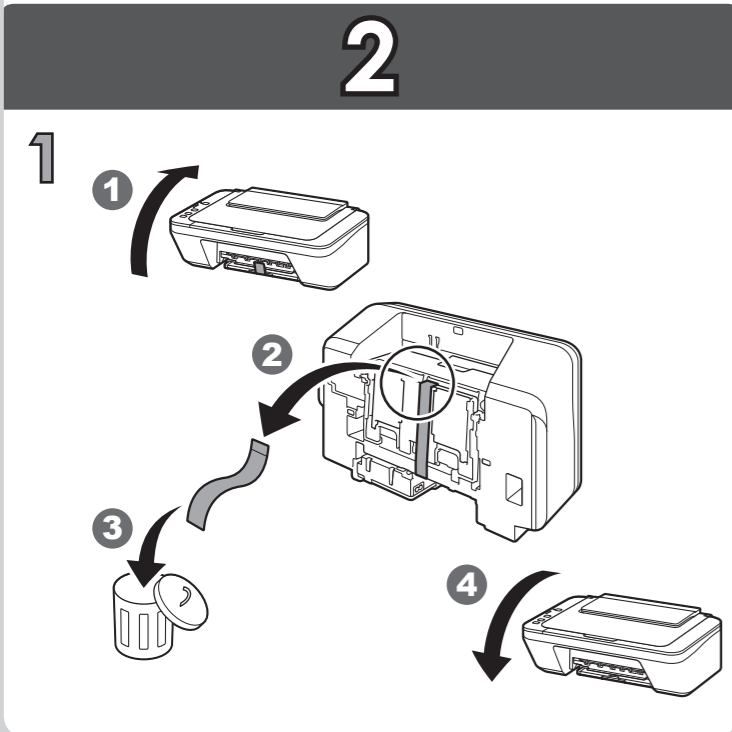 
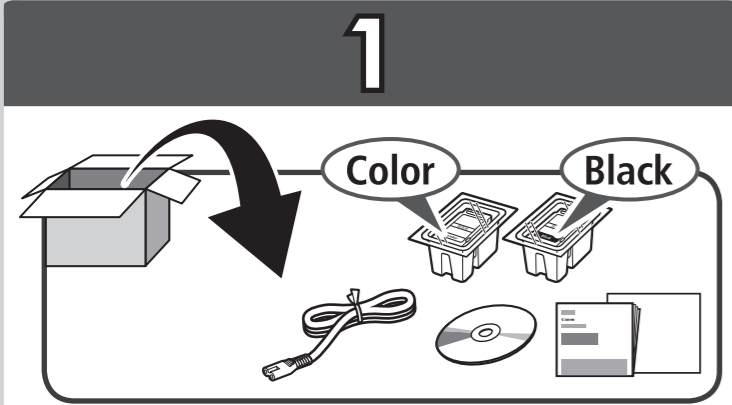 
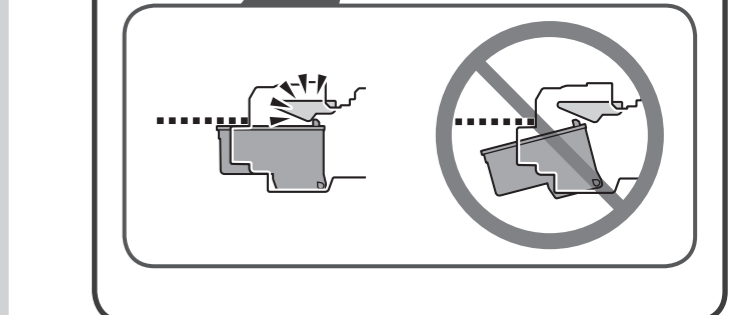 
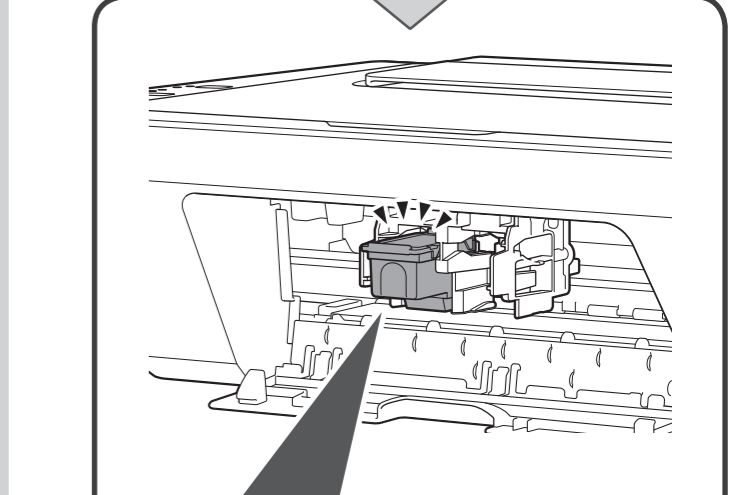 
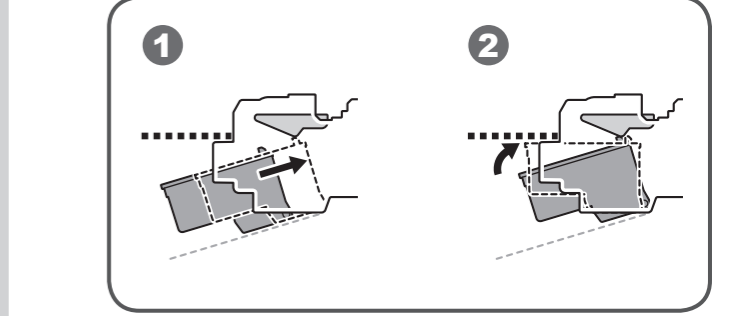 
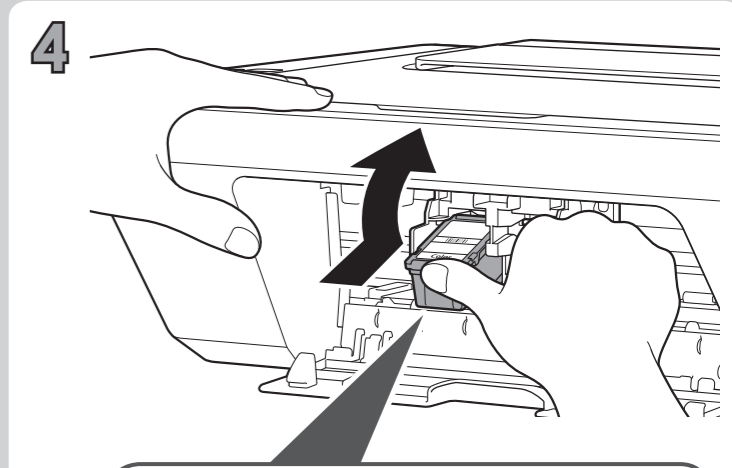 
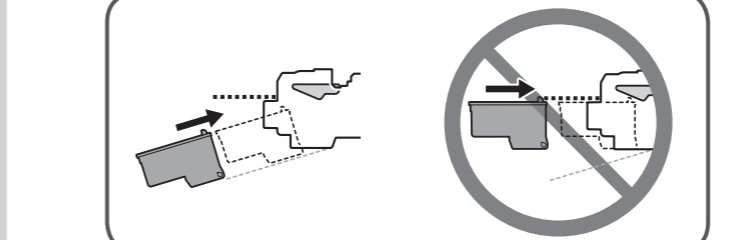 
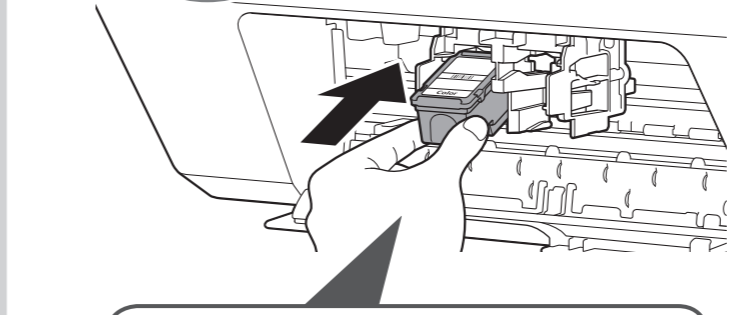 
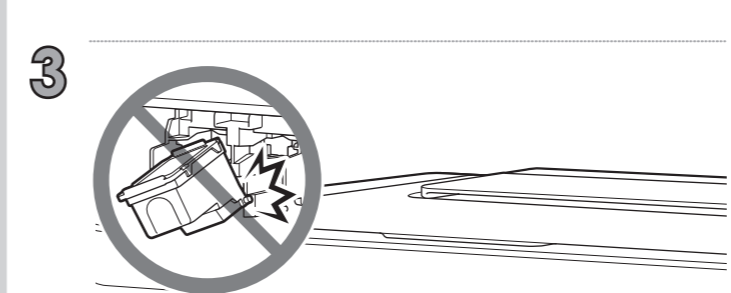 


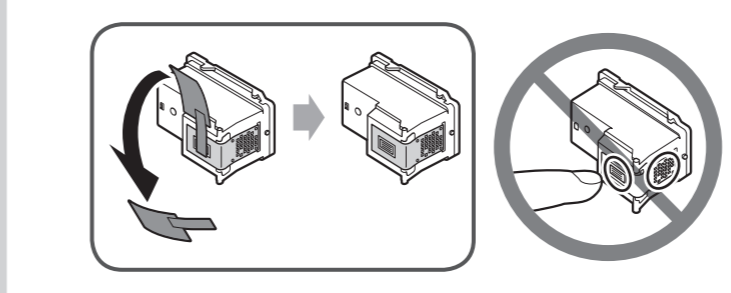


Canon PIXMA MG2500 series
PIXMA MG2400 series

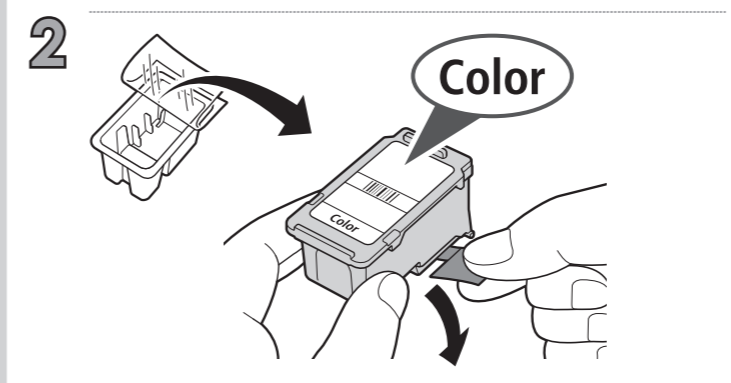


3

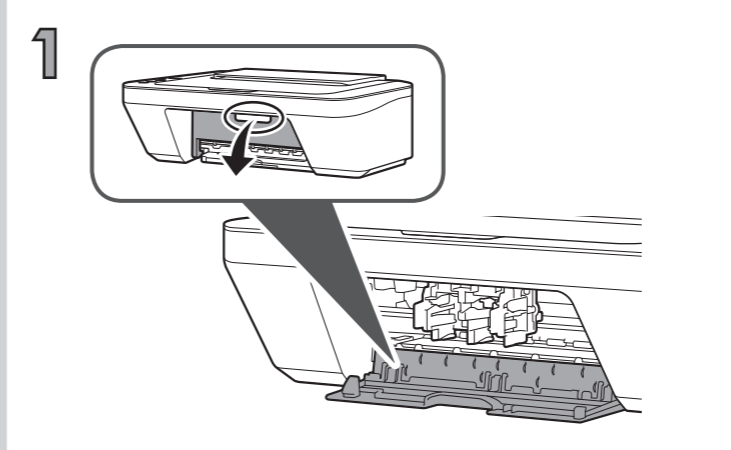

 5

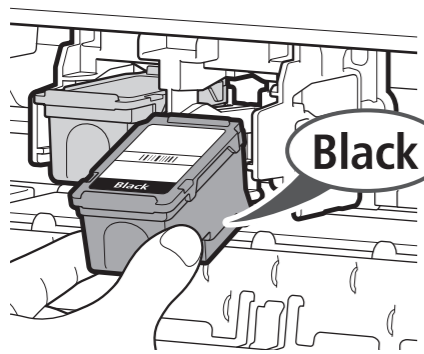



Black

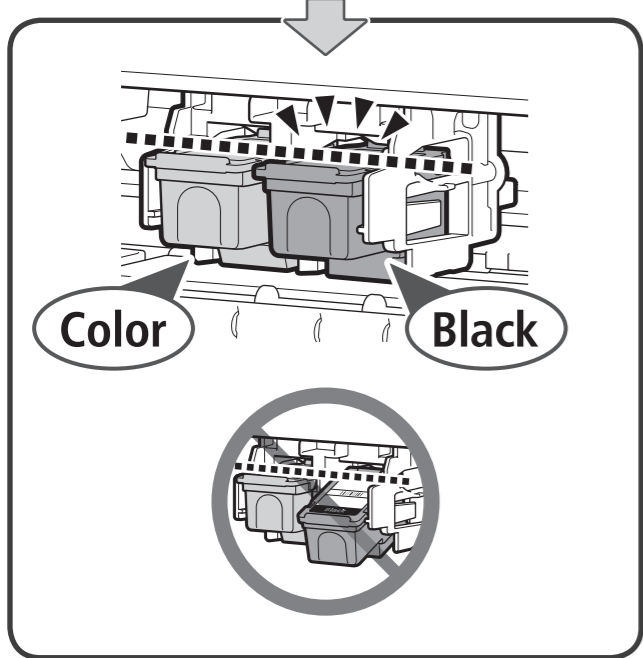 


Color

Black

  6

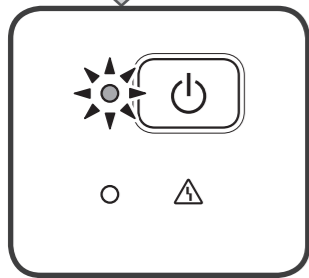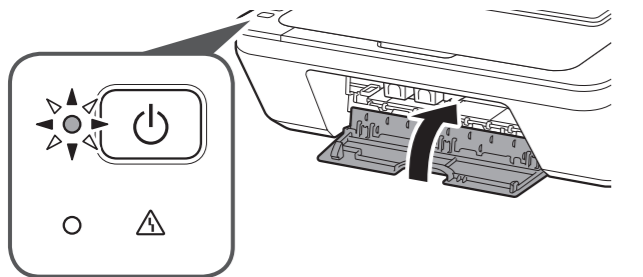


4 1

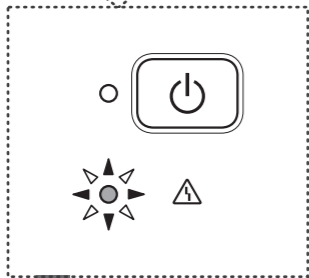 


3 3

4

 
1

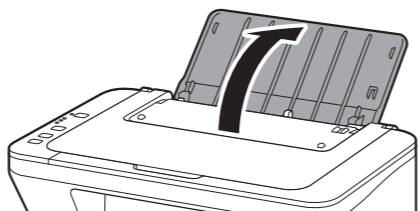


2

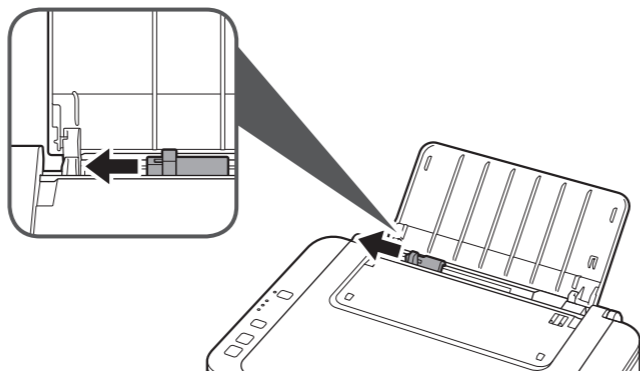 


3

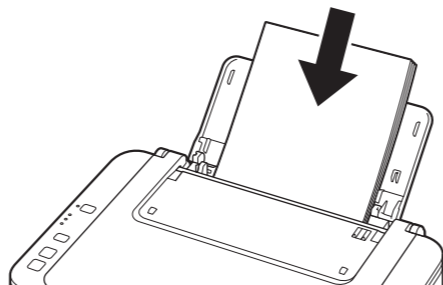 

4

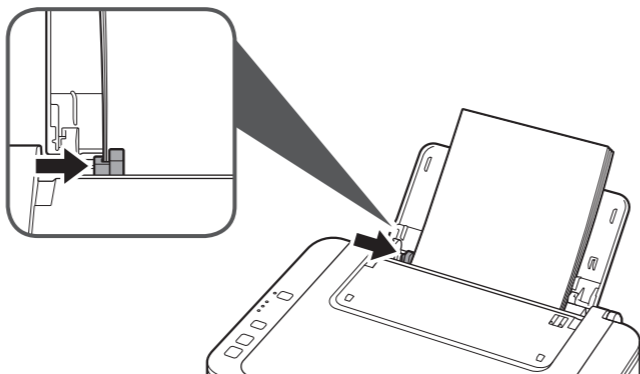 

5

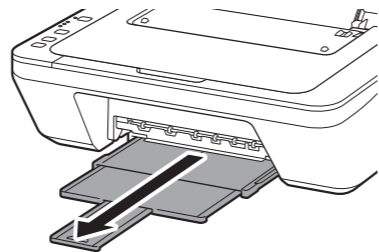 


5



canon.com/ijsetup

 Windows PC

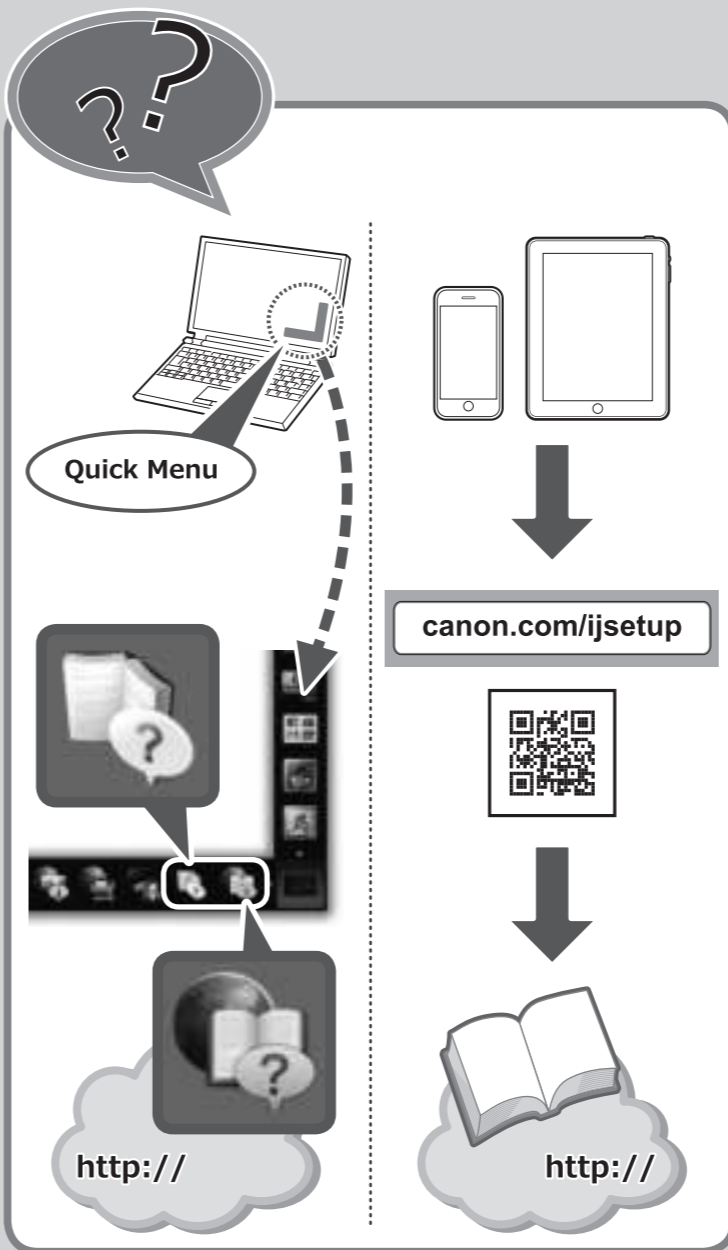

Quick Menu

canon.com/ijsetup

http://

http://

