

EXTREME X POWER PACK

QuickGuide

NIKKEI

Attention



Use specified charger only



Don't expose to liquids



Don't disassemble



Avoid Dropping



Avoid Extreme temperatures

How to use Powerpack



1. Place battery in charger



2. Connect charger to USB-port
(cable comes with an ExtremeX Action camera)

3. Battery is charged when blue light is on

The pack contains:

- 3.7 V Li-on battery 900 mAh 3.33Wh
- Micro-USB charger

Specifications

- Micro-USB 5V connection
- 2 hours charging time
- Charging indicator

The product can be used in combination with all NIKKEI EXTREMEX action cams that have a removable battery.

Customer Service



www.nikkei.eu