

English layout
Engelse indeling

Wireless Keypad / Draadloos keypad

Compatible hardware / Compatibele hardware

PlayStation®3

Carefully read the information on this package (including the inner panels) together with the PS3™ system instruction manual before using this product.

Compatible with PS3™ system software version 2.50 or later

A system software update is required if your system uses an earlier version.

■ Features

- Input text quickly, easily and comfortably
- Simple to attach or remove from a wireless controller*
- Touchpad for accurate cursor control and effortless web browsing


* A wireless controller is not included.

■ A USB cable is not included.

Use the USB cable (A - Mini-B type) supplied with the PS3™ system to connect or charge the wireless keypad.

Distributed by Sony Computer Entertainment Europe Ltd, 10 Great Marlborough Street, London, W1F 7LP.

Package: © 2009 Sony Computer Entertainment Inc. All rights reserved

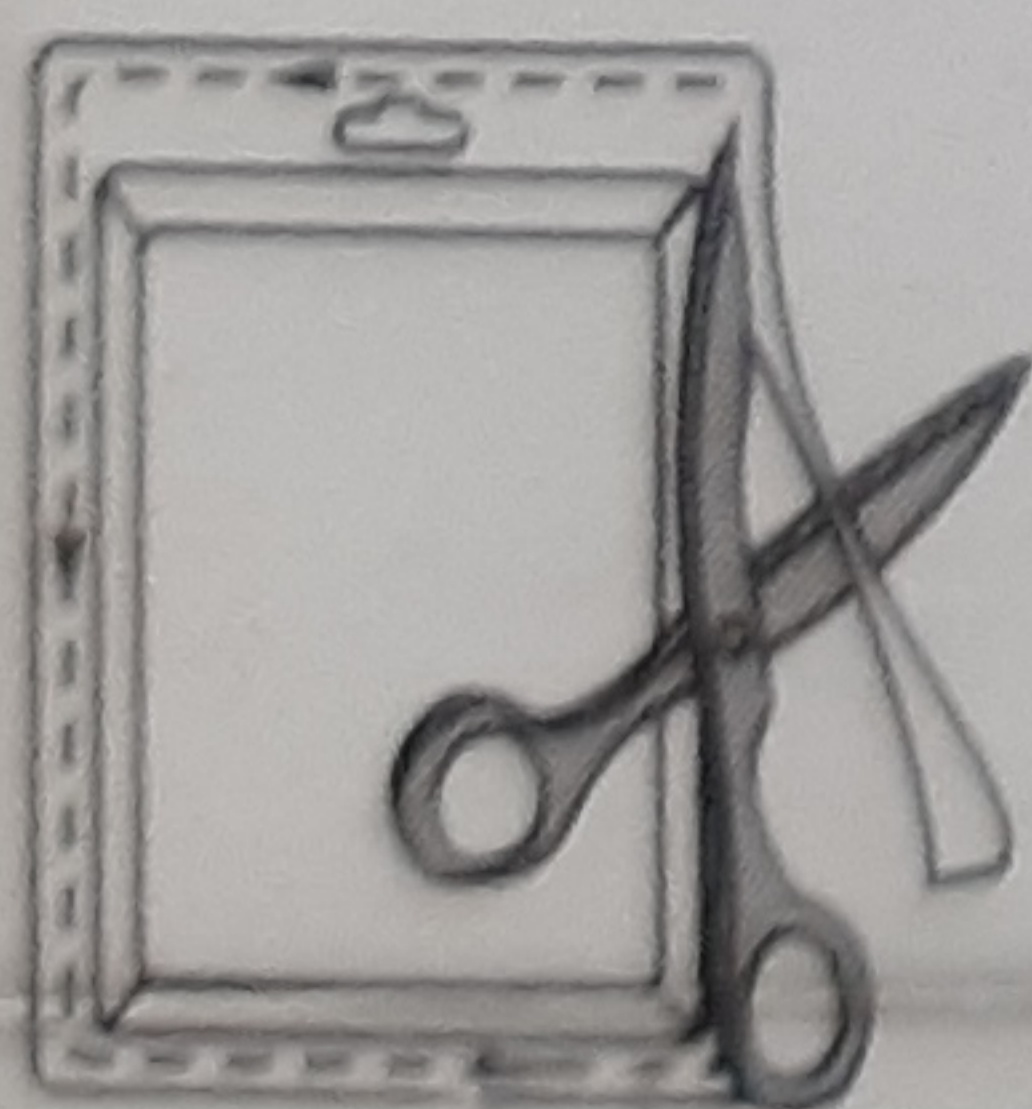

Follow the diagram to open the packaging.
Open with care.

Volg het schema om de verpakking te openen.
Wees voorzichtig met openen.



N1158



eu.playstation.com/ps3

SONY



COMPUTER ENTERTAINMENT

4-129-057-02

CECHZK1GB