


INSTRUCTIONS FOR USE




1. Opening the lip, take out the Jumping wire, then close the lip.



2. Long Press  to turn on the egg & enter the 1st vibration. There is 12 frequencies vibration, soft press to switch the frequency. Press and hold 1.5S to turn Off.



3. Long Press  to turn on the other egg & enter the 1st vibration. There is 12 frequencies vibration, soft press to switch the frequency. Press and hold 1.5S to turn Off.



4. After each use of this product, Please clean it with clean water then wipe with a disinfecting wipe. When the egg is thoroughly dry, Put the two wire closed and wound until the two eggs can be placed in the card slot, and then cover the lid.



5. Charging method: Please plug the USB Cable into the DC hole, light flashing when plug in, and the light lights up when fully charged. During charging, the appliance circuit is protected and cannot be started. It is recommended to do fully recharging before using.