

Enter the 4-digit password, the green light shines clockwise and open the door. Green light shines for about 10 seconds and you will hear a creaking sound. When you finish, close the door to lock the safe.

### 3 Changing the password

To change the password, follow these steps:

- Enter the current password (default: 0000) and open the door.
- Hold the "\*" button down, both green and red lights flash.
- Within 15 seconds, enter the new 4-digit password, press "#" button to store your new password. Both lights stop flashing.
- Release the "\*" button and close the door of the safe.

**Note:** If you forget the password it can be reset to factory default by removing and reinstalling the batteries.

### 4 Prompting voice

- When enter the password, you may hear some voice of "DU" or "password please".
- If you enter a wrong password, the red light shines in the transparent window and produces some voice of "OH" or "Sorry, please try again".
- If the door is kept on opening for longer than 10 seconds, green light stops shining and makes the beeps sounds every 20 seconds. Close the door to stop the beeping.

### 5 Store coins and bills

Store the coins which are inserted from the coins slot at the top.  
Store the bills which are inserted from the bills slot. Only the safe is close can bills be inserted in. As long as the safe is close, bills can be inserted at any time continually. Inserting bills: Put a bill to the bills slot, then the bill will be inhaled automatically and the green light flashes. The bills are inserted in 3 seconds after the green light stops. If the bills are blocked, the red light shines until the bills are pulled out. You can press the password to open the door after the light stops.

- The safe is recommended for the ages 6 and up.
- Please check safety notice supplied with batteries before use.
- Do not throw the batteries in fire.

CE   
NO.881506  
MADE IN CHINA



THE NUMBER IS PUSHED

IT WORKS THE DIAL

THE DOOR IS OPENED