 


INSTRUCTION MANUAL



Cisco DL

<p>1.</p>	<p>2.</p>	<p>5.</p> <p>Warning: When replacing a halogen lamp, wait for it to cool, for a minimum of 5 minutes</p>
<p>3.</p> <p>INPUT: AC220~240V</p>	<p>4.</p>	<p>Warning: When replacing a halogen lamp, wait for it to cool, for a minimum of 5 minutes</p>
<p>6.</p>	<p>Overall Sizes:</p>	