



★ Steam Cleaner

NV282C

User Manual

THIS INSTRUCTION BOOKLET CONTAINS
IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE
REFERENCE.



DEAR CUSTOMER,

Thank you for choosing **STEAM CLEANER**. This product has a simple and magnificent appearance, an exquisite production process, and other characteristics. Please read the instructions for several minutes and take good care of them to familiarize yourself with the correct use and maintenance methods.

*Thank you once
again for
purchasing!*

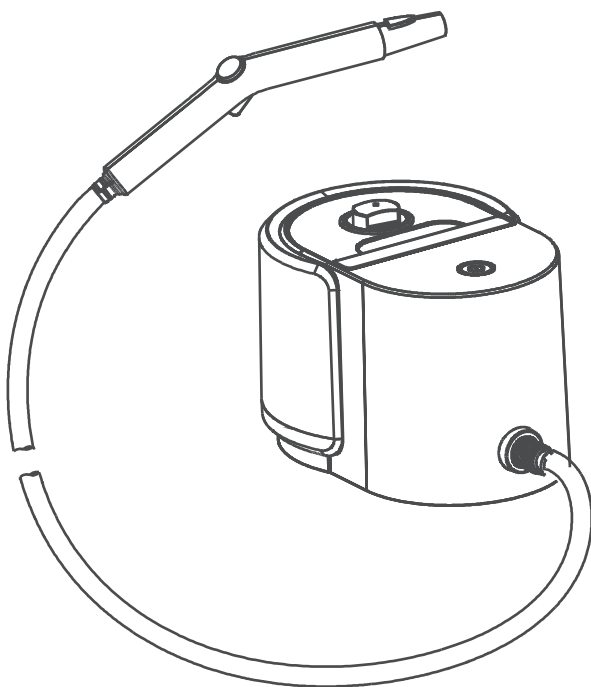 


TABLE OF CONTENTS

04 Product Overview

08 Assembly Instructions

05 Package Includes

13 Product Features

06 Product Description

13 How To Use?

06 Product Features

15 Safety Instructions

06 Technical Specifications

 
17 Care & Maintenance

07 Accessories and Their Uses

18 Trouble Shooting

07 Intended Use

PRODUCT OVERVIEW

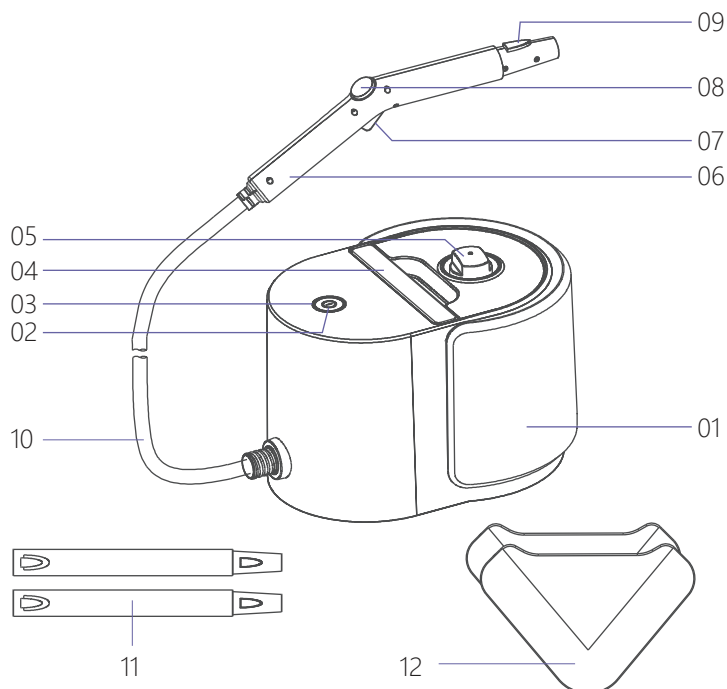

01 Main Body

02 On/OFF Switch

03 Indicator lights

04 Lift Handle

05 Boiler with Cap

06 Main Nozzle

07 Steam Button

08 Steam Lock Switch

 
09 Lock/Release Button

10 Steam Hose


11 Extension Wands x2

12 Microfiber Pad


PACKAGE INCLUDES

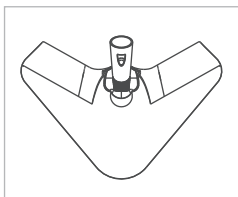


Mop head

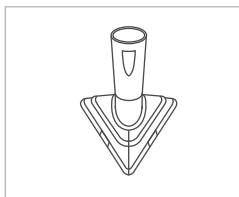 


Triangle Steam brush x 1

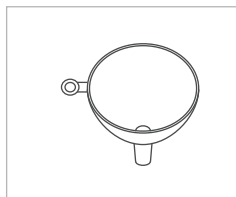 


Funnel x 1

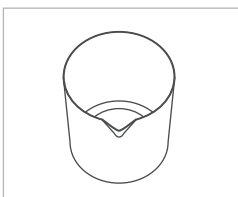 


Measuring Cup x 1

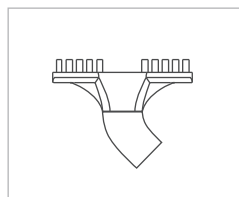 


Grout Brush x 1

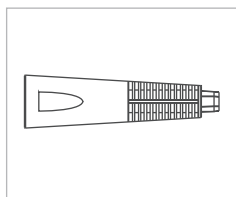 


Steam Jet Nozzle x 1

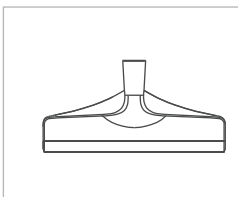 


Glass Squeegee x 1

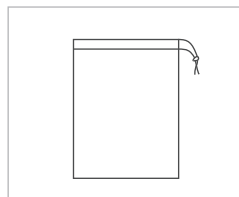 


Storage Bag x 1

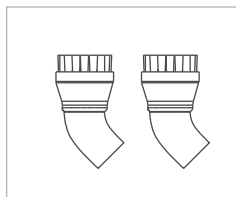 


Brass Utility Brush x 2

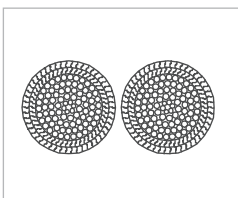 

Magic Brush x 2

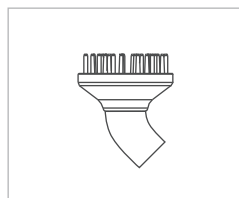 

Magic Brush Base x 1

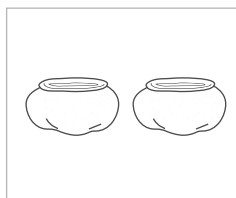 

Microfiber Bonnet x 2

PRODUCT DESCRIPTION

The **Steam Cleaner** is the ultimate solution for effortless and chemical-free deep cleaning in every corner of your home. With its powerful steam technology, this multi-purpose household steamer is designed to easily tackle various surfaces. It has a sizable 1.5-litre water boiler that rapidly heats up to 208°F in just 8 minutes and a continuous supply of hot steam for up to 45 minutes, ensuring an efficient and thorough cleaning. It is equipped with 17 premium accessories, which makes cleaning effortless and tackles grease, grime, and stains across various surfaces in your home. With easy-roll wheels, a 16-foot cord with built-in wrap, and two extension wands, manoeuvring indoors and outdoors is a breeze. This multipurpose canister steam cleaner is safe for use on a variety of surfaces, including ceramic tile, laminate flooring, wood floors, carpets, windows, upholstered furniture, mattresses, kitchen appliances, toys, baseboards, bathrooms, vehicles, and BBQ grills.

PRODUCT FEATURES

- Chemical-Free Cleaning
- Rapid Heating
- Long-Lasting Steam
- Versatile Accessories
- Easy Maneuverability
- Safe on Multiple Surfaces
- Comprehensive Cleaning
- Multipurpose Use
- Eco-Friendly
- Effortless Operation

TECHNICAL SPECIFICATIONS

Model	NV282C
Voltage	220-240V
Wattage	1500W
Water capacity	52 OZ. (1500 ml)
Heating Time	8~10 mins (Approximate)
Continuous Steam Time	45 mins(Approximate)
Unit Weight	10.0 LBS(4.5 kg)
Unit Dimension	40.0 x 27.0 x 25.0 cm
Power Cord	16.4(5M)

■ ACCESSORIES AND THEIR USES

- **Main Nozzle:** It emits a powerful flow of steam when the Steam Button is pressed.
- **Steam Hose:** It safely channels the flow of steam from the Boiler to the Main Nozzle.
- **Steam Jet Nozzle:** It focuses the flow of steam from the Main Nozzle, and serves as the base to which the Utility Brushes and Squeegee connect.
- **Extension Wands:** They are connected to the Main Nozzle, allowing for floor mopping as well as easier cleaning in high or hard-to-reach places.
- **Mop Head:** It connects to the Extension Wands, and is designed for steam cleaning a variety of hard floor surfaces.
- **Microfiber Pads:** They are attached to the Mop head, and are designed for removing scuffs and stains from hard floors. The Pads are reusable and machine washable.
- **Water Funnel and the Measuring Cup:** They are provided to assist in easily and consistently filling the Boiler with the optimum amount of water (17-52 oz. /500-1,500ml).
- **Squeegee:** It is connected to the Steam Jet Nozzle, and can be used to clean mirrors, windows and other smooth glass surfaces.
- **Triangle Brush:** It is connected to the Main Nozzle or Extension wand, and is designed for cleaning corners and other difficult angles.
- **Brass Utility Brush:** It is connected to the Steam Jet Nozzle and is designed for removing tough stuck-on grease and grime from durable surfaces such as ovens and grills.
- **Magic Brush:** It is for cleaning surfaces with grease or sticky liquids, for example, kitchentable, countertop, water sink, etc.
- **Grout Brush:** It is for cleaning narrow surfaces,for example, corners, tile floor grout, etc.
- **Carpet Slider:** For optimal cleaning of your carpets.
- **Storage Bag:** It can store accessories together after cleaning work finished.
- **Microfiber Bonnet:** They could be used with the triangle Steam Brush, to clean the leather or fabric surface.

■ INTENDED USE

This product is intended to be used indoors for household cleaning. This product is not intended for commercial or industrial uses. The manufacturer assumes no responsibility for damage or injury due to unauthorized use of product modification. Failure to follow these directions will void the product warranty.

■ ASSEMBLY INSTRUCTIONS

WARNING: Do not try to connect accessories while the unit is emitting steam.

Extension Wands:

1. Select one of the Extension Wands, and align the rear end of the wand with the Main Nozzle.
2. Align the hole in the wand with the purple "Lock/Release" button on the nozzle.
3. Align the extension rod with the main nozzle. Press down the release button on the main nozzle and slide the extension rod onto the steam outlet until you hear and feel the release button click into place.

 


Figure 01

Mop Head:

1. Connect the mop head onto the other end of the extension wand.
2. Align the mop head with the end of the extension wand. Press down the release button on the extension wand and slide the mop head onto the extension rod until you hear and feel the release button click into place.

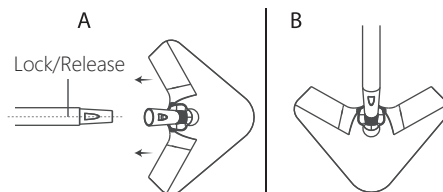 


Figure 02

Microfiber Pads:

1. Lay on the Microfiber Pad on a flat surface, with two fastener strips facing upward.
2. Align the Mop Head above the Microfiber Pad. Make sure the Mop Head is oriented with the pad as shown, and centered as best as possible (FIGURE 3-A).
3. Fastener strips will adhere to pad grips on the underside of the Mop Head. The Microfiber Pad should now be attached and ready for use (FIGURE 3-B).

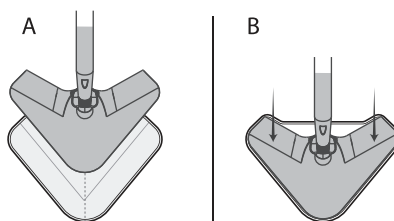 


Figure 03

Tips:

- Microfiber Pads are machine washable.
- To avoid picking up lint, washing separately from other fabrics is recommended.
- Only use liquid detergent.
- Avoid using any fabric softeners or bleach.
- Air drying is recommended; machine drying on a low heat or air-dry setting is acceptable as well.
- Do not use on unsealed hardwood or unglazed ceramic surfaces.
- Surfaces that are not properly sealed may be warped or damaged by exposure to heat and moisture.
- Care should also be taken when steaming sealed hardwood floors, as prolonged exposure to steam in a single spot may cause damage and discoloration.
- To avoid this, keep the Mop Head in constant motion on these surfaces.
- Steam may remove the sheen from some floors that have been treated with wax. Extremely rough textured floors may tear or damage Microfiber Pads.

Recommended Surface:

The Mop Head and Microfiber Pads are perfect for use on these hard floor surfaces:

- Sealed Hardwood
- Stained Concrete
- Sealed Laminate
- Linoleum
- Ceramic
- Granite
- Marble
- Vinyl
- Tile

Steam Cleaning Accessories:

Warning: Do not connect accessories while the unit emits steam.

Steam Jet Nozzle/Triangle Brush:

1. Select one of these accessories (Steam Jet Nozzle or Triangle Brush-Steam Jet Nozzle shown as an example), and align the rear end of the accessory with the Main Nozzle.
2. The hole in the accessory should align with the purple "lock/release" button on the Main Nozzle.
3. Press down on the purple "lock/release" button (FIGURE 04). While continuing to hold the button down, slide the accessory onto the Main Nozzle (FIGURE 04) until you hear and feel the release button click into place.

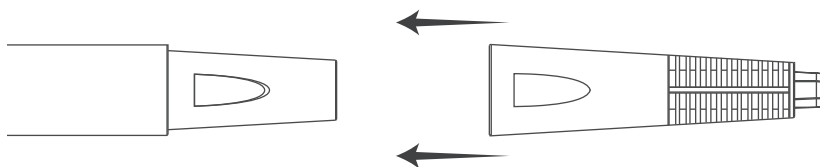 


Figure 04


Tips:

- The Steam Jet Nozzle and Triangle Brush can be connected to the end of an Extension Wand to reach high or difficult spots.
- Connect the Extension Wand (or wand) as outlined on Page 8, then connect your desired accessory to the Wand in the same way as you would normally connect it to the Main Nozzle.

BRASS UTILITY BRUSHES/MAGIC BRUSHES:


NOTE: Brass Utility Brushes/ Magic brushes connect to the Steam Jet Nozzle, not the Main Nozzle.(Brass Utility Brush show below as example)

1. Align guide tab on inside of Brass Utility Brush (FIGURE 05) with groove in bottom of Steam Jet Nozzle tip.
2. Firmly press Brass Utility Brush onto tip of Steam Jet Nozzle. Press it on as far as possible to prevent steam leakage.
3. To remove Brass Utility Brush, simply grip it firmly and pull it off of Steam Jet Nozzle.

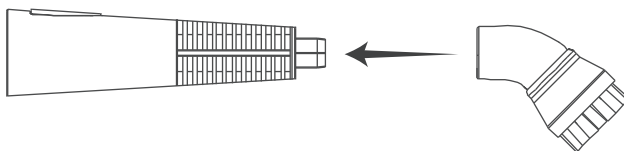 **Figure 05****SQUEEGEE:**

NOTE: Squeegee connects to the Steam Jet Nozzle, not the Main Nozzle.

1. Place Squeegee over tip of Steam Jet Nozzle, and firmly press it on Steam Jet Nozzle as far as possible. (FIGURE 06)
2. To remove Squeegee, simply grip it firmly and pull it off of Steam Jet Nozzle.

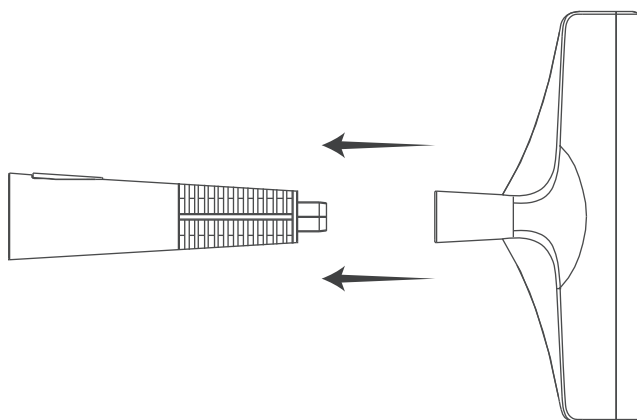 **Figure 06**

■ OPERATION INSTRUCTIONS

NOTE: Ensure the Boiler has been filled and all desired accessories are connected before following these steps.

1. For first-time use, remove the protective plastic cover from the electrical plug.
2. Plug the power cord into a convenient electrical outlet.
3. Switch the Lighted On/Off Switch to the **"ON"** position.
4. The water will be heated for 3-10 minutes (depending on how much water is in the Boiler), and then ready to begin steaming.
5. Direct the nozzle (and any connected accessories) towards the surface you desire to steam, and press the Steam Button. To sanitize surfaces, point the nozzle, press the Button and hold approximately 1/2 inch from the surface for at least 5 seconds. This will ensure that you have killed germs and bacteria.
CAUTION: Always be sure that the nozzle and any accessories are pointed in a safe direction (away from yourself, other people, pets, and plants) before pressing the Steam Button.
6. Keep the Steam Button pressed for a continuous flow of steam. You may also press the Steam Lock Switch while pressing the Steam Button to lock it down. This will allow a continuous flow of steam without manually holding the Button down.

■ HOW TO USE?

Filling The Boiler:

1. Place the Steam Cleaner on a flat, level surface.
2. Make sure the Lighted On/Off Switch is set to the **"OFF"** position and the grounded power cord is unplugged from the electrical outlet.
3. Cautiously unscrew and remove the Boiler cap, and drain any water remaining inside the Boiler into a sink or tub.

NOTE: The boiler should be emptied after each use, this will help to minimize mineral build-up and prevent over-filling.

4. Fill the measuring Cup to the maximum fill line (17 oz./ 500ml.) with water.
NOTE: In order to significantly reduce mineral build-up and prolong the life of your Steam Cleaner, the use of distilled or de-mineralized water in the unit is highly recommended. Refer to Page 17 for more information about mineral build-up.
5. Using the Water Funnel, carefully pour water from the Measuring Cup into the Boiler through a fill hole.
CAUTION: A water Funnel should always be used to fill the Boiler, to prevent spilled water from entering unit housing and damaging electrical components.
6. Depending on how long you intend to steam, you may repeat steps 4 and 5 up to two more times, up to a maximum of 52 oz. (1,500 ml.) of water. See chart for a comparison of the amount of water vs. approximate steam time.

Amount of water	Duration of Steam
17 oz (500ml.)	Approximately 15mins
35 oz (1000ml.)	Approximately 30mins
52 oz (1500ml.)	Approximately 45mins
7. Replace the Boiler cap, ensuring that it is screwed on tightly to prevent hot steam from escaping and causing injury.

Refilling Boiler:

If the unit has been in use, always use the following safety precautions before removing the Boiler cap to add water:

1. Allow the unit to cool for 5-10 minutes.
2. Press and hold the Steam Button to release all remaining steam. Steam can remain pressurized inside the Boiler for up to an hour after use.

WARNING: Failure to follow these precautions may result in burns from escaping steam when the Boiler cap is removed.

■ SAFETY INSTRUCTIONS

Carefully read all the safety instructions given below:

Directions To Reduce Risk of Fire, Electrical Shock, And Injury:

1. Always read the instructions before using the appliance.
2. Ensure that the electrical information on the label matches your power supply before plugging in.
3. Do not use high-wattage appliances on the same circuit to prevent circuit overload.
4. Never immerse the unit in water, avoid crimping the cord, and don't use it with damaged parts. Avoid using the cord as a handle.
5. Pull the plug, not the cord, to disconnect from the outlet.
6. Do not use the appliance if the cord or unit is damaged. Contact a service centre for repairs. Loose outlets can cause overheating. Replace worn outlets with the help of an electrician.
7. Do not leave the appliance unattended while it's plugged in.
8. Do not use the unit near aerosol products or in oxygen-rich environments.
9. Only use accessories recommended for the unit to prevent damage or injury.
10. If the On/Off switch doesn't work, disconnect the cord and consult the troubleshooting guide.
11. Turn off and unplug the unit before filling. Use only water, preferably distilled, and don't exceed the specified limit.
12. Only water should be used. Avoid using any cleaning chemicals in the water tank.
13. Always turn off the power and unplug before adding water to the tank.
14. Keep the power cord away from hot surfaces.
15. Avoid touching the nozzle during operation to prevent burns.
16. Be cautious of steam to prevent burns or injuries during operation.
17. Prevent children or inexperienced individuals from operating the appliance.
18. Store the machine indoors and protect it from rain or wind.
19. Do not attempt to repair the appliance yourself. Send it to the designated service centre for repairs.

20. Always unplug the appliance before cleaning or performing any maintenance.
21. Do not direct liquid or steam towards appliances with electrical components, like ovens.

Hot Steam:

To avoid burns from escaping steam when removing the boiler cap to refill the unit:

1. Allow the unit to cool for 5-10 minutes before handling.
2. Press and hold the steam button to release any remaining steam pressure.
3. Position the appliance away from your body, ensure the nozzle is unblocked, and do not touch hot parts.
4. Do not touch hot parts, including the nozzle or metal components. Be cautious when handling accessories or turning the unit upside-down.
5. Be careful when using uneven surfaces, such as stairs, to prevent accidents.
6. Consult manufacturer guidelines before steaming new surfaces. Test on a hidden area if unsure.
7. Do not steam unsealed hardwood or unglazed ceramics. It can cause damage. Avoid wax-treated surfaces as steam might remove the sheen.
8. Never leave the unit stationary on any surface for too long, as prolonged heat and moisture can damage floors.
9. Ensure the power cord doesn't touch hot surfaces. Bundle the cord loosely when storing.
10. Allow the steam cleaner to cool for at least 30 minutes before storing. Do not store with a damp microfiber pad attached.
11. Children above 8 years old can use the appliance under supervision. They should not play with it, and maintenance should always be supervised.

Note: When replacing accessories, ensure the machine is powered off and cool for 30 minutes to prevent burns.

■ CARE & MAINTENANCE

Proper Storage:

Preparing your Steam Cleaner for storage is quick and simple. When you have finished your steaming tasks, follow the steps listed below.

1. Remove all accessories from the unit, and drain any remaining water from the Boiler into a sink or tub, this will help to minimize mineral build-up and prevent over-filling during your next use. Loosely replace the Boiler cap.
2. Store accessories safely away, near the Steam Cleaner. Power cord can be conveniently wrapped stored in the bottom.
3. Store Steam Cleaner in a cool, dry location.

Mineral Build-Up:

- A common maintenance need for steam appliances is the removal of build-up caused by high mineral content in many municipal water supplies.
- This mineral build-up may limit the effectiveness and reduce the life of your Steam Cleaner.
- The best way to minimize mineral build-up is to use distilled or de-mineralized water when using your Steam Cleaner.

If you are unable to use distilled water, it is recommended that the following procedure be followed monthly to help remove any mineral build-up:

1. Remove all accessories from the unit.
2. Remove the Boiler cap and drain water from Boiler into a sink or tub.
3. Fill the Measuring Cup with 17 oz. (500 ml.) distilled vinegar.
4. Carefully pour vinegar into Boiler. Slowly shake or move the unit around to agitate the vinegar.
5. Allow to stand for at least 40 minutes, or more if possible.
6. Drain vinegar from the Boiler.
7. Rinse the Boiler with fresh water, drain and repeat until the vinegar odour dissipates.
8. Loosely replace the Boiler cap and follow the steps under the Proper Storage.

■ TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SOLUTION
The unit fails to heat up. Lighted On/Off Switch DOES NOT illuminate when set to "ON" position.	The unit is not plugged in.	Plug the power cord into an electrical outlet.
	Household circuit breaker/ ground fault interrupter has tripped or blown a fuse.	Reset circuit breaker/ ground fault interrupter, or replace fuse. If you need assistance, contact a licensed electrician.
	The unit is damaged or otherwise in need of repair.	Immediately cease usage and unplug. Contact Consumer Service for further assistance.
The unit is not plugged in.	The boiler is empty.	Refer to the Filling Boiler procedure on page 13
	Mineral build-up in the unit.	Refer to the Mineral Build-up section on page 17 for the cleaning procedure.
	The unit is damaged or otherwise in need of repair.	Immediately cease usage and unplug. Contact Consumer Service for further assistance.
Steam output is weak or intermittent.	The water level in the Boiler is running low.	Refer to the Filling Boiler procedure on Page 13.
	Mineral build-up in the unit.	Refer to the section on Page 17 for the cleaning procedure.

An excessive amount of water in the steam. NOTE: The unit produces moist steam-it is normal for steam to contain some amount of water.	Water condensation in Steam Hose.	Point the nozzle towards the sink, tub or ground and shake while pressing the Steam Button. Continue until excess water is released.
	The boiler has been overfilled.	Drain some water out of the Boiler. Always use the included Measuring Cup to fill the Boiler with the correct amount of water (see Page 13 for details).
	The unit has not heated to full operating temperature.	Wait a long time about 10 minutes when the steam is ready.
Accessories do not stay firmly connected to the Main Nozzle.	Accessories not properly installed.	Check to make sure that accessories are properly connected, per procedures on Pages 9-12.
Floor surfaces appear cloudy or streaky after steaming.	Microfiber Pad is dirty.	Replace Microfiber Pad with a clean one.
	Hard water residue on floor.	Switch to distilled or de-mineralized water.



Motionflow