INSTRUCTION & ATTENTION



Insert the slicer or shredder to the outlet of the housing directly until you hear a "Tick" sound.



Insert the attachment shaft into the hub socket on the main body of juicer.Rotate the attachment anticlockwise until you hear a "Tick" sound. Rotate attachment back and forth if necessary.



Push down on the release button and pull out the blade, in order to change to a new blade.



Use the food chopper to feed the food.



Press and hold the locking button on the side of the hub socket and rotate the attachment housing clockwise at the same time to take it out. The attachment cannot be dismantled if the button is not pressed.



Do not reach in when the machine is running!