 


Wireless Stereo Earphones

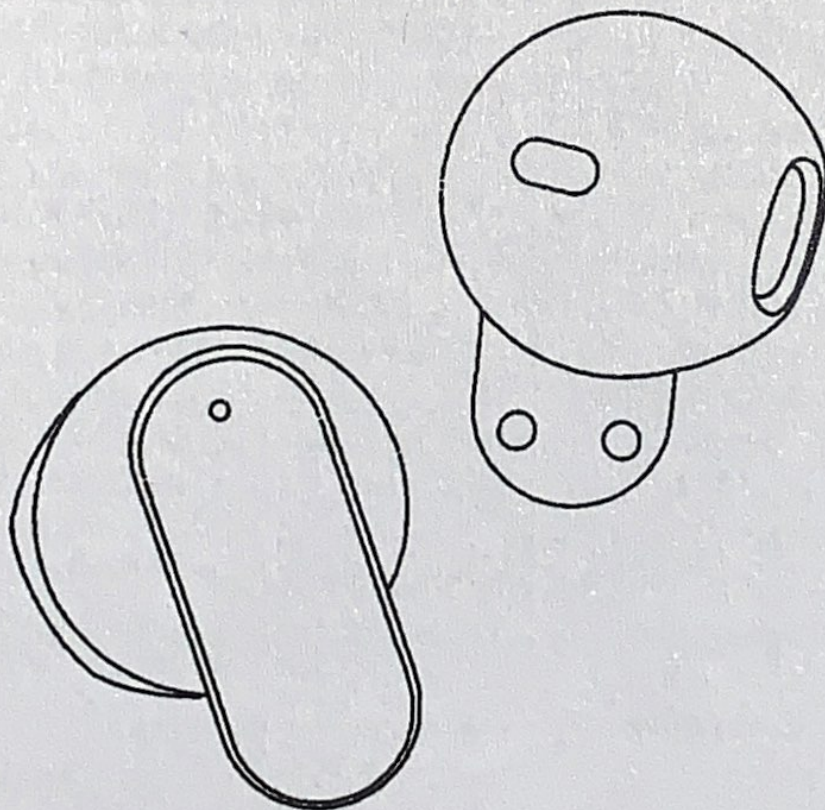

User Manual

 
Product specification

Product name: T18
Bluetooth version: 5.3
Battery input: DC 5V
Earphone battery: 25mAh
Charge case battery: 250mAh
Working time: About 4-5hours
Sensitive: 103±3dB
Frequency: 20-20000Hz
Profile support: HSP/HFP/A2DP/AVRCP

Operation instructions

Binaural Function:

- Touch once: Play/Pause Answer/End a call
- Touch twice on L: Previous song
- Touch twice on R: Next song
- Touch three times on L: Vol -
- Touch three times on R: Vol +
- Touch and hold 2 sec: Reject the call
- Touch and hold 2 sec then release: Wake up voice Assistant

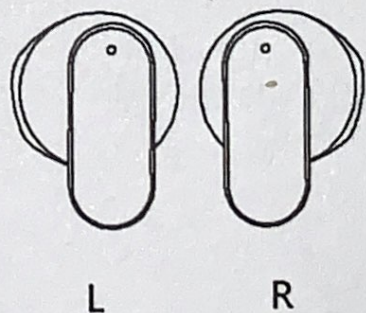

Product specification

Product name: T18

Bluetooth version: 5.3

Battery input: DC 5V

Earphone battery: 25mAh

Charge case battery: 250mAh

Working time: About 4-5hours

Sensitive: 103±3dB

Frequency: 20-20000Hz

Profile support: HSP/HFP/A2DP/AVRCP

Operation instructions

Binaural Function:

Touch once: Play/Pause Answer/End a call

Touch twice on L: Previous song

 
Touch twice on R: Next song

Touch three times on L: Vol -

Touch three times on R: Vol +

Touch and hold 2 sec: Reject the call

Touch and hold 2 sec then release: Wake up voice Assistant

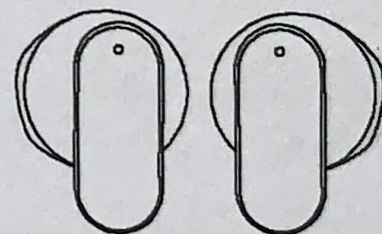

L

R

Pairing for operating

Step1. Open the charging case or long touch earphones to turn them on, they will be automatically paired.

Step2. At this point, open the device's Bluetooth to search for "T18" and then click to connect with device successful, voice prompted " Connected ".

※When the earphones connect to the same device again, open the lid of charge case it will turn on automatically then reconnect with the device, voice prompt " Connected ".

Turn on the earphone

Open the charging case, they will automatically power on, and enter automatic pairing.

Turn off the earphone

Put earphones into the charge case, and close the charge case.

※When the earphone disconnected for 3 minutes, it will automatically turn off.

Calling

When a call is coming, touch once any earphone to answer current call. Long touch for 2 seconds to reject the call. If you want to end the current call, touch once any earphone to stop.

FAQ

A. When the earphones can't be turned on

Check if the earphone has power (after the charge case is connected to the USB, and the earphone is charged in the charge case for more than 1 hour).

B. When the earphones have only one side sound or earphones can't pair successfully

1. Make sure that both earphones are powered and can be turned on normally.
2. Turn on the earphones the earphone will power on voluntarily, then you can connect with the device.

C. When the mobile phone cannot find the device

1. Confirm that the two earphones are turned on.
2. Check if the earphone is connected to other devices.
3. Change a clear area and reconnect it again.

D. When the earphone is stuck or disconnect while talking or playing music

1. The earphone is low on battery.
2. The distance between the mobile phone and the earphone is more than 10 meters.
3. There is large area of signal obstruction between the mobile phone and the earphone, such as a wall.
4. The left and right ears are not paired and synchronized, and need to be shut down and re-paired.

Attention

1. Please don't change the built-in battery by yourself.
2. Please don't put the headset under wet or rainy place.

3. Please don't expose the headset under the blazing sun , event not close fire to avoid battery accident.
4. Please don't disassemble the headset if unprofessional.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Made in China

