


CHARGING:

- ★ Before using as the first time, please charge 8 hours fully to activate the inside rechargeable batteries.
- ★ Please do not charge if the temperature is lower than 0°C or higher than 40°C.
- ★ Please do not charge if it is nearby the sunlight perpendicular incidence or the heat source radiates.
- ★ The standard charging time is 8 hours. In order to avoid mangling the batteries, please don't extend the charging time.
- ★ When it's fully charged, it can be used for more than 90 minutes. During charging, the indicator light shows red.
- ★ Push the switch button to ON, then it can be used.

Parts Identification

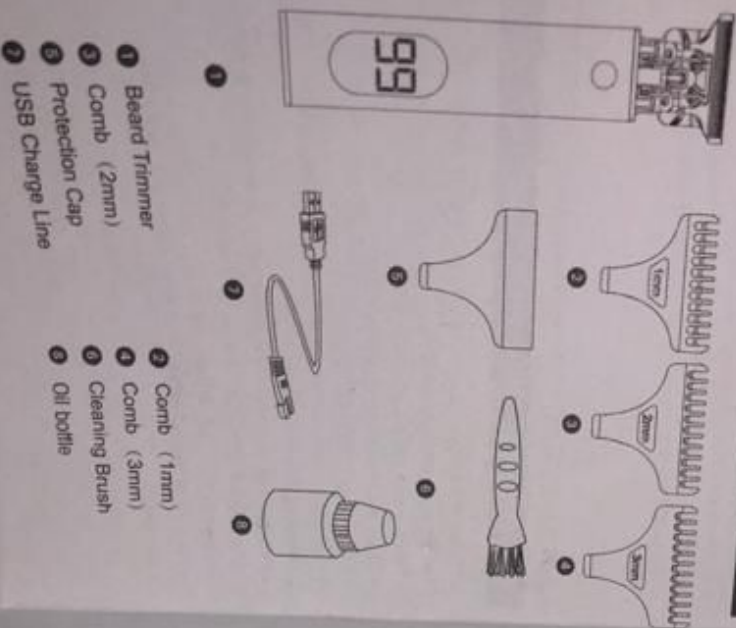


- 1 Beard Trimmer
- 2 Comb (2mm)
- 3 Protection Cap
- 4 USB Charge Line

- 5 Beard Trimmer
- 6 Comb (1mm)
- 7 Comb (3mm)
- 8 Cleaning Brush
- 9 Oil bottle

How to use:

- ★ This hair trimmer can be used in both cord and cordless.
- ★ Put the adaptor connected with the jack of the battery pack which lies at the bottom of the machine, then put the adaptor pins connected with the power.

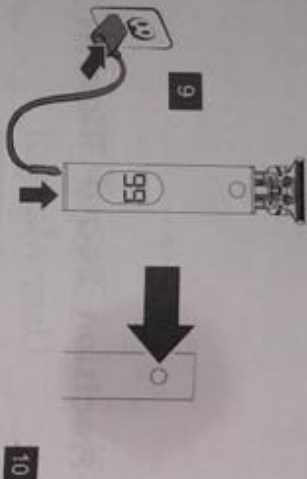

How to use the comb attachment:

1. When load and unload the comb attachment, please ensure the power switch is in OFF position. Attached combs of 1, 2, 3mm combs for different cutting length (picture 11)
2. Push the comb button as picture 12, you can change the comb with other size.



Maintenance of the blades:

- ★ Use the brush, to clean the blade in order to remove hair which may be caught between the blades. Lubricate the space between the stationary and moving blades with 2 or 4 drops of oil after every few uses.



Cleaning under the tap

1. Use the tap water to clean the blade and comb under a warm tap after every use (pic. 15)

