

Rechargeable Lady Shaver / Eyebrow Trimmer /
Nose Trimmer / Beard Trimmer&Body Shaver



Nose Trimmer



Lady Shaver



Eyebrow Trimmer



Beard Trimmer &
Body Shaver

Instruction Manual for
4-in-1 Trimmer Set

Instruction Manual for
4-in-1 Trimmer Set

Read through this entire instruction manual before using the 4-in-1 Trimmer Set. We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials for 1 year from the date of purchase.

HOW TO USE

CHARGING

1. Charging 8 hour
2. Rating Voltage: DC 5V 3W
3. Close power switch. Please insert the plug into the power socket. The indicator with flash on that is charging.

INSTRUCTIONS FOR HEAD REPLACEMENTS

To change attachments, hold the trimmer body with the switch side facing towards you. Turn the attachment and pull off. Position the replacement attachment at the top of the trimmer body, then push down and attach.

USING THE TRIMMER

Remove blade cap. Slide the switch to the "ON" position. Carefully place blade of trimmer to your nostril to cut nose hairs. Use the same procedure for trimming ear, sideburn and eyebrow hairs and beard.

(A) NOSE/EAR TRIMMER

1. The Nose Trimmer is designed to remove unwanted hair from the nose or ear areas.
2. Gently approach the area to be trimmed. Never force the Nose Trimmer into nose or ear cavities as this can result in injury.
3. If you experience any pain or discomfort when using this product STOP using it immediately.
4. Always clean the trimmer after use and use the cap to protect the Nose Trimmer head.

(B) SHAVING FOR LADIES

You can use this attachment for trimming unwanted eyebrow hair, fine facial and ear hair, or any stray body hairs.

(C) EYEBROW TRIMMER

You can use this attachment for trimming unwanted eyebrow hair, fine facial and ear hair, or any stray body hairs.

(D) Beard Trimmer & Body Shaver

1. Slide the power switch up to top of "1" place to turn on the power.
2. Move the razor head on the skin against the main direction of beard growth and make straight and circuitous movements.
3. Achieve best shaving effect on dry clean face, therefore shave before or a period of time after getting washed.
4. Turn off the shaver's power after using it.

CLEANING & MAINTENANCE

Clean your personal trimmer regularly. Be sure switch is turned "OFF" before cleaning.

CLEANING WITH BRUSH

Never expose trimmer body to water. To maintain lubrication, use the enclosed brush to clean the unit. Thoroughly brush and blow out hair clippings from the power handle.

CLEANING WITH WATER

Your trimmer's attachments have rust-resistant, stainless steel cutting blades that permit the cutting attachments to be rinsed under running water if you choose. Do not wash attachments when attached to trimmer. Always keep blade area pointed downward when cleaning. Only after unit has dried completely should the attachment be used.

* Do not use harsh or corrosive cleaners on the unit or its attachments.

* Do not apply pressure or hard objects to attachments.