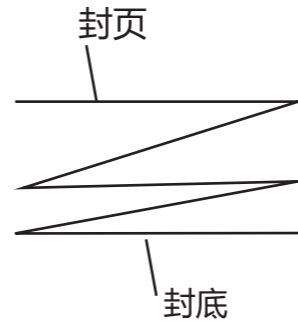 
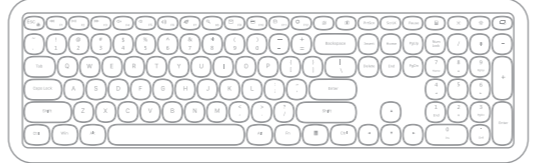 
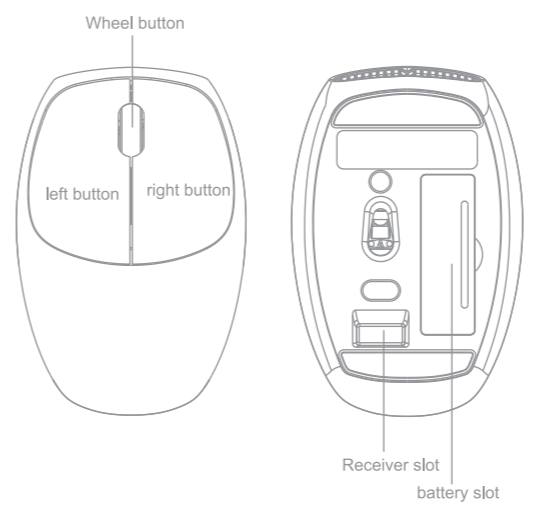 

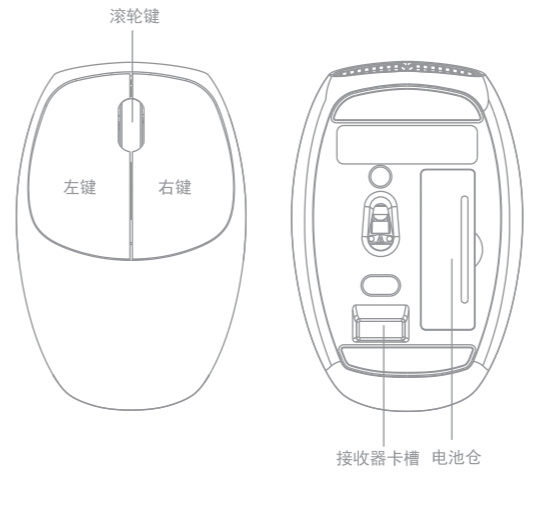 


折叠后成品尺寸：85\*120MM  
 材质：100g书纸10P，单黑 双面印 正反共10P, 5折页



<p style="text-align: center;"><b>mofii®</b></p> <p style="text-align: center;"><b>Wireless keyboard &amp; mouse set</b> 无线键鼠输入设备</p> <p style="text-align: center;">Instruction Manual 使用说明书</p> <p style="text-align: center; font-size: 2em;">666</p>	<p style="text-align: center;"><b>Instruction Manual</b></p> <p>Thank you for selecting Mofii products, in order to let you further understand the use of this wireless keyboard and mouse set, please read this manual carefully before using it.</p> <p><b>1.Package Contents</b></p> <p>Wireless Keyboard .....1PCS              Wireless Mouse.....1PCS              Nano Receiver.....1PCS              Instruction Manual .....1PCS              Alkaline battery ..... 2PCS</p> <p><b>2.Product installing instructions</b></p> <p>1. Take out the USB receiver from the rear side of the mouse and plug it into the computer's USB port.</p> <p>2. Remove the battery compartment cover on the rear side of the mouse, insert 1* AA battery with correct polarity into the battery compartment of the mouse(observe plus/+ and minus-); When connected, the LED on bottom will be lighted up;</p> <p>3. Remove the battery compartment cover on the bottom of the keyboard, insert 1*AAA battery with correct polarity into the battery compartment of the keyboard(observe plus/+ and minus-); When connected, the keyboard can be used properly;</p> <p>4. When carried out or not using this set, pls take out the nano receiver from USB port and insert it into receiver curve of mouse;</p>	<p><b>3.Product description</b> <span style="float: right;">Wireless keyboard</span></p>  <p>Multimedia function key</p> <table border="0"> <tr> <td> Esc</td> <td> Multimedia lock key</td> <td> F4</td> <td> Mute</td> <td> F8</td> <td> Search</td> </tr> <tr> <td> F1</td> <td> Previous Track</td> <td> F5</td> <td> Volume down</td> <td> F9</td> <td> Email</td> </tr> <tr> <td> F2</td> <td> Play/Pause</td> <td> F6</td> <td> Volume up</td> <td> F10</td> <td> favorites</td> </tr> <tr> <td> F3</td> <td> Next Track</td> <td> F7</td> <td> Homepage</td> <td> F11</td> <td> save</td> </tr> <tr> <td colspan="4"></td> <td> F12</td> <td> Set up</td> </tr> </table> <p>    copy paste calculator Lock screen</p> <p>※ Computer screen display brightness - These two items only apply to Win8 systems          ※ Computer screen display brightness +</p> <p>Press FN +ESC two keys at the same time, the default is to switch between multimedia function and F1 to F12 shortcut keys.</p> <p>For example, press F7 to bring up the browser home page. Press FN + Esc at the same time The shortcut function of F7 will pop up.)</p> <p>Indicator light          1 Keypad lock A Caps Lock indicator LED   Low battery indicator / 2.4G connection indicator LED</p>	Esc	Multimedia lock key	F4	Mute	F8	Search	F1	Previous Track	F5	Volume down	F9	Email	F2	Play/Pause	F6	Volume up	F10	favorites	F3	Next Track	F7	Homepage	F11	save					F12	Set up	<p style="text-align: center;">Wireless Mouse</p>  <p>Wheel button left button right button Receiver slot battery slot</p>	<p style="text-align: center; font-size: 2em;">质保卡</p> <table border="1" style="width: 100%;"> <tr> <td>保修期限:</td> <td></td> </tr> <tr> <td>购买日期:</td> <td></td> </tr> <tr> <td>购买地点:</td> <td></td> </tr> <tr> <td>产品序列号:</td> <td></td> </tr> <tr> <td>盖章</td> <td></td> </tr> <tr> <td>日期</td> <td></td> </tr> <tr> <td>产品维修记录</td> <td></td> </tr> <tr> <td>维修情况</td> <td></td> </tr> </table> <p>备注: 请清楚填写各条目, 请勿擅自涂改, 并妥善保管好本质保卡, 以维护您的合法权益。如需服务或有任何疑问, 请与我们联系。</p>	保修期限:		购买日期:		购买地点:		产品序列号:		盖章		日期		产品维修记录		维修情况	
Esc	Multimedia lock key	F4	Mute	F8	Search																																													
F1	Previous Track	F5	Volume down	F9	Email																																													
F2	Play/Pause	F6	Volume up	F10	favorites																																													
F3	Next Track	F7	Homepage	F11	save																																													
				F12	Set up																																													
保修期限:																																																		
购买日期:																																																		
购买地点:																																																		
产品序列号:																																																		
盖章																																																		
日期																																																		
产品维修记录																																																		
维修情况																																																		

<p style="text-align: center; font-size: 2em;">合格证</p> <p style="text-align: center;">深圳摩天手科技有限公司 Shenzhen Mofii Electronics Co.,Ltd 深圳市宝安区沙井街道新沙路正诚丰科技园 ZhengChengFeng Technology Zone, Xinssha Road, ShaJing Town, BaoAn Area, Shenzhen,China. 电话/Tel: 86-755-82507904 400-6788-010 邮箱/E-mail: mofii@mofii.com 网址/website: http://www.mofii.com</p>	<p style="text-align: center;"><b>使用说明书</b></p> <p>感谢您对摩天手产品的支持, 为了使您更进一步的了解此无线键鼠的使用, 请您在使用前认真阅读此说明书!</p> <p><b>1. 包装内物品</b></p> <p>2.4G无线键盘.....1PCS              2.4G无线鼠标.....1PCS              接收器.....1PCS              使用说明书(含质保卡) .....1PCS              电池.....2PCS</p> <p><b>2. 产品安装说明</b></p> <p>1. 从鼠标底部取出USB接收器, 插到电脑的USB端口, 电脑会自动安装驱动程序。</p> <p>2. 打开鼠标底部电池盖, 将一节AA (5号) 电池装入电池仓中 (注意电池的正负极性必须正确) 鼠标通电后会自动对码, 即可正常使用。</p> <p>3. 打开键盘底部电池盖, 将一节AAA (7号) 电池装入电池仓中 (注意电池的正负极性必须正确), 键盘通电后会自动对码, 即可正常使用。</p> <p>4. 外出携带及不使用时, 也可以将USB接收器装入鼠标底部的接收器槽内。</p>	<p><b>3. 产品描述</b> <span style="float: right;">无线键盘</span></p>  <p>多媒体功能键</p> <table border="0"> <tr> <td> Esc</td> <td> 多媒体锁定键</td> <td> F4</td> <td> 静音</td> <td> F8</td> <td> 搜索</td> </tr> <tr> <td> F1</td> <td> 上一曲</td> <td> F5</td> <td> 音量减</td> <td> F10</td> <td> 邮箱</td> </tr> <tr> <td> F2</td> <td> 播放/暂停</td> <td> F6</td> <td> 音量加</td> <td> F11</td> <td> 收藏夹</td> </tr> <tr> <td> F3</td> <td> 下一曲</td> <td> F7</td> <td> 主页</td> <td> F12</td> <td> 设置</td> </tr> </table> <p>    复制 粘贴 计算器 锁屏</p> <p>※ 电脑屏显示亮度 - 此两项仅适用于win8系统          ※ 电脑屏显示亮度 +</p> <p>Fn+  两键同时按: 默认为多媒体功能与F1到F12快捷键之间的切换, 比如 (按F7键, 弹出的是浏览器主页, 此时同时按 Fn+  则弹出F7的快捷功能)</p> <p>右上角指示灯          1 小键盘锁 A 大小写切换指示灯  低电量/2.4G连接指示灯</p>	Esc	多媒体锁定键	F4	静音	F8	搜索	F1	上一曲	F5	音量减	F10	邮箱	F2	播放/暂停	F6	音量加	F11	收藏夹	F3	下一曲	F7	主页	F12	设置	<p style="text-align: center;">无线鼠标</p>  <p>滚轮键 左键 右键 接收器卡槽 电池仓</p>	<p style="text-align: center;">产品中有有害物质含量</p> <table border="1" style="width: 100%;"> <thead> <tr> <th rowspan="2">部件名称</th> <th colspan="5">有害物质</th> </tr> <tr> <th>铅 (Pb)</th> <th>汞 (Hg)</th> <th>镉 (Cd)</th> <th>六价铬 (Cr (VI))</th> <th>多溴联苯 (PBB)</th> </tr> </thead> <tbody> <tr> <td>印刷电路板组件*</td> <td>X</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>外壳及附件</td> <td>X</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> </tbody> </table> <p>本表格依据RoHS/11344的规定编制。      ○: 表示该有害物质在该部件所有均质材料中的含量均在RoHS/26577规定的限量要求以下。      X: 表示该有害物质在该部件某些均质材料中的含量超出RoHS/26577规定的限量要求。      ※: 表示该有害物质至少在该部件的某一均质材料中的含量超出RoHS/26577规定的限量要求。      表中标记“X”的部件, 是因为全球技术法规水平限制而无法检测有害物质替代。      印刷电路板组件*: 包括印刷电路板及其零部件, 电子元器件等      根据产品型号不同, 您所购买的产品可能不含有以上所有部件</p> <p>在中华人民共和国境内销售的电子电气产品必须标识此标志, 标志内的数字代表在正常的使用状态下产品的环保使用期限。</p> <p style="text-align: center;">合格证 QC PASS</p>	部件名称	有害物质					铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	印刷电路板组件*	X	○	○	○	○	外壳及附件	X	○	○	○	○
Esc	多媒体锁定键	F4	静音	F8	搜索																																														
F1	上一曲	F5	音量减	F10	邮箱																																														
F2	播放/暂停	F6	音量加	F11	收藏夹																																														
F3	下一曲	F7	主页	F12	设置																																														
部件名称	有害物质																																																		
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)																																														
印刷电路板组件*	X	○	○	○	○																																														
外壳及附件	X	○	○	○	○																																														