

7 IN 1 Hot Air Styler


Instructions for use




Please read the following instructions carefully to allow you to enjoy your quality product:

SAFETY PRECAUTIONS

1. Before first plugging the unit into your outlet, check that voltage indicated on the rating label corresponds to the voltage of your home.
2. If the power cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
3. When the hair dryer is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hair dryer is switched off.
4. For additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.


5.  **WARNING** –Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
6. Do not use the hair dryer for any other purposes than those described in this instruction manual.
7. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervised.
8. Do not use outdoors.
9. Always unplug the hair dryer from the power supply when not in use and before cleaning.
10. To protect against the risk of electric shock, do not immerse the appliance in water or in any other liquids.
11. Do not spray aerosol products when the hair dryer is operation.
12. Do not leave the hair dryer switched on when you do not use it.
13. Do not use other attachments than which supplied.
14. The air inlet and outlet openings should never be obstructed to prevent from getting too hot.
15. If however, the airflow is inadvertently obstructed during use, the built-in thermal safety cut-off will automatically switch off the appliance. The hair dryer will switch on again automatically after cooling down for a few minutes.
16. Keep your hair away from the immediate vicinity of inlet opening to prevent from being drawn in.
17. Store the appliance in a cool, dry place. Do not use it when there is water in your hands.

PRODUCT DESCRIPTION

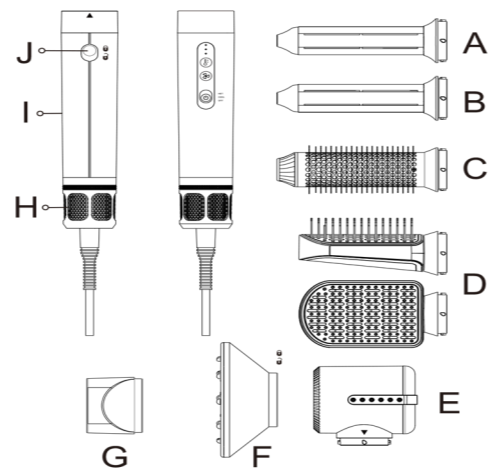

- A. Left curling barrel(30mm)
- B. Right curling barrel(30mm)
- C. Round comb
- D. Straightening comb
- E. Drying head
- F. Diffuse Nozzel
- G. Concentrated Nozzel
- H. Removable vent sheet
- I. Main machine
- J. Attachment lock

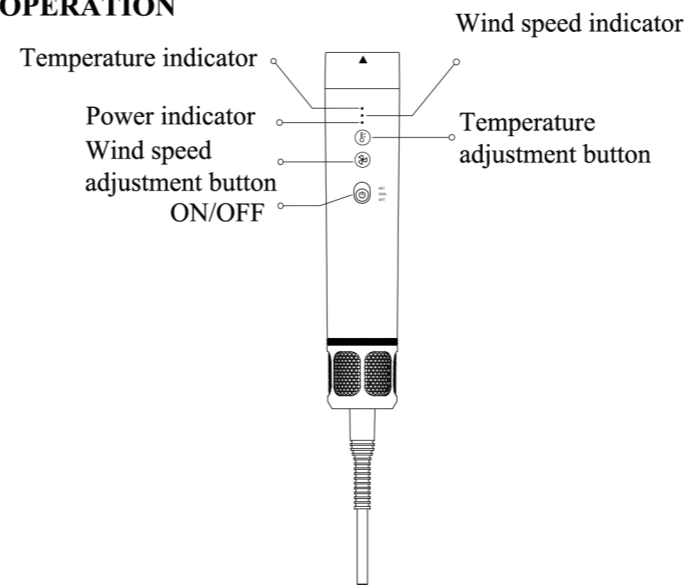

OPERATION



1. Temperature Indicator: green for low temperature, blue for middle temperature, red for high temperature.
2. Wind speed indicator: green for low speed, blue for middle speed, red for high speed.
3. Power/defect indicator: Dual red light for normal working, flashing red light for over heat or internal defect.
4. ON/OFF: 3 gear (OFF-COOL-HOT). When the button is on COOL gear, only wind speed can be adjusted. When on HOT gear, temperature and wind speed can be both adjusted.
5. After plug in the machine, press the Wind speed adjustment button 3s to start self-cleaning progress. Self-cleaning progress will auto stop after running 8s. The protecting vent sheet can be taken off for cleaning in the mean time.

HOW TO USE THE ATTACHMENTS

Check the voltage on the handle of the appliance if corresponds to your local power supply.

1. Turn the lock from  to  replace/remove the attachments.
2. Use the drying head after washing hair.
3. Use the Concentrated nozzle to dry and get your hair straighten.
4. Use the diffuse nozzle for curly hair styles.
5. Use the Straightening comb smoothing hair.
6. To create beautiful side waves, place hair into the round comb firmly from tip to bottom.
7. To create spiral curls, place hair on the curling barrels and move gently.

Using tips:

1. For better styling effect, it is suggested to use High temperature + High speed wind with curling barrels for spiral curls.
2. Never touch the curling barrels during styling, in case of getting hurt, as the barrels will be very hot.

Never wrap the power cord around the appliance, as this can result in damage. Check the power cord and the appliance regularly for visible damage.

PRODUCT CLEANING

1. The protecting vent sheet of the holder can be taken off for cleaning.
2. Use a dry cloth to clean the machine.
3. The attachment can be cleaned with a moist cloth or rinsed under a running water. Remove the attachments from the machine before cleaning. Make sure the attachments are dry before using or storing.
4. Never rinse the machine with water.

WARRANTY INFORMATION

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year (Germany: 2 years), starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliance

STORAGE SAFETY

When not in use “unplug it.”

Allow the appliance to cool and store it in a dry location. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. If the supply cord of this appliance becomes damaged the appliance must be replaced by returning to the retailer from which the product was purchased or a similarly qualified person in order to avoid a hazard.

Technical data

Power supply: AC110 V ~60 HZ AC220 -240V ~ 50/ 60 HZ

Power: 1400W