 


# USER MANUAL



- Long press 'O' O for 2 seconds with all lights on, and it will be in standby mode.
- In standby mode, short press "" To activate sucking function; Short press "" an change the frequency. The indicator light will flash every time when it switches to a different frequency (10-mode frequencies in total)
- 3. Long press 'O' (1) for 2 seconds to switch off.
- The white light flashes while charging and will be on when the charging is completed.

### SPECIFICATION

 Material:
 Silicone+ ABS

 Size:
 145x42.5x52mm

 Mode:
 10 Mode suction

 Charge time:
 90-120Mins

 Using time:
 70-90Mins

 Waterproof:
 IPXS

# PRODUCT DESCRIPTION

- Clitoral stimulator with light suction and vibration to stimulate all of those sensitive nerve endings.
- Combining sweet suction with pulsating vibrations, this clitoral vibe heralds a new age of female orgasms.

#### SAFETY

- 1. Don't share it with others for your health.
- 2. Stop using it if you feel uncomfortable.
- Stop using it if you find the head of the product is not smooth enough or broken.
- 4 Keep it from children's reach.

# **CLEANING AND STORAGE**

- 1. Please clean it thoroughly before and after using.
- Warm water and medicinal alcohol can be used to clean this product, but warm water is highly recommended.
- 3. Naturally air dry and avoid direct sunlight.
- 4. Store it in a dust-free place.

### ATTENTION

- 1. Please charge it before using.
- Please use good quality personal lubricant. Something (Massage oil, hand cream or cleaning solution etc.) containing hazardous substances cannot be used as lubricant.
- 3. Once the battery has been fully charged, unplug the toy's DC plug.