 


INSTRUCTION MANUAL



Java SL 4
105845/105846



<p>1.</p>	<p>2.</p>	<p>3.</p>
<p>4.</p> <p>INPUT: AC220-240V~50Hz</p>	<p>5.</p>	<p>6.</p> <p>Warning: When replacing a halogen lamp, wait for it to cool, for a minimum of 5 minutes</p>
<p>7.</p>	<p>Overall Sizes:</p> <p>Φ50CM</p> <p>21CM</p> <p>Φ15CM</p>	