 


*Focus on the technology of blending and juicing*

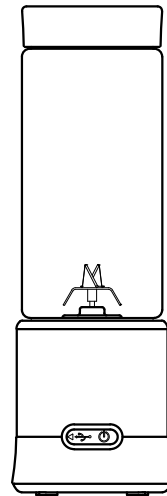

**GN-A02**

Portable rechargeable blender

Please read this instruction manual before using

*Focus on the technology of blending and juicing*

# Using safety



## WARNING

*It will be dangerous if this instruction manual isn't followed*

 



- Please read this manual carefully before using machine. Please keep the manual safe for future reference.
- Please follow the important safety warnings below. Failure to follow the safety warnings may result in injury and/or harm to you and other people. Always follow the information in this instruction manual.
- ⊘ Do not remove the jug cover when the machine is working. NEVER touch the rotating parts or blades at anytime.
- ⊘ If the machine is blocked by food when blending, turn off the machine immediately and check to see if anything hard like seeds or stones are causing the blockage. Remove and then restart the machine. Always turn off the machine before checking.
- ⊘ Do not allow children to operate this machine. Store the machine out of the reach of children.
- ⓘ The volume of food can't be over 2/3 of the jug. Make sure the lid cover is fully closed before operating the machine.
- ⓘ Do not use this machine for grinding hard dry ingredients like nuts, coffee, bean etc. This will damage the machine and reduce its operational life.
- ⓘ Consume the food/drink immediately after blending. Do not store for more than 6 hours after blending to prevent rotting food and drink.

*\*Please be careful when cleaning. The blades are very sharp.*



GN-A02
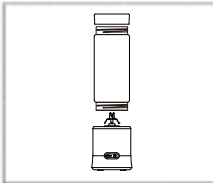
## QUESTION

1.PARTS NAME	2.OPERATION	3.CHARGING	4.FAULT
			
-01-	-02-	-03-	-04-

Product name: Portable recharging blender

Model: GN-A02 Valume:450ml

Battery specification: 2500mAh X 2 7.4V<sup>===</sup>

 
Rated current: 17A Rated voltage: 7.4V<sup>===</sup>

Motor specification: 7.4V<sup>===</sup> Rated power: 126W

Motor rotating speed: 16500rpm/min ± 15%



# 1.PARTS NAME

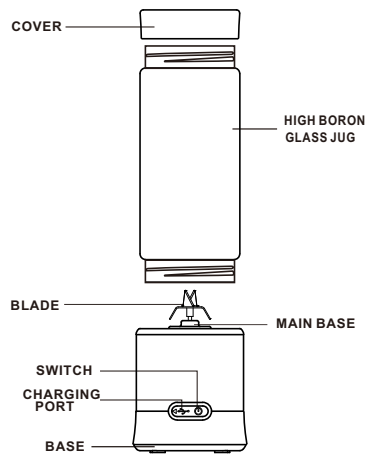

## Indicating light explanation

- 1. *Blending function: Press the switch and hold for 2 seconds. The blender will start automatically and the white light will be on. After 45 seconds the machine will stop automatically.*
- 2. *Crush ice function: Press the switch twice continuously. The blender will start automatically and the white light will be on. After 45 seconds the machine will stop automatically.*
- 3. *When connected to a USB charging lead, the red light will be on. When the machine is fully charged and ready, the white light will be on.*
- 1. *When the jug is separated from the base or not installed correctly, the blender will not work and the red light will flash 5 times. (indicating that it will not work.)*
- 2. *When it is charging, the machine will not work no matter how many you press the switch button.*
- 3. *If any food overloads or blocks the blender from working during operation. It will stop automatically and the red and white lights will flash alternately.*
- 4. *The red light will flash 10 times when the battery has no power.*
- 5. *When the ingredients and liquid line is below the height of the blades, the machine will stop after 5 seconds for protection and the red light flashes 3 times.*

### IMPORTANT!

1. There will be a tolerance for the glass bottle due to special process, if your glass bottle leak or screw loose, please unscrew the bottle and reverse installation.
2. It is best to charge the machine for 3-5 hours.
3. The best blending performance is 100g food+200g liquid ( $\pm 10\%$ ).

# 2.OPERATION

## 1.Blending function:



1. Cut food to several pieces, remove skin and nut. (around 1.5-2.0cm)



2. Pour water and milk into the container.



3. Incline the machine to the angle of 45°, and then start the machine by pressing the switch for 2 seconds.



4. Upside down the blender and shake the bottle gently to make it more delicious.

## 2. OPERATION

### NEW function: *Crush ice*



1. Ready 40-45g ice cube  
(around 1.5-2.5cm  
length/width/height)

2. Put the ice cube into  
the container.

3. Incline the machine to the  
angle of 45°, and then start  
the machine by pressing  
the switch twice continuously.

4. Upside down the blender  
and shake the bottle gently  
for better blending.

### \*EASY INSTALLATION

1. Please check that both the lid and base have the silicon rings in place;
2. Put the jug on the main base, and then turn clockwise fully to lock. (Press the switch button to operate with white light).

\*The photo is just for reference, product models may vary.



03

## 3. CHARGING

Battery capacity is 2500mAh x2, please use USB lead for charging connected to an adapter(2A or below 2A), power bank, USB port of computer or car charging port.

### CHARGING PHOTO:



1. Please insert "Micro B side" of USB(Android line, small port) into the charging port.

2. Please insert "USB side"(bigger side of Android line) into adapter, power bank, USB port of computer and etc.

### NOTICE:

The red light indicates the machine is charging. When charging is completed, the light will turn white  
The machine will not work during charging.

04

## 4.FAULT

No	Fault phenomenon	Fault analysis	Solution
1	<i>The red light flashes 5 times but the machine doesn't work.</i>	<i>The container is not correctly installed on the base.</i>	<i>Please re-install again.</i>
2	<i>The machine doesn't work and the red light is flashes 10 times.</i>	<i>Battery quantity is not enough or no power</i>	<i>Please charge the machine for 3-5 hours.</i>
3	<i>The machine stops during operation.</i>	<i>Too little food or too much.Either will cause the machine to stop for protection.</i>	<i>Please add or reduce some food and re-start the machine.</i>
4	<i>The red and white light will flash 10 times during operation.</i>	<i>The motor has locked.</i>	<i>If there isn't any food blockage, please re-start again.</i>
5	<i>Leaking water</i>	<i>The silicone part is not installed correctly.</i>	<i>Please re-install silicone part.</i>
6	<i>There is some smoke when using.</i>	<i>Long time using, the machine is over heated and protected automatically.</i>	<i>Please cool down the machine for 30-60 mins and then start again.</i>

### WARM REMIND:

- 1.The machine should only be used when water,milk or other liquids are inside the container at a height above and covering the blades.If food does not blend,add more liquid.*
- 2.Do not wash the base of the machine with water.Do not submerge the base in water.If water is allowed into the switch or charging port,the machine will be damaged.*