


Quick installation guide

Model:U8

1. Panel Layout

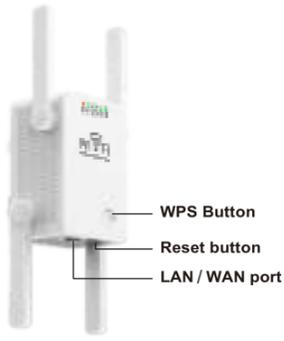

LED Explanation

Name	Status	Indication
Power	On	The 2.4GHz wireless band is enabled.
Power	Off	The 2.4GHz wireless band is disabled.
WPS	Blinking Blue	WPS connection is in process. This may take up to 2 minutes.
WPS	Blinking Green	The extender is connected to the Internet.
WPS	Solid orange	The U8 router is connected to the Host router, but is too far away from the Host router.
WPS	Solid green	The U8 router is connected to the router, and is in a good location.
LAN	Blinking green	One powered-on device is connected to the router's LAN port.
LAN	Off	No powered-on device is connected to the router's LAN port.

Button and port Explanation


Item	Description
Reset Button	Press and hold this button for more than 5 seconds to reset the router to its factory default settings.
WPS Button	Press this button to enable the WPS function.
LAN/WAN Port	For connecting to a DSL/Cable modem, or an Ethernet jack.

WiFi Repeater mode

In this mode, the router boosts the existing wireless coverage in your home.

1 Connect Your Router

Plug the extender into an electrical outlet near your host router, and then wait until the LED is on and then off.

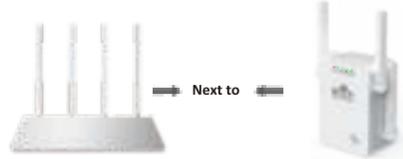

2 Configure repeater mode

Method ONE Using WPS (Wi-Fi Protected Setup)

Using WPS is an easier way to extend your host network. You are recommended to use this method if your host router has the WPS button. The button might look like one of these: [Icons]. If not, please refer to Method Two.

Connect



Relocate

1. Plug the extender into an electrical outlet between your router (Host Network) and the Wi-Fi "dead" zone. The location you choose must be within the range of your existing host network.

2. Wait until the LED is lit and solid Green. If not, relocate it closer to the router to achieve a good (or better) signal quality.




Enjoy! Extended Network Names: Host Router's network name with _EXT at the end
Extended networks Password: Share the same passwords as those of your host networks

Method TWO Using a Web Browser

For Mobile phone users

1. Find the SSID (Network Name) printed on the label of the U8 router.
2. Connect your Mobile phone to the U8 router's network

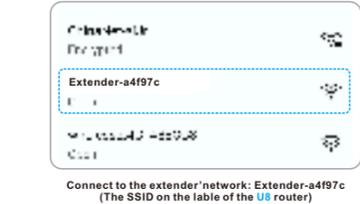


3 Login

1. Launch a web browser and type http://192.168.11.1 in the address field. (If the phone is connected to the repeater for the first time, The phone will automatically pop up the login page)

2. Use admin (all lowercase) for Password to login.




4 Mode selection

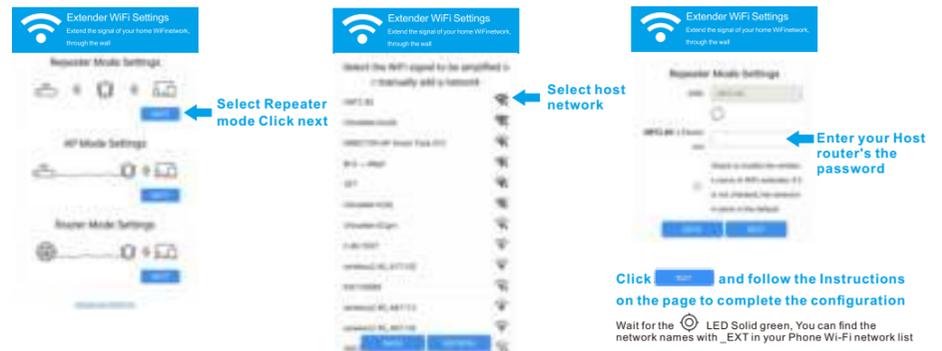

Relocate

1. Plug the extender into an electrical outlet between your router (Host Network) and the Wi-Fi "dead" zone. The location you choose must be within the range of your existing host network.

2. Wait until the LED is lit and solid Green. If not, relocate it closer to the router to achieve a good (or better) signal quality.

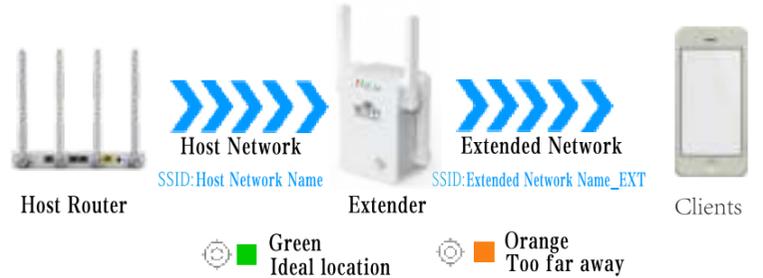

Enjoy! Extended Network Names: Host Router's network name with _EXT at the end, but may have different SSIDs (network names) if you have customized them during the configuration.
Extended networks Password: Share the same passwords as those of your host networks.

Frequently Asked Questions(FAQ)

Q1. What can I do if the login window does not appear?

- If the computer is set to a static or fixed IP address, change the setting to obtain an IP address automatically.
- Verify if http://192.168.11.1 is correctly entered in the web browser.
- Make sure your computer is connected to the Mini Router's network.
- Use another web browser and try again.
- Reboot your router and try again.
- Disable the network adapter used currently and then enable it again.

Q2. What can I do if I cannot access the Internet?

- Check if the internet is working properly by connecting a computer directly to the modem via Ethernet cable. If not, connect your internet provider.
- Reboot your router and try again.

Q3. How do I restore the router to its factory default setting?

- While the router is powered on, press and hold the reset button on the rear panel of the router for approximately 5 seconds.

Q4. Why set the repeater mode is unsuccessfully?


- You may have typed in the router's wireless password incorrectly, please log in and check the wireless password.
- The Mini router may be out of range, please move it closer to the router.
- Please reset the Mini Router and go through the configuration again.

A. If you need reset the extender. You need press and hold the reset button inside the tiny hole for 10 seconds.

AP mode

In this mode, the router transforms your existing wired network to a wireless.

1. Connect Your Router

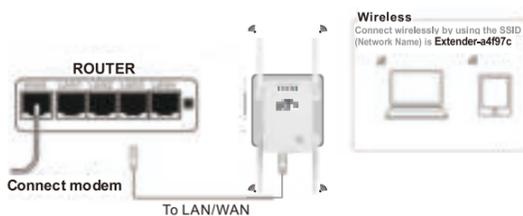


2. Connect to the U8 router

For Mobile phone users
1. Find the SSID (Network Name) printed on the label of the U8 router.
2. Connect your Mobile phone to the U8 router's network




3. Login

1. Launch a web browser and type http://192.168.11.1 in the address field. (If the phone is connected to the repeater for the first time, The phone will automatically pop up the login page)
2. Use admin (all lowercase) for Password to log in.

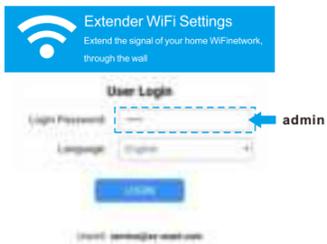

4. Mode selection

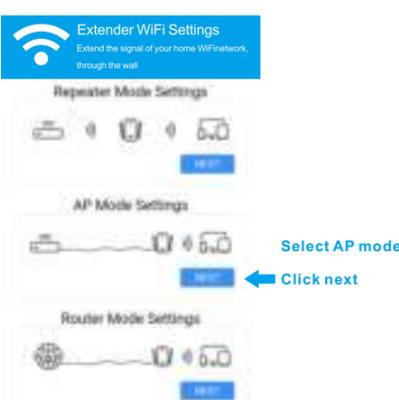

Click [Next] and follow the prompts on the page to complete the AP mode configuration

Enjoy! Connect to the Extended networks (default SSID and password) and enjoy internet, but may have different network name and password, if you have customized them during the configuration.

Frequently Asked Questions(FAQ)

Q1. What can I do if the login window does not appear?

- If the computer is set to a static or fixed IP address, change the setting to obtain an IP address automatically.
- Verify if http://192.168.11.1 is correctly entered in the web browser.
- Make sure your computer is connected to the Mini Router's network.
- Use another web browser and try again.
- Reboot your router and try again.
- Disable the network adapter used currently and then enable it again.

Q2. What can I do if I cannot access the Internet?

- Check if the internet is working properly by connecting a computer directly to the modem via Ethernet cable. If not, connect your internet provider.
- Reboot your router and try again.

Q3. How do I restore the router to its factory default setting?

- While the router is powered on, press and hold the reset button on the rear panel of the router for approximately 5 seconds.

Q4. Why set the repeater mode is unsuccessfully?


- You may have typed in the router's wireless password incorrectly, please log in and check the wireless password.
- The Mini router may be out of range, please move it closer to the router.
- Please reset the Mini Router and go through the configuration again.

A. If you need reset the extender. You need press and hold the reset button inside the tiny hole for 10 seconds.

Router mode


1. Connect Your Router

If your Internet connection is through a DSL/Cable modem, follow steps 1, 2 and 4 to complete the hardware connections.
If your Internet connection is through an Ethernet cable from the wall, follow steps 3 and 4 to complete the hardware connections.

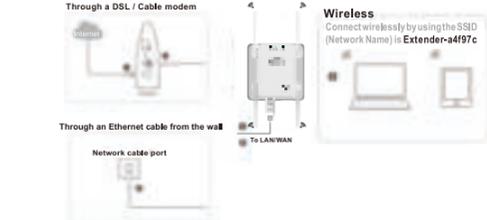

2. Connect to the U8 router

For Mobile phone users
1. Find the SSID (Network Name) printed on the label of the U8 router.
2. Connect your Mobile phone to the U8 router's network

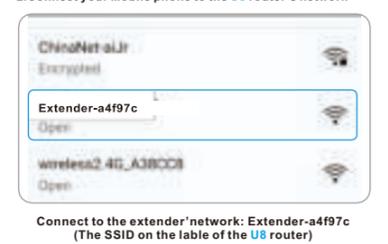

3. Login

1. Launch a web browser and type http://192.168.11.1 in the address field. (If the phone is connected to the repeater for the first time, The phone will automatically pop up the login page)
2. Use admin (all lowercase) for Password to log in.




4. Mode selection



5. Set up Your Internet Connection
You can modify the settings according to the service information provided by your ISP.




If you choose Static IP, enter the information provided by your ISP in the corresponding fields.

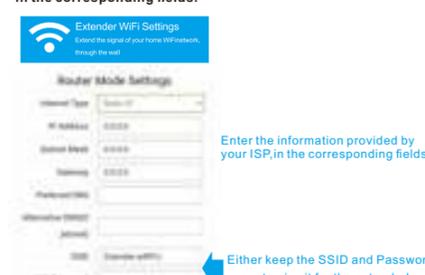

Click [Next] and follow the prompts on the page to complete the Router mode configuration

If you choose PPPoE, enter the username and password provided by your ISP. PPPoE users usually have DSL cable modems.

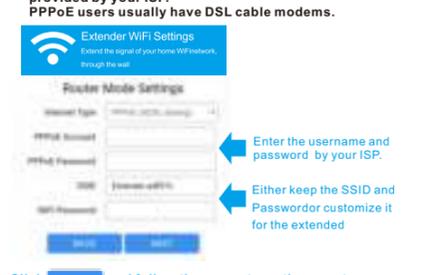

Click [Next] and follow the prompts on the page to complete the Router mode configuration
Enjoy! Connect to the Extended networks (default SSID and password) and enjoy internet, but may have different network name and password, if you have customized them during the configuration.