


Important Instructions:

- 1. SAVE THIS INSTRUCTION- This manual contains important safety and operating instructions for the product.
- 2. Before using the product, read all instructions and cautionary markings on Vehicle Battery Adapters.
- 3. For the best audio quality, please turn the volume of your phone and FM transmitter into the max level, and then adjust the car volume.
- 4. If the noise is too loud, please try another blank FM station.
- 5. The signal of any FM transmitter sometimes can be interfered by the surrounded radio or the similar frequency signal thus cause noise, this is normal.
- 6. To prevent your car battery from being drained, please unplug the product after you turn off
- 7. Do not expose the product to rain, moisture, or snow
- 8. Do not disassemble the product, incorrect reassembly may result in a risk of electric shock
- 9. To reduce risk of electric shock, unplug the product before attempting any maintenance. Turning off controls will not reduce this risk.

Features:

- 1. PD and QC3.0 port for fast charge, PD output 5V 3A/ 9V 2.22A/ 12V 1.67A max, QC3.0 output 5V 3A/ 9V 2A/12V 1.5A max.
- 2. 9 light color modes: Red, Blue, Green, Yellow, Purple, Cvan, White, Rainbow, Breathing rainbow, light switch design of the outer circle creates new atmosphere to the car interior space.
- 3. Activate phone voice control like Siri, Bixby, Google Assistant, etc.
- 4. Transmit the music/navigation of your Bluetooth enabled phone to car stereo via FM signal.
- 5. Bluetooth V5.0, auto connect last device.
- 6. Answer hands-free phone calls during driving.
- 7. Transmit the music from U disk/micro SD card (Up to 32G) to car stereo via FM signal.
- 8. Play lossless music from U disk/micro SD card.
- 9. Display car battery voltage and FM frequency.

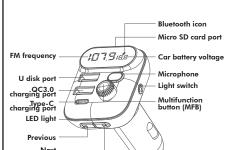

Operations:


Function	Operation
Power On/Off	Plug/Unplug the transmitter into/ out from your car charger port
Frequency Up/Down	Long press the "MFB", then rotate the "MFB" or press the "Next"/"Previous" button to add/reduce frequency
Play/Pause/Answer/ Hang up	Press the "MFB" once
Reject a call	Long press the "MFB" for about 2 seconds
Redial the last number	Press the "MFB" twice
Volume Up/Down	Rotate the "MFB"
Next/Previous Song	Press the "Next"/"Previous" button once
Switch music source	Long press the "Next" button to switch from Bluetooth mode or U disk/micro SD card mode music to switch to Bluetooth mode. After switching modes press the "MFB" once to start the music.
Activate voice control	Long press the "Previous" button in Bluetooth mode.

Instruction:

Bluetooth mode: Step 1~5;

U disk/micro SD card mode: Step 1, 3, 4, 6

1. Plug the transmitter into your car charger port, the display flashes means it is in pairing mode.

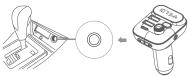

2. Turn on the Bluetooth function of your phone. search for Bluetooth devices and connect iMoshion FMT1.



iMoshion FMT1

If pairing is successful, the display will stop flash.

Auto-connect: The product will auto-connect the last connected phone when turned on next time. (Please turn on the Bluetooth function of your phone before turn on the product.)

3. Adjust the car FM radio to a blank frequency from 87.5MHz to 108.0MHz, for example: 88.1.



4. Adjust the product into the same frequency with the car FM radio. (Long press the "MFB" button, then rotate the "MFB" or press the "Previous"/"Next" button to add/reduce



5. Open the music player/navigation of your phone, now it can transmit the phone calls. music or navigation to car stereo system. Tip: Turn the phone volume and transmitter volume into max level first, then tune your car volume to appropriate level, to get the best sound quality





6. You can also insert the U disk/micro SD card into the product, it will automatically detect and play the MP3/WMA/FLAC format music.



- 1. For the best audio quality, please turn the volume of your phone and product into the max level, and then tune your car volume to appropriate level.
- 2. The signal of any FM transmitter sometimes may be interfered by the surrounded radio or the similar frequency signal thus cause noise, this is normal.
- 3. If the noise is too loud, please try another blank FM station.
- 4. To prevent your car battery from being drained, please unplug the product after you turn off the car.

CORRECT DISPOSAL OF THIS PRODUCT

(Waste Electrical & Electronic Equipment) This marking, shown on the product or its literature, indicates that it should not be

disposed with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources. Household user should contact either the retailer where they purchased this product or their local government office for details of where and how they can take this item for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.