联想LP75 说明书 尺寸: 67x110mm 材质: 105g 铜版纸 风琴折





产品操作说明 方式二: 用手指长按耳机功能触摸键3秒即可开机。 方式一: 将耳机放回充电仓,关上充电仓上盖,耳机关机。 方式二: 左右耳机开机状态下,长按耳机功能触模键5秒后,耳机关机。 ■ 耳机操作 步骤二:打开智能设备的蓝牙列表,搜索"联想thinkplus-LP75"并 □ 音量+: 単击右耳机(R)功能键

电话免提 ■ 耳机操作 接听:双击任意耳机功能键 ------- 挂断:双击任意耳机功能键 上 担接:长按任意耳机功能键2秒松开 (激活语音助手(智能设备支持语音助手))



恢复出厂设置

单个耳机开机后未与手机配对状态下,连续单击耳机功能键5次清除配 对信息后关机。

产品中有害物质名称及含量

产品中有害物质的名称及含量

部件名称	有害物质							
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)		
印刷电路组件	0	0	0	0	0	0		
外壳等小结构件	0	0	0	0	0	0		

本表格依据SJ/T 11364的规定编制。

(1) : 表示该有害物质在该部件所有均质材料中的含量均在

- GB/T 26572 规定的限量要求以下。 ×:表示该有害物质至少在该部件的某一均质材料中的含量超出
- B/T 26572 规定的限量要求。 表单标记"X"的部件,皆因全球技术发展水平限制而无法实现有害

印刷电路板组件*:包括印刷电路板及其零部件,电子元器件等, 根据产品型号不同,您所购买的产品可能不会含有以上所有部件



在中华人民共和国境内销售的电子电气产品必须标识此 标志,标志内的数字代表在正常的使用状态下的产品的 环保使用期限。

保修声明

免责声明

本使用手册没有任何形式的担保、立场表达或其他暗示, 本使用手册所 提到的产品、规格及信息仅供参考,内容亦会随时更新于网页,恕不另 行通知。

就本文件附随的产品做如下保证:如产品在您购买日起十二(12)个月 ("保修期")内,在正常使用情况下因质量瑕疵发生损坏,能修理的 免费修理;经厂家确认无法修理的,免费更换;修理或更换后的产品 在剩余保修期(最短不少于30天)内继续享有保修。购买日以销售

发票日期为准; 如无法确定购买目,则保修期自产品生产日期起按十三 (13) 个月计算。

如申请保修,请先致电产品服务热线,并按我们指示的方式执行。 申请保修时,您需要提供准确、完整和清晰填写的有效销售发票。

以上保证不适用于下列情况: 1.超过三包有效期的;

2.涂改保修卡、产品编码与产品本体不符;

3.因误用、滥用或不适当的运输、使用、维护或保管而导致的故 隨武揚坏:

4.因不可抗力(如地震、战争、火灾等)或意外导致的故障或损

5.拉链、塔扣因受力过大而损坏;

6.因承载过重造成的脱线或撕裂: 7.任何因尖锐物体造成的损坏;

8.有烧损或水浸迹象的产品:

9. 因擅自拆改导致的损坏:

10.产品正常使用过程中发生的老化、脱色、磨损、破裂和其他损耗。 11.如产品原有标识标签被更改或损毁,本保证将失效。

产品及随附物料的齐备和外观完好不属于保证范围,您应在接收产品时

当场检验并对任何不符提出异议。 以上保证是我们就产品做出的全部保证,且仅在中国大陆地区境内适用

、本文件的任何内容均不影响根据法律规定不能排除或限制的消费者权

服务热线, 400-812-0102

售后邮箱: frank@szeysan.cn

"Lenovo", "thinkplus" 是联想集团所属企业的商标,提及的 其他公司、产品和服务名称可能是其他公司的商标。

product, Continue to enjoy the warranty during the remaining warranty period (the shortest not less than 30 days). Purchase date

by sale The ticket date shall prevail; if the purchase date cannot be determined, the warranty period shall be 13 Months calculation.

If you apply for a warranty, please call the product service hotline

first and execute it in the manner instructed by us.

版权所有◎2022联想集团所属企业和其许可方保留所有权利。

thinkplus

Lenovo thinkplus LivePods LP75



Manual Please read all instructions carefully Earphone

Usage Instruction

(1) Don't attempt to disassemble the unit and change any part, (2) Don't expose the unit to liquid, moisture or humidity, since it is

not a waterproof product.

(3) Disconnect the unit with your BT device and move it to the safe area if the liquid get inside the unit.

(4) Don't assemble or disassemble the unit to avoid electric shock, f there is water on your hands.

of the unit in fire as it will result in an explosion.

(6) Don't place the unit in an electromagnetic interference nvironment to avoid malfunction.

Packing list



Product schematic description



Product specification

BT Version: V5.3 Earphone battery: 40mAh Playing time : about 6 hours (Earphone)

Charging case specification

 
Case Battery: 300mAh Rated input: 5V === 250mA

(All technical information is subject to actual performance

耳机电量不足,耳机指示灯呈白灯快闪。

To Charge the case

Connect the Type-C cable to the 5V power adaptor, and another



Input: 5V==35m4 (Earphone) (LED Indicator Status)

 Power on: Both sides LED Indicator keep in green color Power off: Both sides LED Indicator flash in white color for Two earphone get paired each other:
Before two earphone get paired, the indicator light flashe:
Slowly alternately between white and green. After two earphone get paired, the master earphone indicator light sub earphone indicator light goes off.

└── 上一曲: 三击左耳机(L)功能键

Operating instruction

1. Turn on:

Method 1: Open the case, the earphone will turn on automatically Method 2: Long touch the MF button of the earphone for 3s to turn

2. Turn off

Method 1: Put the earphones into the charging case directly and Close the case to turn off.

Method 2: Long touch the MF button of the earphones for 5s to turn off the earphones.

3.Pairing to the BT device

Step 1: Open the case, the earphone will turn on automatically; Step 2: Activate the BT function on your mobile device, search and select the "联想thinkplus-LP75" from the list of available BT devices. (Single earphone is workable too)



Touch control button operating

(Music playing mode) Left/Right earphone operating



(Hands free function)

Left/Right earphone operating



Reject Incoming Call: Press the MF button of any earph for 2 seconds and release

Active the voice assistant function (the smart devices support voice assistant function)



Reset

When you turn on the earphone, make sure it does not connect to any BT device, and click the MF button 5 times to clear the pairing

Name and content of hazardous substances in products

ivallie alid Co	Jiiteiit (JI IIazi	ar dou:	s substa	nces in p	n Oddects		
Part Name	Harmful materials							
	Pb	Hg	Cd	Cr(VI)	PBB	PBDE		
Printed circuit assembly	0	0	0	0	0	0		
Small structural parts such as shell	0	0	0	0	0	0		
This form is con	onilod ir	20001	danco	with C I/	T 11764			

ogeneous materials of the part is in Below the limit

The parts marked with "X" on the form are all harmful due to the limitations of global technological development. Sub-

oduct model, the product you purchased may not contain all t



Electronic and electrical products sold in the People's Republic of China must mark this Logo, the number in the logo represents the product under normal use

Warranty statement

This user manual does not have any form of quarantee, position expression or other implication. The mentioned products, specifications and information are for reference only, and the content will also be updated on the webpage at any time, without additional line notification. Warranty statement:

The product attached to this document is guaranteed as follows: the product is twelve (12) months from the date of purchase ("Warranty Period"), under normal conditions of use due to qualit defects damaged can be renaired free; if the manufact

When applying for warranty, you need to provide an accurate, complete and clearly filled out valid sales invoice. The above guarantee does not apply to the following situations:

1. The validity period of the three packs is exceeded; 2. Alteration of the warranty card and product code does not mat tne product body; 3. Causes caused by misuse, abuse or improper transportation, use, maintenance or storageimpaired or damaged; 4. Failure or damage caused by force majeure (such as earthquake,

war, irie, etc.) or actionent bad, 5. The zipper and buckle are damaged due to excessive force; 5. Disconnection or tearing caused by excessive load; 7. Any damage caused by sharp objects; 5. Products with signs of burning or water immersion; O. Aging, discoloration, abrasion, rupture and other losses occurred during normal use of the product.

I. If the original identification label of the product is changed or

damaged, this guarantee will become invalid. The completeness and appearance of the product and accompanying materials are not within the scope of the guarantee. You should Check on the spot and raise objections to any discrepancies. The above guarantees are all guarantees we make regarding the

products, and are only applicable in mainland China.

Nothing in this document affects consumer rights that cannot be excluded or restricted under the law profit.

After-sales service Emal: frank@szevsan.cn

"Lenovo", "thinkplus" belongs to affiliated enterprises of Lenovo

enovo Group or another company. opyright@2022 Lenovo Group and its licensors. All rights reserved