User's Manual



Product Parameters

Product name: Perfect Cabin Masturbation Cup Product model: VI-002 Product Size: 270.4mm*94mm Charging time: About 120 Minutes Duration of Endurance: About 60 Minutes

Product Material: ABS+TPE+Silica Gel

Product Color: Silver/Red/Blue (Optional)

Rated Current: 600MA Nominal Voltage: 3.7V Product Weight: About 780g (Dicluding Packs) Battery Capacity: 1100MAH Operating Noise: About 60dBoM*

Charging Mode: Pin-socket Charging

EN

Waterproof Rating: Waterproof in Life Functions: extension, vibration, real voice, orgasm mode and colorful light

Package Contents Masturbation Cup * 1 Standard Soft Rubber Liner * 1 USB Cable * 1 Product Diagram 1. Orgasm Button 2. Vibration Button 3. Power/Extension Button 4. Oscillator Inside the Device) 5. Uncapping Button 6. Soft Rubber Liner 7. Dust Cap 8. Charging Jack/

1. This product is for adult toys, minors are prohibited to use.

- 2. If you feel uncomfortable during use, please stop using immediately.
- 3. The appliance has a hot surface. People who are sensitive to heat must pay attention when using it.

Matters needing attention

- 4. Please do not use this product when you are injured.
- 5. Do not disassemble, transform or repair the product by yourself.
- 6. Check the product regularly and stop using it if any damage is found.

Introduction to Function Buttons

Orgasm Button

automatectury after 15 sections, and the common inequency will be resource.

Of While starting the "Orgasm Mode", this function cannot be turned off (except constantly pressing the power button to stop the machine).

Of While starting the "Orgasm Mode", the resumption of common frequency or the operation of vibration function will fail. Automatic stopping will be realized after about 15 seconds, and the initial mode will be resumed.

(i) While starting the "Orgasm Mode", click the power button to constantly switch among seven different frequencies of "Orgasm Mode".

Vibration Button

 After powering on, click the vibration button (the button light will be on constantly at this moment), random switch among different vibration frequencies will be This function can be turned off by constantly pressing this button for 1.5 seconds.

Power/Extension Button

While the device extends, real voice will be made. There are 3 voice moder intelligently switched according to different extension frequencies.

Product operation guide










power on and select favorite gear.



Cleaning method

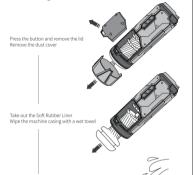

Wash the exterior and interior of silica gel set with clean water. Do not use hard objects such as brush to avoid cutting marks. which will affect the service life.

After drying, put back the silica gel set, install the machine body, cover the dust cover, and store in a cool and dry place.

Charging Mode



2. Plug the USB plug into the charging device with a power output of 5V

3. In case of low battery, red light will flicker.

4. During the charging, blue light will flicker.

After charging is completed, blue light will be on constantly.



Attention for safe use of built-in battery

- 1. Please charge the battery with the charging cable in the accessories.
- 2. Please wash your skin immediately with clean water and seek medical assistance if the battery liquid contacts with your skin.
- 3. Please dispose the wasted batteries by abiding by the local (national and regional) laws and regulations
- 4. To avoid battery the being damaged, please do not drop the battery from
- high buildings or make it hit by heavy objects or scratched by sharp objects. 5. To prevent battery from short-circuit, discharging, heating or leaking, please
- do not make the battery contact with metal objects (including coins).
- 6. Please do not disassemble the battery since such operation is dangerous and possibly damaging the product.
- 7. To avoid explosion of battery, please do not heat or drop the battery in fire. 8. Please do not keep the battery in high temperature and place with direct
- 9. If there is overheat during charging or using process, please stop charging or
- using immediately.
- 10. If rechargeable batteries are used:
- a. Please remove the battery from the product before it is discarded.
- b. The product must be powered off when removing the battery. c. The battery should be disposed in a safe manner.











