



IOB-209

denver.eu

08/18/2023



Safety information

Please read the safety instructions carefully before using the product for the first time and keep the instructions for future reference.

1.This product is not a toy. Keep it out of reach of children.

2.Keep product out of the reach of children and pets to avoid chewing and swallowing.

3.Product operating and storage temperature is from -20 degree Celsius to 60 degree Celsius. Under and over this temperature might affect the function.

4.Never open the product. Touching the inside electrics can cause electric shock. Repairs or service should only be performed by qualified personnel.

5.Only charge with the original adapter supplied with this product!

6.Only use with the attached accessories. Using non original accessories can make the product work abnormal.



7.Warning Lithium battery inside

Quick Start Guide

- Prepare your Wi-Fi network and password.
- Make sure your mobile device is running iOS 8 or higher or Android 10.0 or higher.
- Make sure a 2.4 GHz Wi-Fi network is used. A 5 GHz network is not supported.
- Download and install the Tuya Smart app from App Store or Google Play.



Open the app, and it will ask you to register your device. Select your country, enter your email, get a verification code, and input your chosen password to confirm.

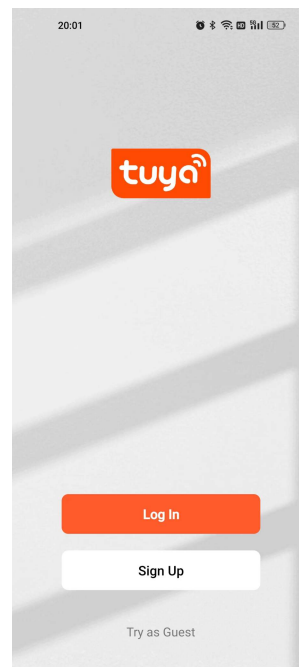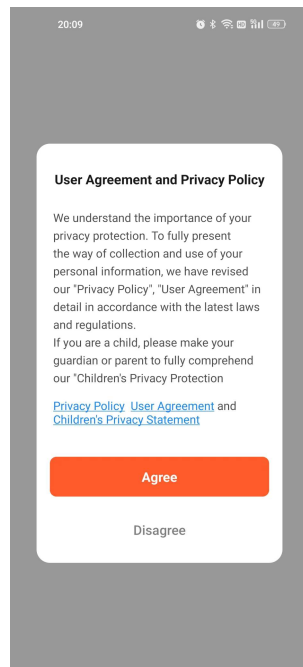

For new users, please select “Agree” in the tips pop-up.

1) Allow Tuya Smart to access mobile cellular data and wireless LAN; otherwise, you cannot add a camera.

 
 
2) Enable the push notification function on Tuya Smart; otherwise, the phone will not receive alarm push notifications.

3) Allow Tuya Smart to use the microphone when you want to use a 2-way audio function.

Adding a smart Wi-Fi camera:


Power on: Push the switch to “ON.” You will hear a beep, and the red light will flash.

• Open the “Tuya Smart Home” app, tap “+,” and then tap “Add Device.” Choose “Camera & Lock” and then tap “Smart Camera (Wi-Fi)” to add a new smart Wi-Fi camera to your app.

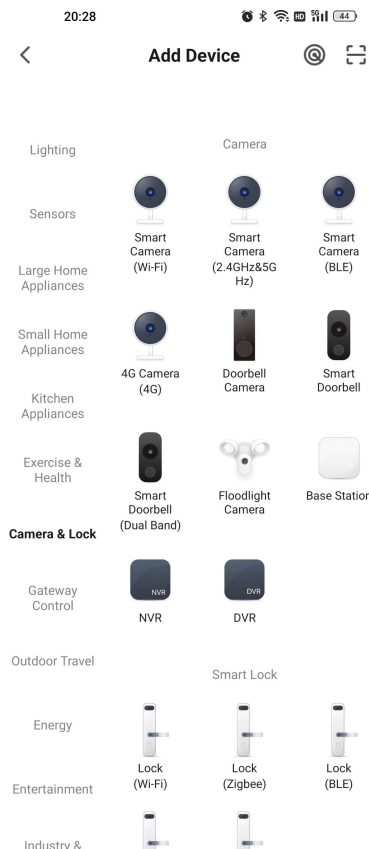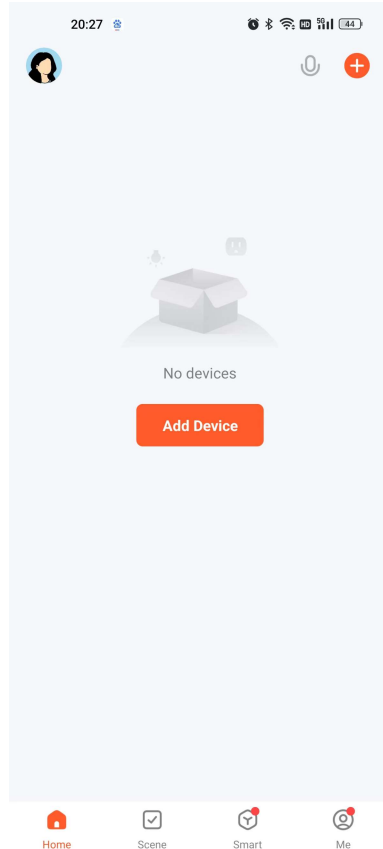

• When you see the indicator on the camera flashing slowly, tap “Next.”

Reset the device

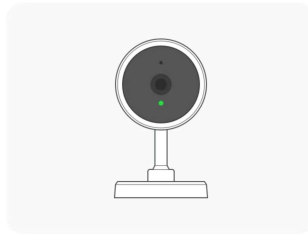

Power on the device and make sure the indicator is flashing rapidly or a prompt tone is heard.

- ✔ Make sure the indicator is flashing quickly or a prompt tone is heard


Next

[Reset Device Step by Step](#)

•Select the same connected Wi-Fi network of your phone or tablet and input the Wi-Fi password, then tap “Confirm.”

Select 2.4 GHz Wi-Fi Network and enter password.

If your Wi-Fi is 5GHz, please set it to be 2.4GHz. [Common router setting method](#)

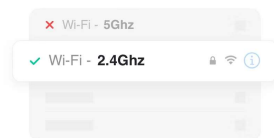


📶 ChinaNet-6uhk ↔



🔒 5ks6tatm 👁

Next

 •Tap “Continue,” and the mobile phone will display a QR code. Use the camera to scan the QR code 15 cm to 20 cm away from the mobile phone.

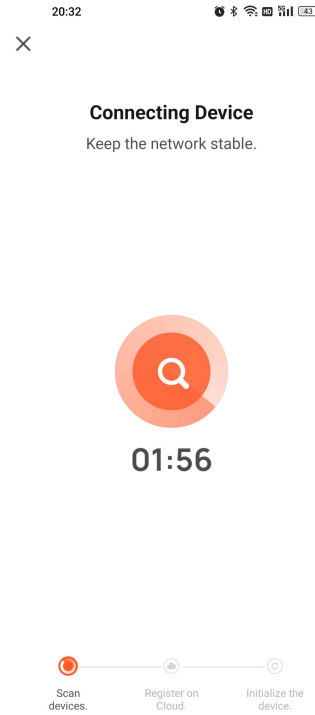

  •Tap “I Heard a Prompt” when you hear a prompt sound. The smart Wi-Fi camera is trying to connect to the app. Once connected successfully, the app will show “Added successfully” and “Security Camera added successfully,” and the camera indicator will turn blue.

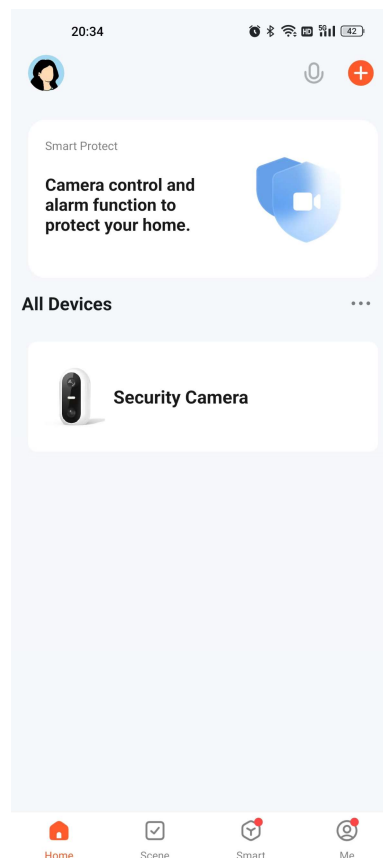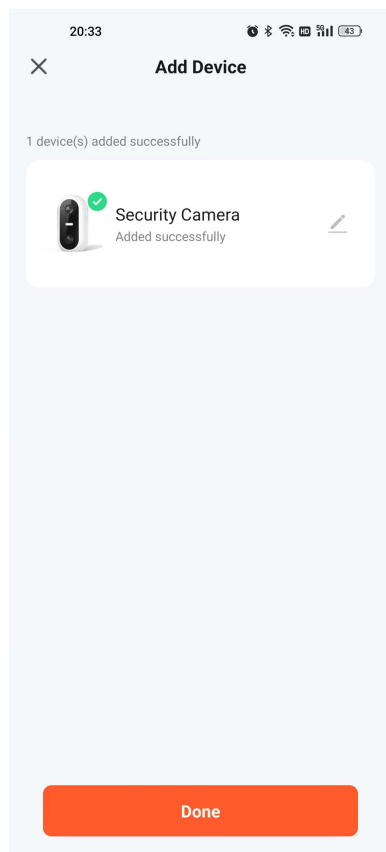

•Tap “Done” to view the live stream of your camera.

PIR:

Tap on “PIR” where you can then turn on/off the motion detection alarm. Once turned on, any motions detected will leave a notification. You can check notifications on the “Message” tab of the app. Motion alarm sensitivity level can be set as follows:

- Low Sensitivity – records any movements within 5 meters
- Medium Sensitivity – records any movements within 10 meters
- High Sensitivity – records any movements within 15 meters

Remove Device: Tap on “Remove Device” if you want to delete this camera.

Note: A Micro SD card (not included) will perform Event Recording or Non-Stop Recording. Upon reaching its maximum storage capacity, the card will automatically overwrite the oldest recording. This will erase the oldest recording and replace it with the new recording. For longer access to important recordings, it is recommended to move the recordings from the Micro SD card to your computer, etc. You can view recorded videos under the playback icon.


Warning!
-Lithium battery inside!
-Do not try to open the product!
-Do not expose to heat, water, moisture or direct sunlight!
-Only charge with the original charger supplied with this product!

Please notice - All products are subject to change without any notice.
We take reservations for errors and omissions in the manual.

ALL RIGHTS RESERVED, COPYRIGHT DENVER A/S



denver.eu

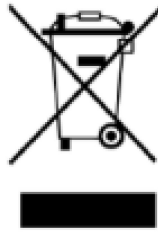

Electric and electronic equipment and included batteries contains materials, components and substances that can be hazardous to your health and the environment, if the waste material (discarded electric and electronic equipment and batteries) is not handled correctly.

Electric and electronic equipment and batteries is marked with the crossed out trash can symbol, seen above. This symbol signifies that electric and electronic equipment and batteries should not be disposed of with other household waste, but should be disposed of separately.

As the end user it is important that you submit your used batteries to the appropriate and designated facility. In this manner you make sure that the batteries are recycled in accordance with legislature and will not harm the environment.

All cities have established collection points, where electric and electronic equipment and batteries can either be submitted free of charge at recycling stations and other collection sites, or be collected from the households. Additional information is available at the technical department of your city.

Hereby, Denver A/S declares that the radio equipment type IOB-209 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: denver.eu and then click the search ICON on topline of website. Write model number: IOB-209. Now enter product page, and RED directive is found under downloads/other downloads.

Operating Frequency Range: 2.4~2.4835 GHz

Max Output Power: 1.6W

DENVER A/S

Omega 5A, Soeften

DK-8382 Hinnerup

Denmark

www.facebook.com/denver.eu

Contact

Nordics

Headquarter

Denver A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

Phone: **+45 86 22 61 00**
(Push "1" for support)

E-Mail
For technical questions, please write to:
support.hq@denver.eu

For all other questions please write to:
contact.hq@denver.eu

Benelux

DENVER BENELUX B.V.

Barwoutswaarder 13C+D
3449 HE Woerden
The Netherlands

Phone: **0900 -3437623**

E-Mail: **support.nl@denver.eu**

Spain/Portugal

DENVER SPAIN S.A

Ronda Augustes y Louis Lumiere, nº 23 – nave 16
Parque Tecnológico
46980 PATERNA
Valencia (Spain)

Spain

Phone: +34 960 046 883
Mail: **support.es@denver.eu**

Portugal:

Phone: **+35 1255 240 294**
E-Mail: **denver.service@satfiel.com**

Germany

Denver Germany GmbH Service

Max-Emanuel-Str. 4
94036 Passau

Phone: **+49 851 379 369 40**

E-Mail
support.de@denver.eu

Fairfixx GmbH

Repair and service
Rudolf-Diesel-Str. 3 TOR 2
53859 Niederkassel

(for TV, E-Mobility/Hoverboards/Balanceboards,
Smartphones & Tablets)

Tel.: **+49 851 379 369 69**

E-Mail: **denver@fairfixx.de**

Austria

Lurf Premium Service GmbH

Deutschstrasse 1
1230 Wien

Phone: **+43 1 904 3085**

E-Mail: **denver@lurfservice.at**

If your country is not listed above,
please write an email to
support@denver.eu



DENVER A/S
Omega 5A, Soeften
DK-8382 Hinnerup
Denmark

denver.eu
facebook.com/denver.eu



Version 1.1