

## HUNGRY T-REX

### FEEDING GAME

Thank you for your purchase of the Discovery Hungry T-Rex Target Feeding Game! Have fun with the Hungry T-Rex Feeding Game and see how much food you can get in the T-Rex's tummy. Be sure to use this product in a safe, traffic free environment. Please read all instructions and warnings on this sheet prior to use. Keep this instruction sheet as it contains important information for future reference.

### CONTENTS

 
- T-Rex Target
- Foam Ball Launcher
- 8 Foam Balls

### TO PLAY

- Place the T-Rex Target on a flat surface clear of other items that may get hit by the Foam Balls.
- Press the ON/OFF button and the LED screen will turn on.
- Load the Foam Balls into the Foam Ball Launcher by inserting them into the front of the gun.
- Grasp the front handle with one hand and the back handle with the other hand.
- The ball will shoot out only when it is positioned near the front of the Ammo Port. **TILT THE GUN DOWNWARDS IN ORDER TO POSITION THE BALLS AT THE FRONT OF THE AMMO PORT.**
- Once you are ready to shoot, straighten the gun and aim the gun towards the mouth of the T-rer.
- Create air pressure to shoot the balls by pumping the front and back handles. **IT MAY TAKE A FEW PUMPS FOR THE BALL TO SHOOT OUT. DO NOT TILT THE GUN BACKWARDS. THE BALLS MAY ROLL TO THE BACK AND IT MAY BECOME VERY HARD TO SHOOT THE BALLS.**
- Shoot as many balls as possible into the mouth of the T-Rex Target.
- The LED display will register the points each time a ball successfully hits the target.
- Press the ON/OFF button to turn off the LED screen.

### BATTERY INSTALLATION

- The T-Rex Target requires 2 1.5V "AA" batteries (not included).
- Use a Philip-head screwdriver to remove the cover to the battery compartment.
- Insert batteries according to the polarity diagram.
- Replace the cover and replace the screw.

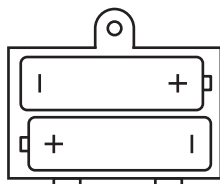

Model 1012161



Distributed by and © 2021 ThreeSixty Sourcing Ltd. All rights reserved.

For US only: Distributed by and © 2021 MerchSource, LLC. Irvine, CA, 92618. All rights reserved. Tel: 1-800-374-2744.

© 2021 Discovery or its subsidiaries and affiliates. Discovery and related logos are trademarks of Discovery or its subsidiaries and affiliates, used under license. All rights reserved.

Printed in China

### FEATURES

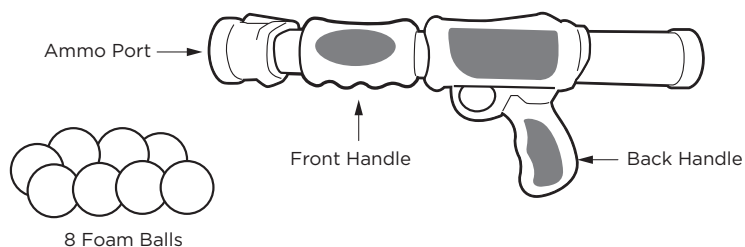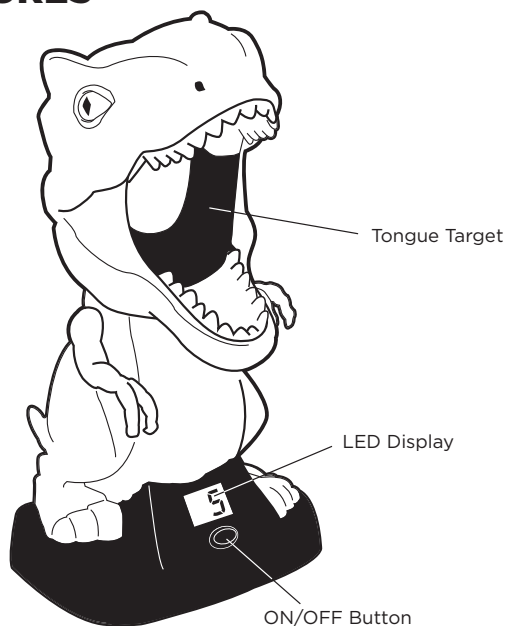  

#### SAFETY WARNINGS: PLEASE READ BEFORE USE

- Never aim or shoot the balls at other people.
- Do not aim at eyes or face.
- Adult supervision required.

#### BATTERY WARNING:

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Insert batteries using the correct polarity.
- Do not short-circuit the battery supply terminals.
- Remove batteries before storing.
- Recycle or dispose of batteries according to federal, state, and local laws.
- Do not dispose of batteries in fire, batteries may explode or leak.
- Always use, replace, and recharge (if applicable) batteries under adult supervision.
- Do not attempt to charge non-rechargeable batteries.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries are to be removed from the toy.
- Alkaline batteries are recommended. Use only the specified voltage.
- Keep these instructions for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including Interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.

KEEP THIS INSTRUCTION MANUAL AS IT CONTAINS IMPORTANT INFORMATION FOR FUTURE REFERENCE.

Due to continuous product improvements, the pictures on this manual may differ slightly from the actual product.



## WARNING:

**CHOKING HAZARD - Small Balls.**  
Not for Children under 3 years.