

USE & CARE INSTRUCTIONS

Vehicular Inflatable Pump

Note: The instruction book is general use instruction book, please correspond parameters according to the type you purchased

Please read all instructions carefully before Use

Vehicular Inflatable Pump-With Line

● Main Parts



Alternative car cigarette lighter power line

Gas tube

● Specification

Input Voltage: DC12V

Power: 120W


Product dimension: 98*98*133mm

● Instructions

- The gas tube has two threaded connectors, connect one end to car air pump, connect the other end to auto tire;
- Start car, connect B port of power line to car air pump, the other port to car cigarette lighter;
- Mechanical Model: open the power switch, when pointer point to 2.5bar or other needed pressure value, close it;
Digital Model: open the power switch, press "⊗" to convert unit. Press "△" to add and press "▽" to reduce pressure value, then press "▶" to start. It will stop automatically after getting to preset pressure value;
- After inflation done, remove gas tube from auto tire first, from car air pump next, then collect gas tube and power line.

Vehicular Inflatable Pump-Wireless

● Main Parts

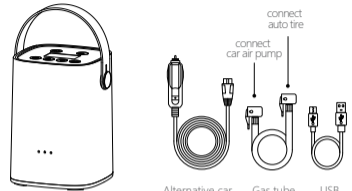

Alternative car cigarette lighter power line (Alternative)

Gas tube

USB Power line

● Specification

Input Voltage: DC12V

Power: 120W

Load Time: 15~20min

Product Dimension: 98*98*133mm

● Instructions

- The gas tube has two threaded connectors, connect one end to car air pump, connect the other end to auto tire;
- open the power switch and start air inflation;
- Mechanical Model: open the power switch, when pointer point to 2.5bar or other needed pressure value, close it;
Digital Model: open the power switch, press "⊗" to convert unit. Press "△" to add and press "▽" to reduce pressure value, then press "▶" to start. It will stop automatically after getting to preset pressure value
- When the indicator shows one green light(low power), you can connect car cigarette lighter power line to keep working;
- After inflation done, remove gas tube from auto tire first, from car air pump next, then collect gas tube and power line.

Notice

- It is normal that the real pressure value after inflated differs from preset pressure value. Because for digital model, the cylinder compression causes temperature difference from inside to outside.
- Charging multiple tires continuously, the interval cooling time can be ensured for more than 10 minutes.
- When using car cigarette lighter to take power, please start car to protect car battery.
- When not using, please close power switch.
- When indicator shows one green light(low power), please connect power line to charge.
- This product applies to car, bicycle, electromobile, lifeboat, balls etc. Truck and coach are not available.

Certificate

GRADE: QUALIFIED

Place of origin: JIANGSU

Survryor: NO.018

Nanjing JEIMAA Technology Co.,Ltd



Warranty Card

Dear Customer

Thank you for your patronage.From now on, you will get the after-sales service provided by our company.

Name		Tel	
Address			
Product Model		Purchase Date	
Warranty Description			

一. Since the date of purchasing the products, our company provides 3-month warranty service.

二. The following situations are not covered by the warranty.

- The failure or damage caused by personal
- Failure or damage caused by repair, modification or disassembly by individuals and service organizations not authorized by the company.
- Alter purchase certificate and product quality warranty card without permission
- Out of warranty time.

Nanjing JEIMAA Technology Co.,Ltd reserves all the right for the final explanation.