



425mmx120mm (5折页)
材质: 80g双胶

STUDIO ME

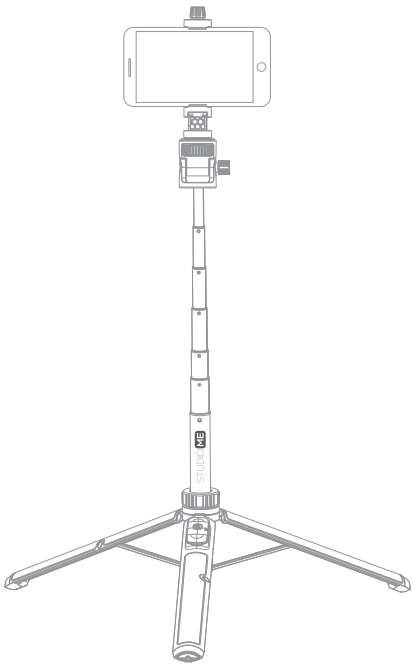

Please read the instructions carefully before use, and keep them properly for future reference.


Package list

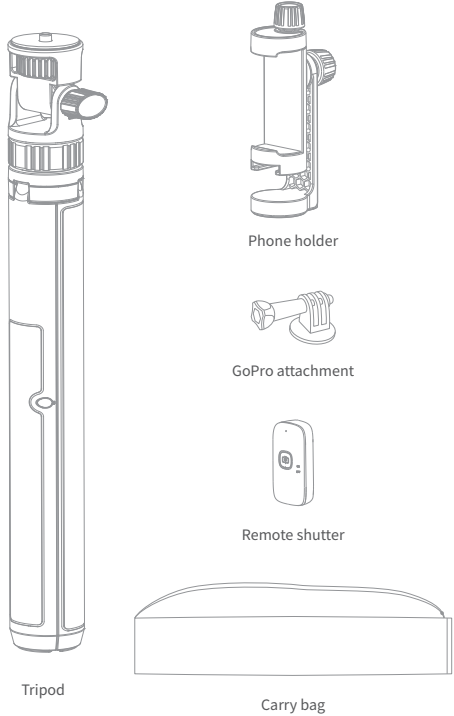

Tripod

Carry bag

Product illustration

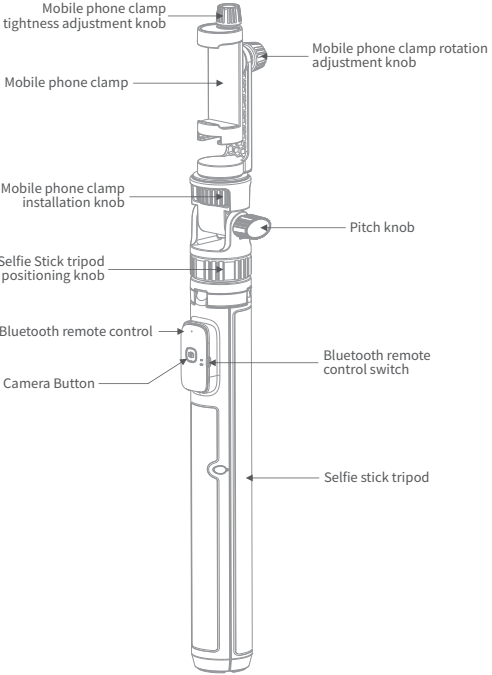

Mobile phone clamp tightness adjustment knob

Mobile phone clamp rotation adjustment knob

Mobile phone clamp

Mobile phone clamp installation knob

Pitch knob


Selfie Stick tripod positioning knob

Bluetooth remote control

Camera Button

Bluetooth remote control switch

Selfie stick tripod

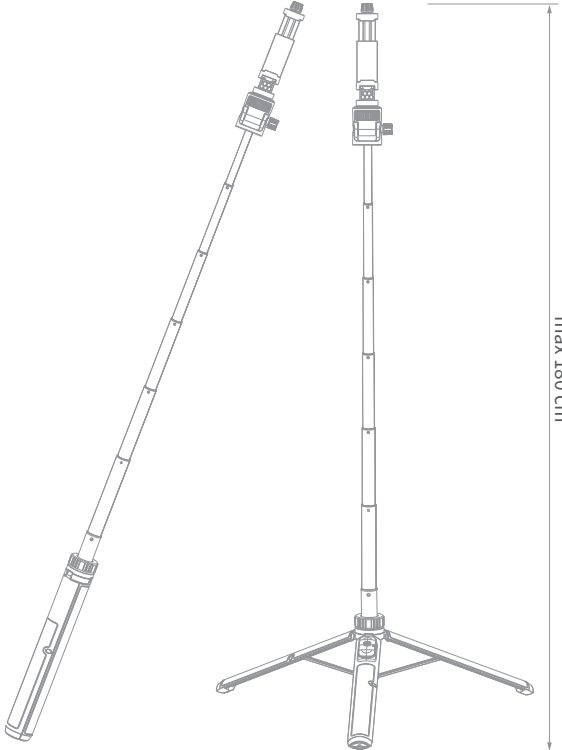


Selfie Stick


Tripod

max 180 cm


Manual Instruction

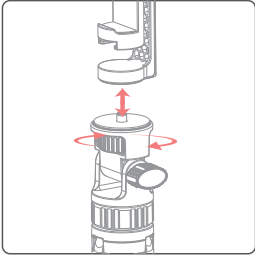


1. Connect the mobile phone clamp with the 1/4" screw hole on the selfie stick tripod and secure it with the mobile phone clamp installation knob below.

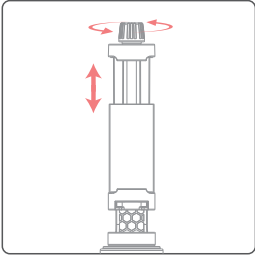

2. Adjust the clamping to fix or release the phone by adjusting mobile phone clamp tightness adjustment knob.

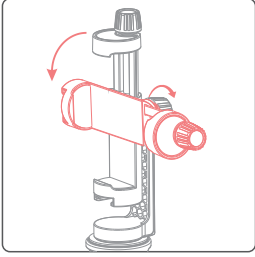


3. Release the mobile phone clamp rotation adjustment knob, which can switch the mobile phone clamp between horizontal and vertical shooting. Ensure to lock it after adjusting to the required angle.

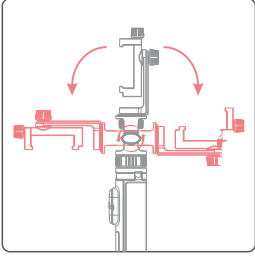

4. Loosen the pitch knob to allow the device to shoot at a 180° pitch angle. Ensure to lock it after adjusting to the required angle.

Manual Instruction

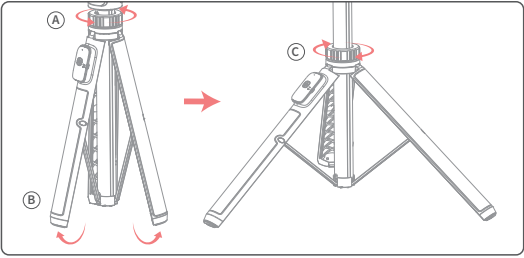

5. Rotate counterclockwise to unlock the ring. Extend the three support legs of the tripod from the bottom using your hands. Next, press the tripod down to the desired position. Secure it by rotating the positioning knob.

Bluetooth Remote Control



1. Turn on the bluetooth remote by switching the on/off switch to the "on" position. After powering on, the LED light starts flashing green.

2. Turn on your phone's bluetooth, and connect it to "Studio ME" when it shows up in the bluetooth devices list. After successful matching, the LED light turns off.

3. Open your phone's camera.

4. Use the bluetooth remote button to take a photo or a video.

5. For photos, go into Camera-photos in your phone and press the respective button.


6. For videos, go into Camera-videos in your phone and press the respective button.

7. The Bluetooth remote control has a memory function and automatically matches the paired mobile phone when it is turned on.


8. Push the switch to "OFF" to turn it off.

Important note: Please note that only one phone can be connected to the bluetooth remote at a time!


Attach GoPro

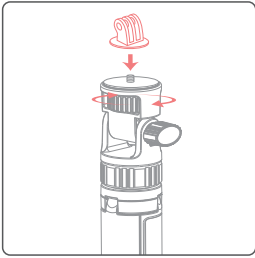


1. Screw the base with the 1/4" screw hole on the selfie stick tripod.

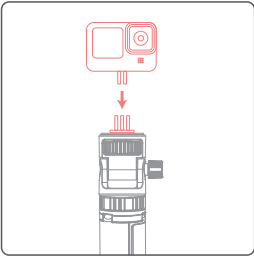

2. Attach GoPro.

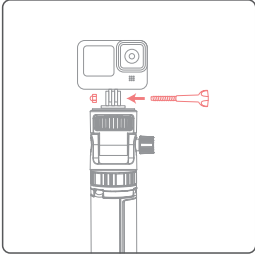


3. Mounting the Thumbscrew.

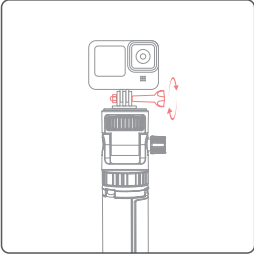


4. Rotate clockwise to tight.


How to fold

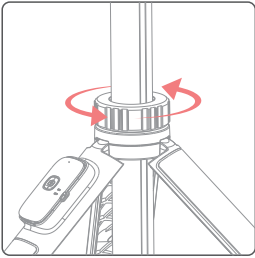


1. Rotate counterclockwise to unlock the ring.

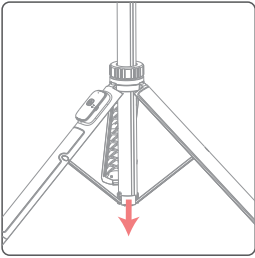

2. Push the three support legs of the tripod from the bottom using your hands.

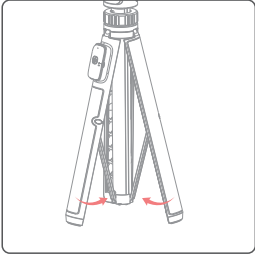

3. Fold tripod legs.

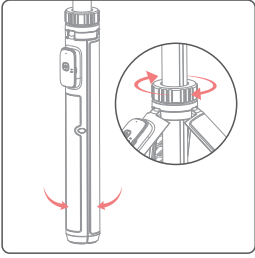

4. Rotate clockwise to lock the ring.

STUDIO ME

Guarantee

Thank you for purchasing Studio Me! To provide you perfect after-sales services, please read carefully and keep the card properly. Studio Me products are warranted against defects in workmanship under normal use for a period of one (1) year from the date of original purchase. Freight and other expenses for repair shall be borne by the buyer. Warranty card must fill in the product name, date of purchase, and stamped with the dealer seal. You must present this card when there is a warranty claim. Please keep this card, no supplement for any card lost.

User Name		Telephone	
Address			
Product Name		Product Model	
Purchasing Date		Model No	
Purchasing Address		Seller	
Dealer Signature		User Signature	

1. The warranty is only for the product body and the component is not covered by the warranty.

2. Not free for repair with the following circumstances, that needs to implement reasonable charge to repair.

a. Warranty card is lost or exceeds the expiration date.

b. Damage or tampered by improper handling and used (such as broken, water corrosion, etc.)

c. Self-demolition (repair) products, or unauthorized repair.

d. Due to floods, fires, earthquakes and other irresistible factors caused by failure or damage.

3. Limited warranty, for consequential and incidental damages is expressly disclaimed and shall not exceed the purchased price paid.

4. If unknown, please consult our company.

CERTIFICATE

This product is strictly inspected to meet the standards and allowed to be sold.

Checker: _____

