

4 IN 1 STROLLER PLUS

User Guide



ECER44/04
EN 1898:2012
Group 0+
Up to 15kg
Language: English

14036901

Important – Keep these instructions for future reference.

1 / Vital information / Warnings.

WARNING! For the protection of your baby this Stroller is not suitable for the following:

- As a substitute for a cot or a cradle. Carrycots, pushchairs and buggies must only be used to transport babies or children.
- To transport more than one child.
- For commercial use.

WARNING!

In a case of car accident violent stresses occur, if you were involved in a car accident we recommend you to change the device.

WARNING!

Do not make any alterations or additions to the Stroller.

VITAL INFORMATION / WARNINGS

4

5

WARNING!

Do not use this product if any components are broken or missing.

WARNING!

Any luggage or other objects liable to cause injuries in the event of a collision shall be properly secured.

WARNING!

Never leave your child unattended.

WARNING!

This product is not suitable for running or skating.

WARNING!

Do not let your child play with this product.

WARNING!

When outside of the car, always use the parking brake when placing and removing the child from the Stroller, or when standing still.

THE NEXT GENERATION STROLLER

Table of Contents.

01/ Vital information / Warnings	4
02/ Suitability	6
03/ Product overview	7
04/ Use modes	9
4.1. Use modes and their purposes	9
4.2. Adjusting the rotation angle of the handle	10
4.3. Transition between modes	11
4.4. On-the-go mode	17

THE NEXT GENERATION STROLLER


05/ Care instructions	19
5.1. Care for the harness buckle	20
5.2. Cleaning	20
5.3. Removing the fabric seat cover and the sunshade	21
5.4. Re-fitting the fabric seat cover and the sunshade	22
06/ Two-year warranty	23
07/ Warranty Card	24

TABLE OF CONTENTS

Congratulations on choosing Simple Parenting's as your baby's safety and mobility solution. In order to protect your baby correctly, the Stroller must always be used and installed as described in these instructions. Important! Keep these instructions for future reference. Read these instructions carefully, your child's safety may be affected if you do not follow these instructions. Please always keep the user instructions available in the compartment provided on the child seat.

THE NEXT GENERATION STROLLER

3 / Product overview.

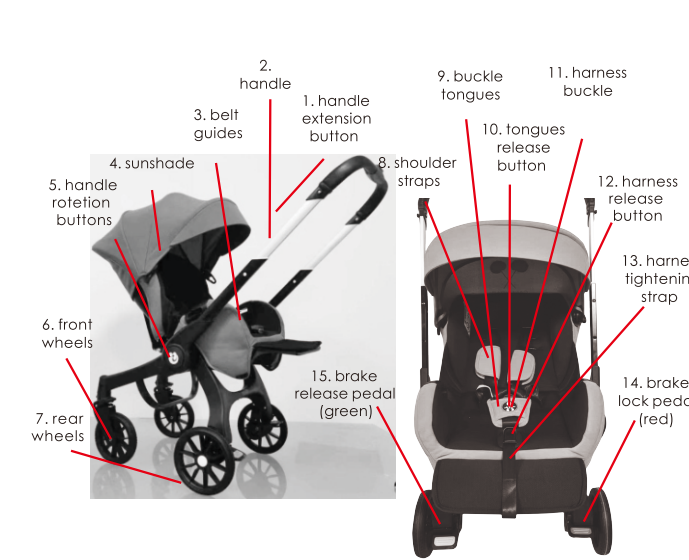

THE NEXT GENERATION STROLLER



PRODUCT OVERVIEW

4 / Use modes.

4.1 Use modes and their purposes



Babybasket mode
When travelling in a vehicle, always use the Babybasket mode (See chapter #6 of this manual, for instructions regarding securing and releasing in the vehicle).



Full-along mode
Use the pull along mode for maneuvering the product easily while walking or seating next to it.



Buggy mode
Use the on-the-go mode when you leave the vehicle and wish to walk around with your baby.

THE NEXT GENERATION STROLLER

4.2 Adjusting the rotation angle of the handle

You can engage the handle (#2) in three positions:



A. Press the handle rotation buttons (#5) on both sides simultaneously.

B. With the handle rotation buttons (#5) pressed, begin rotating the handle (#2) towards the desired position.

C. Make sure the handle does not rotate further than the desired position (A, B or C).

D. Let go of the handle rotation buttons (#5) and rotate the handle further more until it is engaged on both sides in the desired position and locked in place. You should hear a "click" sound.



USE MODES

4.3. Transition between modes

WARNING!

Ensure that all the locking devices are engaged before use.

WARNING!

To avoid injury ensure that your child is kept away when unfolding and folding this product. When folding and unfolding the, ensure that your child is either restrained with the harness (arms and legs are kept away from moving parts), or kept away when not seated.

From Babybasket mode to on-the-go mode

A. Press the handle rotation buttons (#5) on both sides simultaneously, and rotate the handle (#2) to the top position (B).



B. Release the Babybasket from the vehicle belt (See chapter #6 of this manual, for instructions regarding securing and releasing of the Stroller in the vehicle).



THE NEXT GENERATION STROLLER

C. carry the Babybasket out of the car and then hold it with one hand

D. With the other hand push in the red safety button (#17), and squeeze the wheels release lever (#16), to release the wheels mechanism. The wheels will unfold.



*As an alternative to stages c-d: you can take the Babybasket out of the car and place it on the ground, and then push in the red safety button (#17), and squeeze the wheels release lever (#16), to release the wheels mechanism. In this option, you have to lift the Seat up while still squeezing, to allow the wheels to unfold.

E. Press the handle rotation buttons (#5) on both sides simultaneously, and rotate it to the on-the-go position (#A).



USE MODES

F. Press the handle extension button (#1), and pull the handle towards you, to extend its length.



From on-the-go mode to babybasket mode
A. Press the handle extension button (#1), and push down the handle (#2), to return the handle to its shortest mode.



THE NEXT GENERATION STROLLER

B. Press the handle rotation buttons (#5) on both sides simultaneously and rotate the handle (#2) to the top position (B).



C. Step on the red brake lock pedal (#14) to lock it. Alternatively, place your foot in front of the wheel to block its movement.



USE MODES

D. Hold the Babybasket by the handle with one hand, and with the other hand push in the red safety button (#17), and squeeze the wheels release lever (#16).




E. While squeezing, lean the Babybasket against the rear wheels (#7), until they start to fold, and then lower it all the way to the ground, until the wheels are fully folded and locked in place.



F. Lift the Babybasket by the handle (#2), and place it in the vehicle.

THE NEXT GENERATION STROLLER

G. Secure the Babybasket in the vehicle (See chapter #6 of this manual, for instructions regarding securing and releasing of the Car Seat in the vehicle).

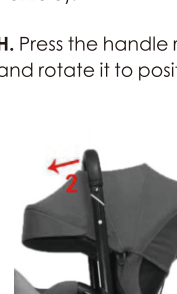

H. Press the handle rotation buttons (#5) on both sides simultaneously, and rotate it to position A.



USE MODES

4.4. On-the-go mode

Rear Brakes

The rear wheels are fitted with a braking system which allows you to use just one pedal to control both the rear wheels. To apply the brakes, press the red brake lock pedal (#14) located next to the right wheel. To release the brakes, the green brake release pedal (#13) located next to the left wheel. The brake must always be on when putting the child in or taking him out. Always use the parking brake when placing and removing the child, or when standing still even for a few moments! Always check that the brake is fully engaged.



USE MODES

WARNING!
Do not overload the All-Day bag with weights of over 3 kg.

Do not overload the Essentials bag with weights of over 1.5 kg.

Exceeding these limits may compromise the stability of the stroller and cause it to topple over. Load carrying accessories which are not approved by the manufacturer should not be used.

WARNING!
Any load attached to the handle affects the stability of the vehicle.
Important note: You must remove all bags from the vehicle before folding the wheels and transferring to Stroller mode.

USE MODES

5/ Care instructions.

WARNING! To retain the protective effect

- In an accident at a collision speed above 10 km/h the Stroller could suffer damage which is not necessarily obvious. In this case the car seat must be replaced. Please dispose of it properly.

- Regularly check all important parts for damage. Ensure the correct operation of all mechanical components.

- To prevent damage or breakage, ensure that the Stroller does not become jammed in the car door, seat runners, etc.

- Should the Stroller be damaged (forexample after dropping it) it must be inspected.
- The Stroller must not be used without the seat cover

- Never use spare parts or accessories other than those supplied – never replace the seat cover with any other than the original seat cover, because the cover constitutes an integral part of the restraint performance.

THE NEXT GENERATION STROLLER

5.1. Care for the harness buckle

The function of the harness buckle is important for the safety of your child. Malfunctions of the harness buckle are mostly attributable to accumulations of dirt and dust. It is recommended to clean the harness buckle system periodically, in order to keep it properly functioning.

To clean the harness buckle, sponge clean or rinse using warm water. DO NOT use any soaps, solvents or lubrication. Using anything other than water can cause the buckle to malfunction.

5.2. Cleaning

Always use only genuine Stroller fabric covers, since the seat cover is an integral part of the Stroller system. Using the original seat covers helps to maintain a safe and functioning system.

WARNING! The Stroller must not be used without the seat cover.

- The seat cover can be removed and hand washed with a mild detergent. Follow these washing instructions to avoid damage to the seat cover: Hand wash only. Do not bleach. Do not tumble dry. Hang dry. Do not wring. Do not iron. Do not dry clean. Please observe the instructions on the washing label of the cover. The same washing instructions should be followed when washing the sunshade as well.
- The plastic parts can be cleaned using soapy water. Do not use harsh cleaning agents (such as solvents).


SECURING YOUR BABY IN THE STROLLER

WARNING! Never remove the buckle tongues (#9) from the straps.

5.3. Removing the fabric seat cover and the sunshade

- Pull out the 3 sunshade back pins (#32) at the head area of the sunshade.
- Pull out the sunshade plastic spine (#32) from the sunshade hinges (#34) and remove the fabric from the spine. Reconnect the spine to the hinges.
- Disconnect the 4 hooks (#35) located at the head area of the Stroller fabric cover.
- Pull out the fabric cover from around the 2 side plastic pins (#36) on each side of the Stroller.
- Pull out the fabric cover from around the blue plastic belt guides (#37).
- Click out the belt guide pins (#37) that hide under the cover in the front of the belt guides (#3).
- Click out the lower pin (#38) located at the middle of the feet area of the Stroller fabric cover.
- Pull out the fabric cover from around the harness release button (#12).
- At the back of the Stroller disconnect the shoulder straps (#8) from the metal plate (#21).
- Pull the shoulder straps (#8) and the harness buckle (#11) out of the fabric seat cover completely.

THE NEXT GENERATION STROLLER

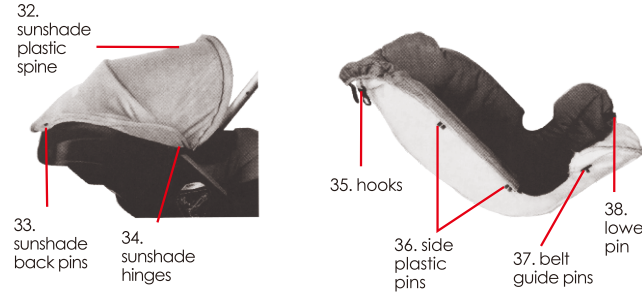

5.4. Re-fitting the fabric seat cover and the sunshade

- Simply proceed in the reverse order of section (#7.3)

WARNING! Ensure that all straps are not twisted and that the shoulder straps (#8) are correctly inserted in the shoulder strap slots (#19). See the image below for correct assembly.

WARNING! Ensure that the shoulder straps (#8) are correctly reconnected to the metal plate (#21). See the image below for correct assembly.

SECURING YOUR BABY IN THE STROLLER

6 / Two-year warranty.

We guarantee that the Stroller has been manufactured in accordance with the European safety standards and regulations, and is meeting the highest standards of quality. For the Stroller we provide a 2-year warranty against manufacturing or material defects. The warranty period is effective from the day of purchase.

As proof of purchase we ask that you fill out the Warranty Card and retain it for the whole term of the warranty period, together with your sales receipt.

In the case of a warranty claim, the Warranty Card must be returned together with the product to your local distributor. The Warranty covers Stroller which have been handled properly and which have been sent to us in a clean condition.

The warranty does not apply in the following cases:
• Natural signs of wear and damage resulting from excessive stress.
• Damage resulting from inappropriate or improper use.
• When the product has been used for a purpose other than that provided for in the instructions for use.

THE NEXT GENERATION STROLLER

7/ Warranty Card.

Warranty Card:

Name: _____
Address: _____
Post Code: _____
City/Town: _____
Telephone No. (Including area code): _____
E-mail address: _____
Stroller serial number: _____
Retailer: _____
Fabric color (design): _____
Accessories: _____

THE NEXT GENERATION STROLLER

WARNING Ensure that all the locking devices are engaged before use!

WARNING To avoid injury ensure that your child is kept away when unfolding and folding this product!

WARNING Do not let your child play with this product!

WARNING Always use the restraint system!

WARNING Always use the crotch strap in combination with the waist belt!

WARNING Check that the pram body or seat unit or car seat attachment devices are correctly engaged before use!

WARNING This product is not suitable for running or skating!

WARNING Only replacement parts supplied or recommended by the manufacturer shall be used. Any accessories which are not approved by the manufacturer shall not be used!

WARNING Do not use this product if any components are broken or missing!

WARNING Any load attached to the handle and/or on the back of the backrest and/or on the sides of the vehicle will affect the stability of the product!

WARNING Never leave the child unattended.

WARNING This stroller is intended for children from the birth up to 3 years / max. 15 kg (33 lbs), whichever comes first.

WARNING Read the instructions in the manual carefully before use and keep for future reference.

WARNING This product meets EN1898-1:2018+A1:2022 safety standard.

SECURING YOUR BABY IN THE STROLLER

25

26

27

24

23

18

13

8

7

6

5

4

3

2

1