



Digital Cordless Telephone

Motorola C1L
For C1001L, C1002L, C1003L and C1004L

Technical Information

How many telephones can I have?
All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line.

Any additional handsets and chargers that you register have a REN of 0.

Connecting to a switchboard

This product is intended for use within Europe for connection to the public telephone network.

Recall

You may need to use the recall function if you are connected to a switch. Contact your PABX supplier for further information.

Manufactured, distributed or sold by Suncorp Technologies Ltd., official licensee for this product. MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC.



Version 3 (EU)



Warning: Charge the handset for 24 hours before use.

IMPORTANT

Warning! Use only the approved rechargeable Ni-MH battery cells (2 x AAA Ni-MH 300mA rechargeable batteries) supplied with your C1L.

BATTERY LOW WARNING

If icon flashes on the display and you hear a warning beep every minute during a call, you will need to recharge the handset before you can use it again.

When charging, icon will scroll on the display.

BATTERY PERFORMANCE

In ideal conditions, fully charged batteries should give up to 6.5 hours talk time or up to 135 hours standby time on a single charge.1

Note that new batteries do not reach their full capacity until they have been put to normal use for several days.

To keep your batteries in the best condition, leave the handset off the base for a few hours at a time.

Running the batteries right down at least once a week will help them last as long as possible.

The charge capacity of rechargeable batteries will reduce with time as they wear out, giving the handset less talk / standby time. Eventually they will need to be replaced.

After charging your handset for the first time, subsequent charging time is about 6-8 hours a day. Batteries and handset may become warm during charging. This is normal.

1All talk and standby times are approximate and depend on features selected and usage pattern.

Date and time

If you have subscribed to a Caller ID Service, the date and time is set automatically for all handsets when you receive your first call.

If you do not have a Caller ID service, you can set the date and time manually, see section "7. Clock & Alarm."

Your C1L is now ready for use.

NOTE

If there is no answer from the other handset and you wish to return to your external caller, press icon.

Your external call resumes automatically after 30 seconds if there is no answer.

3.5.4 3-way conference call

You can hold a 3-way conference call between 2 internal callers and 1 external caller.

During a call with an external caller:

- 1. Press icon followed by the handset number (1-5) that you want to establish a conference call.
2. When the other handset answers, press icon to connect all three callers to begin the conference call. icon is displayed.
3. If there is no answer from the other handset, press icon to return to your external caller.
4. Press icon to end the call.

3.6 Redial

The last 10 entries dialled are stored in the redial list.

3.6.1 View or dial an entry

- 1. Press icon to open the Redial list.
2. Scroll icon to the entry you want.
3. Press icon to dial the displayed entry or press icon to return to standby.

NOTE


If the caller's number exactly matches an entry stored in the phonebook, the name is displayed. Press icon to see the caller's number.

3.6.2 Copy a Redial list number to the phonebook

- 1. Press icon to open the Redial list.
2. Scroll icon to the entry you want.
3. Press icon. The display shows ADD ?.

2. Getting to know your phone

Overview of your handset

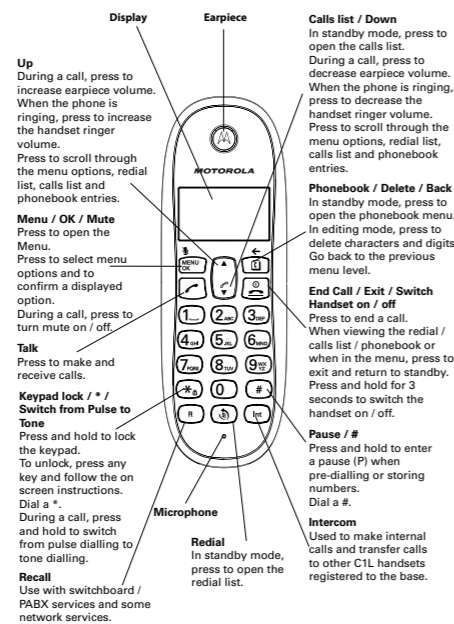

- 4. Press icon again. The display shows NAME?.
5. Enter the name and press icon. The number is displayed.
6. Edit the number if necessary, then press icon.
7. Press icon or icon to select the ringer melody you want and press icon. The number is stored.

3.6.3 Delete an entry

- 1. Press icon to open the Redial list.
2. Scroll icon or icon to the entry you want and press icon. The display shows DELETE?.
3. Press icon to confirm or icon to cancel.

3.6.4 Delete the entire Redial list

- 1. Press icon to open the Redial list.
2. Press and hold icon. The display shows DELETE ALL?.
3. Press icon to confirm or icon to cancel.

3.7 Lock / unlock the keypad

You can lock the keypad so that it cannot be operated accidentally while carrying it around.

NOTE

When the keypad is locked, you can still answer incoming calls and operate the handset as normal during the call. When the call ends, the keypad lock comes on again.

- 1. Press and hold icon. icon is displayed.
2. To unlock the keypad, press any key on your handset. The display shows PRESS \*.
3. Press icon within 5 seconds.

3.8 Paging / Find handset

You can alert a handset user that they are wanted or locate a missing handset.

Paging calls cannot be answered by a handset.

Welcome...

to your new Motorola C1L Digital Cordless Telephone!

- All handsets are fully cordless for locating anywhere within range.

- 50 Name and Number phonebook.

- Caller ID shows you who's calling and see details of the last 40 callers in a Calls list.1

- Redial up to 10 of the last numbers called.

- Register up to 5 handsets to a single base and register each handset with up to 4 different bases.

- Make internal calls and transfer external calls between handsets.

- Choose from 5 different ringtones for internal and external calls as well as numbers stored in the phonebook.

Please note that this equipment is not designed for making emergency telephone calls when the power fails. Alternative arrangements should be made for access to emergency services.

Need help?

If you have any problems setting up or using your C1L, please contact Customer Services on XXXX XXXXXXXX.

Alternatively, you may find the answer in the 'Help' section at the back of this guide.

1You must subscribe to your network provider's Caller ID or Call Waiting service for these features to work. A subscription fee may be payable.

This user guide provides you with all the information you need to get the most from your phone.

To set up your phone, follow the simple instructions in 'Getting Started', on the next few pages.

IMPORTANT

Only use the telephone line cord supplied.

Got everything?

- C1L base & cordless handset
2 x rechargeable Ni-MH battery cells
Power adaptor for the base
Telephone line cord
If you have purchased a C1L multiple pack you will also have the following additional items:
Cordless handset & charger
2 x rechargeable Ni-MH battery cells
Power adaptor for the charger



ECOMOTO: a convergence of efforts by marketing, design, research, engineering and supply chain management that leads to better products for everyone. A holistic view that focuses on both social and environmental responsibility. A passion and a shared point of view.


- The right thing to do.
Meets and / or exceeds EMEA environmental regulatory requirements.
Eco friendly packaging with a minimum 20% post consumer recycled content.
Phone housing is built with a minimum of 25% post consumer recycled content plastic.
Energy efficient charger that meets EU Code of Conduct requirements.
ECO mode function which reduces the transmitted power and energy consumption.

Flashes when battery is almost fully discharged.

1This feature is dependent on your Network Service provider supporting the service. A subscription fee may be payable.

2For this feature to work, you must subscribe to Caller ID Service from your network operator. A subscription fee may be payable.

Underside of the base

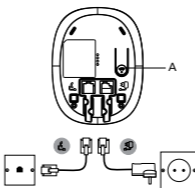

- A Page
In standby mode, press to ring the handset(s).
Press and hold to enter registration mode when registering handsets.

Navigating the menus

Your C1L has an easy to use menu system.

Each menu has a list of options, which you can see on the menu map on the following page.

When the handset is switched on and in standby:

- 1. Press icon to open the main menu.
2. Then use icon or icon buttons to scroll through the available options.
3. Press icon to select an option. To return to the previous menu level, press icon. To exit the menu and return to standby, press icon.

NOTE

If no buttons are pressed for 20 seconds, the handset returns to standby automatically.

Press icon three times to enter O.

Press icon once to enter M.

WRITING TIPS

Press icon to delete the last character or digit.

Press icon or icon to move between characters.

Press icon to insert a space.

Use icon twice to insert a dash.

4.2 View or dial an entry

- 1. Press icon. icon is displayed.
2. Scroll icon or icon to the entry you want.
OR
Enter the first letter of the name to search alphabetically. The first name that starts with this letter or the nearest letter in the alphabet will be displayed. Scroll icon or icon to the entry you want.
3. Press icon to dial or icon to return to standby.

NOTE

When the name is displayed, you can switch between the name and number by pressing icon.

4.3 Edit a name and number

- 1. Press icon. The display shows PHONEBOOK.
2. Press icon. The display shows ADD ENTRY.
3. Scroll icon to MODIFY ENTRY and press icon.
4. Scroll icon or icon to the entry you want to edit, or search alphabetically and press icon. The existing name is displayed.
5. Press icon to delete the name if required, then enter the new name and press icon. The existing number is displayed.

ENTERING NAMES

Use the keypad letters to enter names, e.g. to store TOM:

Press icon once to enter T.

1. Getting started

IMPORTANT

Do not place your C1L in the bathroom or other humid areas.

Location

You need to place your C1L base within 1.5 metres of the mains power and telephone wall socket so that the cables will reach. The socket-outlet should be installed near the equipment and should be easily accessible.

Make sure that it is at least 1 metre away from other electrical appliances to avoid interference. Your C1L works by sending radio signals between the handset and base. The strength of the signal depends on where you place the base. Placing it as high as possible ensures the best signal.

HANDBET RANGE

The unit has a range of up to 300 metres outdoors when there is a clear line of sight between the base and handset. Any obstruction between the base and handset will reduce the range significantly. With the base indoors and the handset either indoors or outdoors, the range will normally be up to 50 metres. Thick concrete and stone walls can severely affect the range.

SIGNAL STRENGTH

The icon on your handset indicates that you are within range of the base. When out of range of the base, the icon flashes. If you are on a call, you will hear a warning beep.

The line will hang up if the handset moves out of range of the base. Move closer to the base. The handset will automatically reconnect to the base.

Setting up

IMPORTANT

The base station must be plugged into the mains power at all times. Do not connect the telephone line cord into the wall socket until the handset is fully charged. Use only the power adaptor and telephone line cord supplied with the product.

Connecting the base

- 1. Plug the telephone line cord into the socket marked icon on the underside of the base.
2. Plug the power adaptor into the socket marked icon on the underside of the base and plug the other end into the mains power wall socket.

Menu map

Table with 3 columns: PHONEBOOK, HANDBET, DATE-TIME. Lists various menu options like ADD ENTRY, MODIFY ENTRY, DEL HANDSET, etc.

3. Using the phone

NOTE

Your handset will automatically time the duration of all external calls. The call timer will display after the first 15 seconds of your call. When the call ends, the total duration of your talk time is shown for 5 seconds.

3.1 Switch the handset on / off

Press and hold icon to switch the handset on or off.

3.2 Calls

3.2.1 Make a call

- 1. Press icon.
2. When you hear the dial tone, dial the number.

3.2.2 Preparatory dialling

- 1. Dial the number first. If you make a mistake press icon to delete the last digit.
2. Press icon to dial.

3.2.3 End a call

Press icon, or place the handset back on the base or charger.

3.2.4 Receive a call

When you receive an external call, the phone rings and icon flashes on the display.

- 1. If the handset is off the base then press icon to answer the call, or if

- 6. Press icon to delete the number if required, then enter the new number and press icon.
7. Scroll icon or icon to select a new ringer melody and press icon. The display shows ADD ENTRY.
8. Enter the next name and number entry you wish to store in your phonebook or press icon twice to return to standby.

4.4 Delete an entry

- 1. Press icon. The display shows PHONEBOOK.
2. Press icon. The display shows ADD ENTRY.
3. Scroll icon to DELETE ENTRY and press icon.
4. Scroll icon or icon to the entry you want to delete, or search alphabetically and press icon. The display shows CONFIRM?.
5. Press icon to confirm or icon to cancel.

5. Handset settings

5.1 Handset ringer volume

You can adjust the ringer volume and set different volume levels for your internal and external calls. Choose from 5 volume levels or Off.

- 1. Press icon, scroll icon to HANDBET and press icon.
2. Press icon or icon to select INT RING VOL or EXT RING VOL and press icon.
3. Press icon or icon to select the volume (1 -5 or OFF).
4. Press icon to confirm or icon to return to the previous menu.

NOTE

When the phone is ringing, you can adjust the ringer volume by pressing icon or icon.

5.2 Handset ringer melody

Switch on the mains power.

Installing and charging the handset

- 1. Remove the battery cover from the back of the handset and insert the rechargeable Ni-MH battery cells supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
2. Slide the battery cover back into place.
3. If you are charging the batteries for the first time, place the handset on the base to charge for at least 24 hours continuously.
4. When the handset is fully charged, icon will appear steady on the display. Plug the other line of the telephone line cord (make sure that one end is already plugged into the base) into the telephone wall socket.

Connecting the handset and charger (for multi-pack only)

If you have purchased a multiple pack, you will need to carry out this process for all the handsets and chargers.

- 1. Plug the power adaptor into the socket marked icon on the underside of the charger and plug the other end into the mains power wall socket.
2. Remove the battery cover from the back of the handset and insert the 2 x AAA NiMH rechargeable batteries supplied. Please note the '+' and '-' markings inside the battery compartment and insert in the correct direction.
3. Slide the battery cover back into place.
4. If you are charging the batteries for the first time, place the handset on the charger to charge for at least 24 hours continuously.
5. When the handset is fully charged, icon will appear steady on the display. The display will show HANDBET and handset number (e.g. 2) to indicate that it is registered to the base.

the handset is on the base simply lift the handset to answer the call.

NOTE

If you prefer to press icon when you lift up the handset to answer a call, you will need to switch Auto answer off.

3.3 Adjust the earpiece volume

During a call, press icon or icon to increase or decrease the volume. There are 5 levels to choose from.

3.4 Mute

You can mute your handset so that you can talk to someone nearby without your caller hearing.

- 1. During a call, press icon. The display shows MUTE and your caller cannot hear you.
2. Press icon again to resume your call.

3.5 Intercom

3.5.1 Make an internal call

If you have more than one handset registered to the base, you can make internal calls between two handsets.

icon is displayed to indicate an internal call.

- 1. Press icon followed by the number (1-5) of the handset you want to call.

3.5.2 Receive an internal call

When you receive an internal call, icon flashes and the handset number that is calling you is displayed.

- 1. Press icon to answer the call.

3.5.3 Transfer a call

You can transfer an external call to another handset registered to the base. During an external call:

- 1. Press icon followed by the handset number (1-5) that you want to transfer to.
2. When the other handset answers, press icon to complete the transfer.

You can set different ringer melodies for your internal and external calls. Choose from 5 different ringer melodies.

You will hear a sample ring as you scroll to each ring melody.

- 1. Press icon, scroll icon to HANDBET and press icon.
2. Press icon or icon to select INT MELODY or EXT MELODY and press icon.
3. Press icon or icon to select the ringer melody (1 - 5).
4. Press icon to confirm or icon to return to the previous menu.

NOTE

If you subscribe to your network providers caller ID service, calls from the numbers that you have stored in the phonebook will ring using the ringer melody you have set when you store the entry.

5.3 Auto answer

Your phone is set to answer calls by lifting the handset off the base or charger. You can switch this feature off so that calls can only be answered by pressing icon.

- 1. Press icon, scroll icon to HANDBET and press icon.
2. Scroll icon to AUTO ANSWER and press icon.
3. Press icon or icon to select ON or OFF and press icon to confirm.

5.4 Handset name

If you are using more than one handset with your C1L base, you can set a personalized name for each handset to easily distinguish between them. A name can be up to 10 characters long.

- 1. Press icon, scroll icon to HANDBET and press icon.
2. Scroll icon to NAME and press icon.
3. Enter the new handset name and press icon to confirm. Delete the current name by pressing icon.

NOTE

The handset name will only be displayed for approximately 20 seconds when no button is pressed. If you make a mistake, press icon to delete the last character or digit.

## 5.5 Language

- Press , scroll  to **HANDSET** and press .
- Scroll  to **LANGUAGE** and press .
- Press  or  to select your preferred language and press  to confirm.

## 5.6 Key beep

When you press a button on the handset keypad, you will hear a beep. You can switch these beeps on or off.

- Press , scroll  to **HANDSET** and press .The display shows **BEEP**.
- Press  to select.The display shows **KEYTONE**.
- Press  to select.
- Press  or  to select **ON** or **OFF** and press  to confirm.

## 5.7 Battery low warning beep

When the battery is almost fully discharged, you will hear a warning beep every minute during a call.You can switch these beeps on or off.

- Press , scroll  to **HANDSET** and press .The display shows **BEEP**.
- Press  to select.
- Scroll  to **LOW BATTERY** and press .
- Press  or  to select **ON** or **OFF** and press  to confirm.

## 5.8 Out of range warning beep

If the handset goes out of range, you will hear warning beeps during a call.You can switch these beeps on or off.

- Press , scroll  to **HANDSET** and press .The display shows **BEEP**.
- Press  to select.
- Scroll  to **OUT RANGE** and press .
- Press  or  to select **ON** or **OFF** and press  to confirm.

## 5.9 Keypad lock using the menu

1. Press , scroll  to **HANDSET** and press .

2. Scroll  to **LANGUAGE** and press .

3. Press  or  to select your preferred language and press  to confirm.

- Press , scroll  to **HANDSET** and press .The display shows **BEEP**.
- Press  to select.
- Press  or  to select **ON** or **OFF** and press  to confirm.
- Press  repeatedly until the display shows **ADD 1**.
- Press  again.The display shows **NAME?**.
- Enter the name and press .The number is displayed.
- Edit the number if necessary, then press .
- Press  or  to select the ringer melody you want and press .The number is stored.

## 8.2.2 Dial a number in the Calls list

- Press  to open the Calls list.
- Scroll  or  to the entry you want.
- Press  to dial the displayed entry.

## 8.2.3 Copy a Calls list number to the phonebook

- Press  to open the Calls list.
- Scroll  or  to the entry you want.
- Press  repeatedly until the display shows **ADD 1**.
- Press  again.The display shows **NAME?**.
- Enter the name and press .The number is displayed.
- Edit the number if necessary, then press .
- Press  or  to select the ringer melody you want and press .The number is stored.

## 8.2.4 Delete an entry

- Press  to open the Calls list.
- Scroll  or  to the entry you want and press .The display shows **DELETE?**.
- Press  to confirm or  to cancel.

## 8.2.5 Delete the entire Calls list

- Press  to open the Calls list.
- Press and hold .The display shows **DELETE ALL?**.
- Press  to confirm or  to cancel.

# 9. Using additional handsets

You can register up to five handsets to your C1L base to extend your phone system without having to install extension sockets for each new phone.

Each C1L handset can be registered with up to four bases. You can then select the base you prefer to use. If you have purchased a C1L multiple pack, all additional handsets come pre-registered to the base.

- damage and will often require extensive work to restore the product to normal operation.
- Clean this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- Use only the power supply that came with this unit. Using other power supplies may damage the unit.
- Because this phone operates on electricity, you should have at least one phone in your home that could operate without electricity in the case the power in your home goes out.
- To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

## Battery Safety Instructions

- Do not burn, disassemble, mutilate, or puncture the battery.The battery contains toxic materials that could be released, resulting in injury.

### IMPORTANT

*There is a risk of explosion if you replace the battery with an incorrect battery type. Use only the batteries that came with your phone or an authorized replacement recommended by the manufacturer.*

- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.
- Do not dispose of batteries in fire, which could result in explosion.
- The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery’s label for battery type. Contact your local recycling center for proper disposal methods.

## SAVE THESE INSTRUCTIONS

## Cleaning

- Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe.
- Never use household polish as this will damage the product. Never use a dry cloth as this may cause static shock.

## Environmental

- Do not expose to direct sunlight.
- The handset may become warm when the batteries are being charged or during prolonged periods of use. This is normal. However, we recommend that to avoid damage, do not place the product on antique / veneered wood.
- Do not place your product on carpets or other surfaces which

## 5.9 Keypad lock using the menu

You can use the menu to lock the keypad.

- Press , scroll  to **HANDSET** and press .
- Scroll  to **KEYLOCK?** and press  to confirm.  icon is displayed.

## NOTE

*To unlock the keypad, press any button on the keypad, then press  within 5 seconds.*

# 6. Base settings

## 6.1 Change base PIN code

Some functions are protected by a 4 digit PIN code which must be entered if you want to change the settings.The default PIN is 0000.You can change this to your own preferred number.

When you enter a PIN, the digits are shown as \*\*\*\*.

- Press , scroll  to **SETUP** and press .
- Scroll  to **PIN CODE** and press .
- Enter the 4 digit PIN code (default = 0000) and press .
- Enter the new PIN and press  to confirm.
- The display shows **RETYPE**. Re-enter the new PIN and press  to confirm.

### IMPORTANT

*If you change the PIN code, please keep a record of the new number.*

## 6.2 Dial mode

Your C1L is set to tone dialling.You should only need to change this if connected to an older type of switchboard / PBX which requires pulse dialling.

- Press , scroll  to **SETUP** and press .
- Scroll  to **DIAL MODE** and press .
- Press  or  to select **TO**NE **DIAL** or **PULSE DIAL** and press  to confirm.

- Press , scroll  to **SETUP** and press .
- Scroll  to **DIAL MODE** and press .
- Press  or  to select **TO**NE **DIAL** or **PULSE DIAL** and press  to confirm.

If you have purchased an additional handset separately, you must register it to your C1L base before it can be used.

## 9.1 Registering an additional handset

### NOTE

*Handset batteries must be fully charged before you start to register. Hold your handset close to the base during the registration process. Handsets that were supplied with your C1L base are already pre-registered.*

## On the base:

- Press and hold  for 3 seconds until you hear two beeps.The base will remain in registration mode for 90 seconds.

## On the handset:

- Press , scroll  to **REGISTER** and press .
- Scroll  to **REG BASE** and press .
- Enter the base number (1 - 4).The base numbers that are already in use flash.
- The display shows **SEARCHING\_X**, where X indicates the base identification number.
- The display will ask for the PIN to be entered. Enter the 4 digit PIN code (default = 0000) and press .You will hear a beep if the registration is successful.The handset is automatically assigned an available handset number. Use this number when making internal calls.

### NOTE

*If registration is not successful the first time, please repeat the process again in case the base registration period ran out of time. If the base is not found after a few seconds, the handset returns to standby. Try registering again.*

*If there are already 5 handsets registered to the base, the registration will fail. You must de-register another handset before you can register a new one.*

- generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosives or other hazardous conditions.
- There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

- Do not use this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- Use only the power supply that came with this unit. Using other power supplies may damage the unit.
- Because this phone operates on electricity, you should have at least one phone in your home that could operate without electricity in the case the power in your home goes out.
- To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

- Do not burn, disassemble, mutilate, or puncture the battery.The battery contains toxic materials that could be released, resulting in injury.

## Product disposal instructions

### Product disposal instructions for residential users

When you have no further use for it, please remove any batteries and dispose of them and the product according to your local authority’s recycling processes. For more information, please contact your local authority or the retailer where the product was purchased.

### Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

## Consumer Products and Accessories Warranty

Thank you for purchasing this Motorola branded product manufactured under license by SunCorp Technologies Limited, 3001-3005 China Resources Building, 26 Harbour Road, Wan Chai, Hong Kong. (“SUNCORP”)

### What Does this Warranty Cover?

Subject to the exclusions contained below, SUNCORP warrants that this Motorola branded product (“Product”) or certified accessory (“Accessory”) sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below.This Limited Warranty is your exclusive warranty and is not transferable.

### Who is covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

### What will SUNCORP do?

SUNCORP or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any

confirm.

## 6.3 Recall mode

Depending on your country and network operator, your C1L has the recall time set as 100 ms (TIMED BR.1). It is unlikely that you need to change this setting unless advised to do so.

- Press , scroll  to **SETUP** and press .
- Scroll  to **RECALL** and press .
- Press  or  to select **TIMED BR.1** (short flash time) or **TIMED BR.2** (long flash time) and press  to confirm.

## 6.4 Restore default settings

You can restore your C1L to its default (original) settings.

All the handsets that are registered to the base will be retained.

### IMPORTANT

*Resetting your phone to its default settings will delete all entries in the Phonebook and Calls list. All handset and base settings will also be reset.*

- Press , scroll  to **SETUP** and press .
- Scroll  to **DEFAULT** and press .
- Enter the 4 digit PIN code (default = 0000) and press .The display shows **CONFIRM?**.
- Press  to confirm or  to return to the previous menu.Your C1L will restart automatically.

## 6.5 Emergency default

If you have lost your PIN code, you can still restore your C1L to its default settings.

- Remove the batteries from the handset.
- Press and hold  while replacing the batteries.The display shows **DEFAULT**.
- Press  to confirm.Your C1L will restart automatically.

## 6.6 Eco mode

Your C1L offers ECO mode function which reduces the transmitted power

- Press , scroll  to **ECO** and press .
- Press  or  to select **ON** or **OFF** and press  to confirm.

- Press , scroll  to **ECO** and press .
- Press  or  to select **ON** or **OFF** and press  to confirm.

- Press , scroll  to **ECO** and press .
- Press  or  to select **ON** or **OFF** and press  to confirm.

- Press , scroll  to **ECO** and press .
- Press  or  to select **ON** or **OFF** and press  to confirm.

If you have purchased an additional handset separately, you must register it to your C1L base before it can be used.

- Press , scroll  to **REGISTER** and press .
- Scroll  to **REG BASE** and press .
- Enter the base number (1 - 4).The base numbers that are already in use flash.
- The display shows **SEARCHING\_X**, where X indicates the base identification number.
- The display will ask for the PIN to be entered. Enter the 4 digit PIN code (default = 0000) and press .You will hear a beep if the registration is successful.The handset is automatically assigned an available handset number. Use this number when making internal calls.

- generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosives or other hazardous conditions.
- There is a slight chance that your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

- Do not use this product with a soft, damp cloth. Do not use chemicals or cleaning agents to clean this phone.
- Use only the power supply that came with this unit. Using other power supplies may damage the unit.
- Because this phone operates on electricity, you should have at least one phone in your home that could operate without electricity in the case the power in your home goes out.
- To avoid interference to nearby appliances, do not place the base of the phone on or near a TV, microwave oven, or VCR.

- Press , scroll  to **REGISTER** and press .
- Scroll  to **REG BASE** and press .
- Enter the base number (1 - 4).The base numbers that are already in use flash.
- The display shows **SEARCHING\_X**, where X indicates the base identification number.
- The display will ask for the PIN to be entered. Enter the 4 digit PIN code (default = 0000) and press .You will hear a beep if the registration is successful.The handset is automatically assigned an available handset number. Use this number when making internal calls.

### NOTE

*If you select AUTO, your handset will automatically search for and connect to the base with the strongest signal.*

## 9.4 De-register a handset

Use one handset to de-register another. You cannot de-register the handset that you are using.

- Press , scroll  to **SETUP** and press .

- Press , scroll  to **SETUP** and press .
- Press  or  to select **ON** or **OFF** and press  to confirm.

Products or Accessories that do not conform to this limited warranty. We may use functionally equivalent reconditioned / refurbished / pre-owned or new Products, Accessories or parts.

### What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OF IMPLIED. IN NO EVENT SHALL MOTOROLA OR SUNCORP BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
<b>Consumer Products</b>	<b>One (1) year</b> from the date of the products original purchase by the first consumer purchaser of the product.
<b>Consumer Accessories (battery, power supply(s) and line cords)</b>	<b>Ninety (90) days</b> from the date of the accessories original purchase by the first consumer purchaser of the product.
<b>Consumer Products and Accessories that are Repaired or Replaced</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.

and energy consumption when switched on.

To switch Eco mode on:

- Press , scroll  to **SETUP** and press .
- Scroll  to **ECO MODE** and press .
- Press  or  to select **ON** or **OFF** and press  to confirm.

### NOTE

*When ECO mode is set to ON, the handset range will be reduced.*

*On the handset display when ECO mode is switch off the circle around the  disappears.*

## 6.7 Default settings

Low battery beeps	ON	Calls list	Empty
Out of range warning beeps	ON	Redial list	Empty
Key beep	ON	PIN code	0000
Auto answer	ON	Dial mode	Tone
Internal melody	1	Recall mode	TIMED BR, 1 (100 ms)
Internal volume	3	Eco mode	OFF
External melody	3	Keypad lock	OFF
External volume	3	Answering machine	ON
Ear volume	2	Answer delay	6 rings
Phonebook	Empty		

# 7. Clock & alarm

If you have subscribed to Caller ID Service, the date and time will be set on all your handsets whenever a call is received. You can also manually set the date and time on the individual handsets.

## 7.1 Set the date

- Press , scroll  to **DATE – TIME** and press .The display shows **DATE SET**.
- Press  to select.
- Enter the date (e.g. 12–08 for 12th of August) and press  to confirm.

- Press , scroll  to **DATE – TIME** and press .