

NEXT BASE[®] Click 9
Click 9 Duo
Click 9 Duo Deluxe
9" Portable DVD Player

Instruction Manual

Click&Go



Thank you for purchasing this tablet DVD player. Please read this manual carefully before operation and reserve it for future reference. It will be helpful to you when you encounter any operational problem.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the instruction manual unless you are qualified to do so.

WARNING: To reduce the risk of fire or electric shock, do not expose this device to rain, moisture, dripping or splashing. No object filled with liquids (such as vase) shall be placed on the device. High voltages are present inside the unit. Under no circumstances should you try to repair the unit yourself. Refer servicing to qualified personnel.


LASER: This unit employs a laser. Due to possible eye injury, only qualified service personnel should remove the cover or attempt to service this device.

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Visible and invisible laser radiation will be exposed when open and interlocks defeated.

DO NOT STARE INTO BEAM!

LASER	
Type	Semiconductor laser GaAlAs
Wave length	650 nm/780nm
Output Power	5mW
Beam divergence	60degree

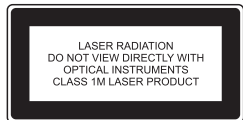

MACROVISION:

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision. If not, the use of this technology is only permitted for domestic use and other limited playback uses. Reverse engineering or disassembly is prohibited.

DOLBY:

Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.

DivX:

This device incorporates copyright protection technology that is protected by DivX, Inc.
DivX, DivX certified and associated logos are trademarks of DivX, Inc., and can only be used under license.

WEEE:

Please do not throw electronic devices into household waste. Separate them for correct recycling.

PIXEL FAILURE STATEMENT

The LCD screen contains 1,152,000 pixels, pixels can fail during normal product life. 1 pixel 0.0003% failure rate. One pixel failure per year or operation is considered normal and not a cause for concern.



The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.

PRECAUTIONS	PRECAUTIONS.....	1
TABLE OF CONTENTS	TABLE OF CONTENTS.....	3
CAUTIONS ON USING THIS PLAYER DISCS PLAYABLE	CAUTIONS ON USING THIS PLAYER.....	5
	TYPES OF DISCS PLAYABLE ON THIS PLAYER.....	6
	PLAYABLE FORMATS	6
PACKAGE CONTENTS	PACKAGE CONTENTS.....	7
PARTS AND REMOTE CONTROL	MAIN UNIT	
	FRONT.....	8
	TOP.....	8
	RIGHT.....	9
	LEFT.....	10
	BACK.....	10
	HOW TO USE THE STAND.....	10
	MONITOR	
	FRONT.....	11
	TOP.....	11
	RIGHT.....	12
	LEFT.....	12
	BACK.....	12
	REMOTE CONTROL.....	13
	NOTES ON USING THE REMOTE CONTROL	15
	REPLACING THE BATTERY.....	15
CONNECTIONS	CONNECTING THE ADAPTER TO A SOCKET.....	16
	USING AN EARPHONE / AN AMPLIFIER.....	16
	CONNECTING ACCESSORIES TO iX PORT.....	16
	INSERTING A USB DISK INTO THE PLAYER.....	17
	INSERTING A MEMORY CARD INTO THE PLAYER.....	17
BASIC OPERATIONS	TURNING ON THE PLAYER.....	18
	SELECTING A LANGUAGE.....	18
	TURNING OFF THE PLAYER.....	19
	LOADING.....	19
	PLAYBACK.....	20
	STOPPING PLAYBACK.....	20
	PAUSING PLAYBACK.....	20
SYSTEM SETUP	OPTION.....	21
	IR HEADPHONE.....	21
	DISPLAY.....	22
	MONITOR DISPLAY.....	22

	TV SYSTEM.....	23
	SCREEN SAVER.....	23
	TV TYPE.....	24
	PASSWORD.....	24
	RATING.....	25
	DEFAULT.....	25
LANGUAGE SETUP	LANGUAGE.....	26
	SUBTITLE.....	26
AUDIO SETUP	AUDIO OUT.....	27
DIGITAL SETUP	SOUND EFFECT.....	28
	DYNAMIC RANGE.....	28
	DIVX[R] VOD.....	29
DISC SETUP	DISC MENU.....	30
	INFORMATION.....	30
	MUTE.....	31
	AUDIO.....	32
	SUBTITLE.....	33
	REPEAT.....	34
	ZOOM.....	35
MODE	MODE.....	36
	USB AND MEMORY CARD READING.....	37
FUNCTIONS ON THE REMOTE CONTROL	PLAYING AT FAST SPEED.....	38
	A-B PLAYBACK.....	38
	ANGLE.....	38
	PROGRAM.....	39
	PLAYING A DISC IN MP3 OR JPEG FORMAT.....	41
OTHER	DIMENSION AND PARAMETERS.....	45
	TROUBLE SHOOTING.....	46

CAUTIONS ON USING THIS PLAYER**1. DO NOT MOVE THE PLAYER DURING PLAYBACK**

During playback, the disc spins at high speed. So do not lift or move the player. Doing so may damage the disc.

2. TRANSPORT THE PLAYER

Before transporting the player, please remove the disc, turn off the power, and unplug the power cord .

3. PLACE OF INSTALLATION

Select a stable place near TV or stereo system to which you are going to connect the player.

Do not place the player on top of a TV or color monitor.

Install the player away from cassette decks or other devices which are easily affected by magnetic forces.

4. TURN OFF THE POWER WHEN NOT USING THE PLAYER

If the player is connected to your TV but not in use, switch the power off. It can avoid interference with your normal TV picture.

Noise problems may also be experienced if the player is used near a radio.

5. STORAGE TEMPERATURE OF THE PLAYER

Do not leave the player in places where the temperature is extremely low (about -10° C or lower) or extremely high (about 60° C or higher), such as inside the passenger cabin or trunk in midsummer. Doing so may warp the outer case or reduce the performance or quality of the battery pack.

6. WHEN USING WITH CAR POWER CABLE (OPTIONAL) IN CARS

Please turn the engine on and then connect the car power cable for using.

7. CLEANING THE PLAYER

Normally clean the player with a soft dry cloth. For tough dirt, apply some neutral detergent diluted in 5 to 6 parts water to a soft cloth, and wring out thoroughly. Wipe off the dirt, then clean the player with a dry cloth. Note that alcohol, thinner, benzene, insecticides, etc., may cause the paint or coating to peel off.

Also avoid leaving rubber or plastic products in contact with the player for long periods of time, as this may damage the cabinet. When using chemically treated cloths, read the cloth's instructions carefully. Always unplug the power cord from the power outlet before cleaning the player.

8. NEVER TOUCH THE LASER PICKUP LENS

Do not touch the laser pickup lens. Doing so may cause damages to the player. Refer servicing to qualified personnel.

9. COPYRIGHTS



Unauthorized duplication, broadcast, public performance or rental of discs is prohibited by law.

10. MODEL NUMBER

To see the model no. of the player, you can unlock the stand and see it printed on the backplate. (Details on how to unlock the stand, please refer to page 10.)

 

 

TYPES OF DISCS PLAYABLE ON THIS PLAYER

The discs listed on the table below can be played on this player without an adapter.
The marks shown on the table below are indicated on the disc's label, package or jacket.

Types of playable discs and their marks	Diameter/Playable sides	Playback time
DVD-Video disc 	DVD video 1 layer 12cm/single-sided 2 layer 12cm/double-sided 2 layer	Playback time (MPEG 2 format) 133 minutes (4.7GB) 242 minutes (8.5GB) 266 minutes (9.4GB) 484 minutes (17GB)
	DVD video 1 layer 8 cm/single-sided 2 layer 1 layer 8 cm/double-sided 2 layer 2 layer	(MPEG 2 format) 41 minutes 75 minutes 82 minutes 150 minutes
CD 	CD 12 cm/single-sided	74 minutes
	CD 8 cm/single-sided	20 minutes

Marks indicated on DVDs

DVD discs or packages include the marks shown below. These marks indicate the type of video or audio signals recorded on the disc and the functions that can be used.

Mark	Meaning
	Indicates the number of audio tracks.
	Indicates the number of angles.
	Indicates the selectable picture aspect ratio.
	Indicates the playable region number.

PLAYABLE FORMATS

The unit is able to play most audio/video files such as:










PICTURE: JPEG

AUDIO: MP3, WMA

VIDEO: DAT, VOB, MPEG2, MPEG4 (AVI, DIV)

PACKAGE CONTENTS

After unpacking, please check the package contents of Click 9 series DVD.

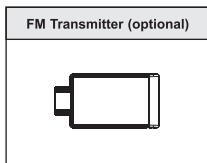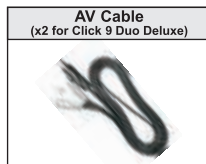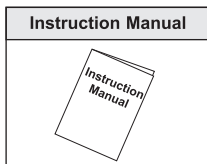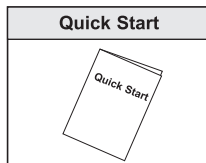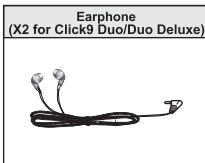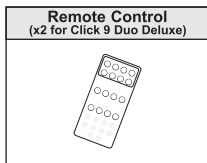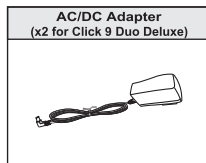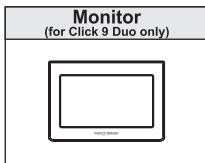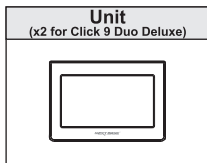


Note:

The actual products might appear slightly different from the pictures shown above.


MAIN UNIT

FRONT

1. Remote Control Sensor and IR Receiver

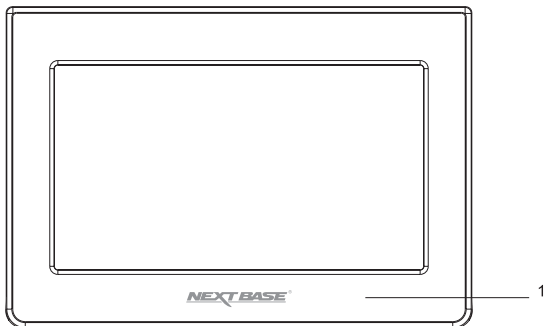

TOP

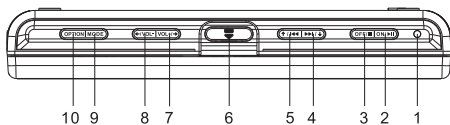

1. LED Indicator

When the adapter is connected, the LED indicator will be red to show the player is powered.

2. ON / ►►

Press it for about 2 seconds to turn the player on.
Press it to start / pause the playback.
Press it to confirm the selection.

3. OFF / ■

Press it for about 2 seconds to turn the player off.
Press it to stop the playback.
Press it to exit the current operation.

4. **▶▶|/↓**

Press it to skip to the next track / chapter when playing DVD.
Press it to move downwards.

5. **↑/◀◀**

Press it to skip to the previous track / chapter when playing DVD.
Press it to move upwards.

6. **☰**

Press it to open the cover.

7. **VOL+ / →**

Press it to turn the volume up.
Press it to move to the right.

8. **← / VOL-**


Press it to turn the volume down.
Press it to move to the left.

9. **MODE**

Press it to pop up the MODE menu, which includes DVD, USB, Memory Card, and AV Input.
The default mode is DVD.

10. **OPTION**

Press it to pop up the OPTION menu.

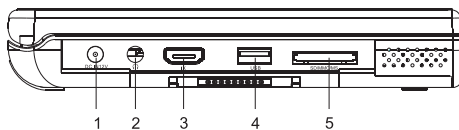RIGHT**1. DC IN 12V**

Connect the included AC/DC adapter here.

2. Earphone Jack

Connect an earphone or an amplifier here.

3. iX (Interface Extend) Port

Connect AV cable, TV box and FM transmitter etc.

4. USB Port

Insert a USB disk here.


5. Card Slot

Support SD /MMC /MS cards.

LEFT

1. Lock


Lock / unlock the stand and Click & Go headrest mount / Stanchion mount

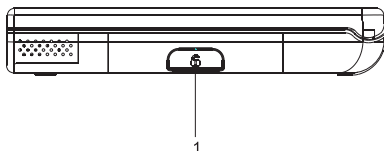

BACK

1. Stand


The player can stand with it.

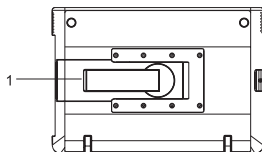

2. Lock


Lock/unlock the stand.

Press the lock and remove the stand before mounting onto Click &Go headrest mount/ Stanchion mount.

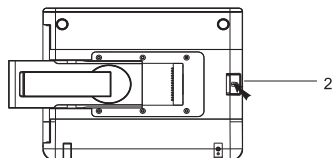


HOW TO USE THE STAND

 
1. Pull out the support of the stand.
2. Rotate it to a proper position.
3. Lean the player back.





1

 

2

 

3

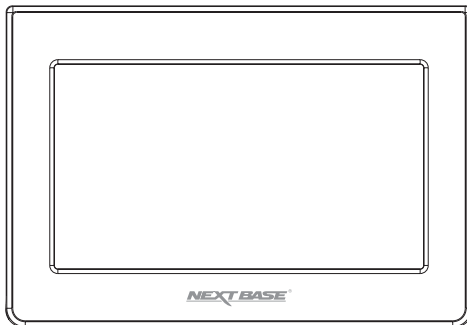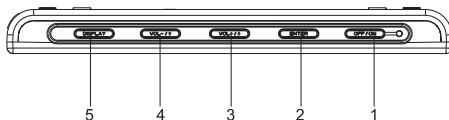MONITOR (for Click 9 Duo only, play the same movie with the main unit)**FRONT****TOP****1. ON/OFF**

Press it for about 2 seconds to turn the monitor on.
Press it for about 2 seconds to turn the monitor off.

4. VOL- / ↑

Press it to turn the volume down.
Press it to move upwards.

2. ENTER

Press it to confirm the selection.


5. DISPLAY

Press it to enter the display menu.

3. VOL+ / ↓

Press it to turn the volume up.
Press it to move downwards.

RIGHT

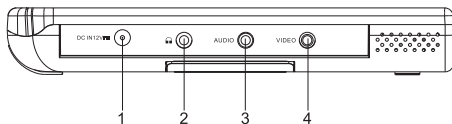**1. DC IN 12V**

Connect the included AC/DC adapter here.

2. Earphone Jack

Connect an earphone or an amplifier here.


3. Audio

Connect an audio cable for audio in here.

4. Video


Connect a video cable for video in here.

LEFT

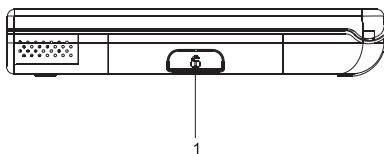**1. Lock**


Lock / unlock the stand and Click & Go headrest mount / Stanchion mount

BACK

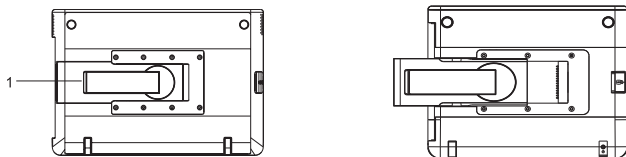**1. Stand**

The monitor can stand with it.

REMOTE CONTROL

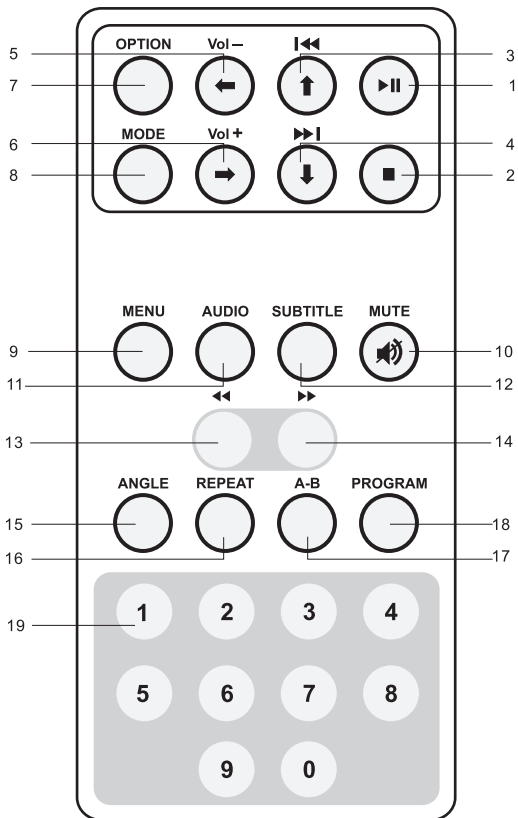

1. ►||

Press it to start / pause the playback.
Press it to confirm the selection.

2. ■

Press it to stop the playback.
Press it to exit the current operation.

3. ↑ / ◀◀

Press it to skip to the previous track / chapter when playing DVD.
Press it to move upwards.

4. ▶▶ / ↓

Press it to skip to the next track /chapter when playing DVD.
Press it to move downwards.

5. Vol- / ←

Press it to turn the volume **down** .
Press it to move to the left.

6. Vol+ / →

Press it to turn the volume **up**.
Press it to move to the right.

7. OPTION

Press it to pop up the OPTION menu.

8. MODE

Press it to pop up the MODE menu, which includes DVD, USB, Memory Card, and AV Input.
The default mode is DVD.

9. MENU

Press it to display DVD menu.

10. MUTE

Press it to turn on/off the audio mute.

11. AUDIO

Press it to change the audio language.

12. SUBTITLE

Press it to change the subtitle.

13. ◀◀

Press it to fast backward a movie/music clip.

14. ▶▶

Press it to fast forward a movie/music clip.

15. ANGLE

Press it to switch angle.

16. REPEAT

Press it to repeat the playback.

17. A-B

During the playback, press it to set two points, and repeatedly play the section between them.

18. PROGRAM

Press it to arrange the playing order of tracks.


19. NUMBER KEY 0-9

NOTES ON USING THE REMOTE CONTROL


1. Do not drop or step on the remote control or subject it to shocks.
2. Note that the remote control may not work if there is any obstacle between the remote control sensor and itself.
3. Do not expose the remote sensor to strong light. Doing so may make operation impossible.
4. Use the remote control within the specified operating range.

REPLACING THE BATTERY

1. Use your fingernail to press A and pull out the battery holder B according to the indicated direction.

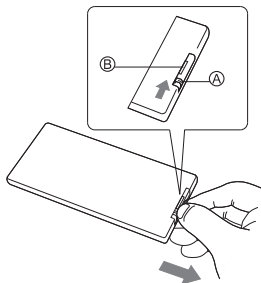


 2. Remove the old battery, and put a new one onto the battery holder with the + side facing upwards.




Lithium Battery (CR2025)

3. Put the battery holder back to its place.

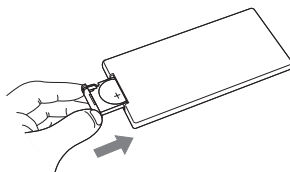**Note:**


- To prevent leakage of fluid from the lithium battery, remove the battery when not using the remote control for a long time (one month or more).
If the battery leaks fluid, carefully take the battery out and wipe the battery holder, then replace the old battery with a new one.
Caution: The battery may present a risk of fire if not handled properly. Do not recharge, disassemble, or heat it above 100°C.
- Replace battery with the same type.
- Dispose of used batteries properly, keep away from children and do not dispose it into fire.

CONNECTING THE ADAPTER TO A SOCKET

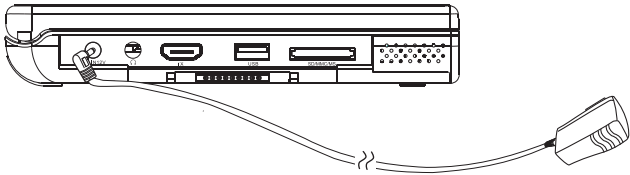


USING AN EARPHONE /AN AMPLIFIER

1. Set the volume to its minimum sound level.
2. Connect an earphone or an amplifier to the earphone jack.
3. Adjust the volume to a sound level you prefer.

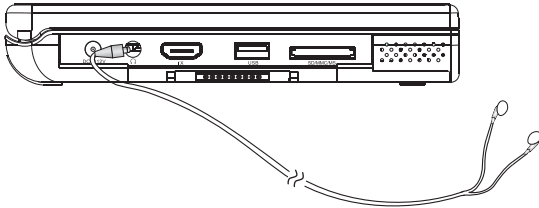

CONNECTING ACCESSORIES TO iX PORT


Connect accessories, such as AV cable, TV box, and FM transmitter, to the iX port as shown below.

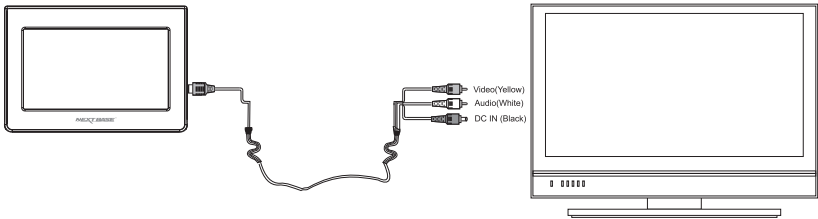

Note: Do not connect HDMI cable to the iX port, or it may cause damages.

INSERTING A USB DISK INTO THE PLAYER

Insert a USB disk as shown below.

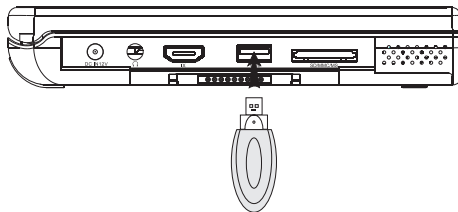


Note:

The player may not work properly if a USB disk is connected to a USB cable / hub.

INSERTING A MEMORY CARD INTO THE PLAYER

Insert a memory card as shown below.

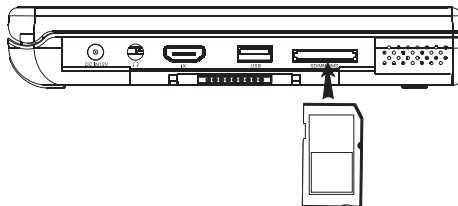


Note:

1. Because of various sizes of memory cards, please slightly adjust the angle if a memory card cannot be read.
2. Mini SD adapter or dual voltage SD cards may not be recognized by the player.
3. Please do not use an MS-PRO adapter with a surface whose paint has fallen off. Doing so may cause damages.

TURNING ON THE PLAYER

1. Connect the included AC/DC adapter to a socket.
2. Connect the DC output plug of the adapter to the DC input jack of the unit.
3. Once the player is connected to the adapter or the backplate of Click & Go headrest mount / Stanchion mount , the player will automatically turn on.

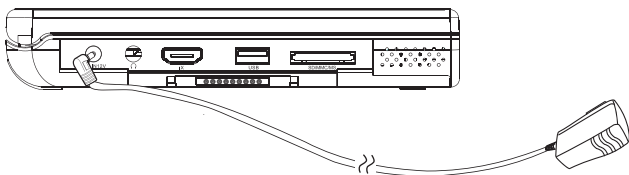

Note:

The included AC/DC adapter is compatible with voltage from 100V to 240V. You can use it overseas, and a converter plug may be used to fit into the region in which you are traveling.


SELECTING A LANGUAGE

When the player turns on for the first time, the following menu will pop up for you to select a language. 6 languages are provided: English, Deutsch, Español, Français, Italiano, and Swedish. Navigate to the language you prefer, and press ►|| to confirm.



TURNING OFF THE PLAYER

1. Press OFF / ■ on the unit for about 2 seconds.
2. Unplug the adapter from a socket.
3. Disconnect the DC output plug from the DC input jack.

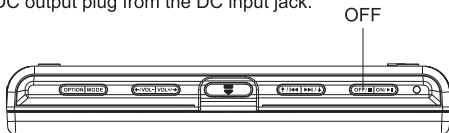


Note:


When there is not any operation in 5 minutes for either the main unit or the monitor, the main unit or the monitor will turn off automatically.

LOADING

1. Press the OPEN button on the unit to open the disc door.
2. Insert a disc, and press it down with your fingers near the center hole. You can hear a click sound.
3. Close the disc door.

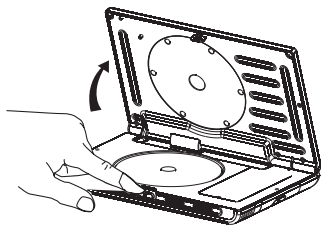

1

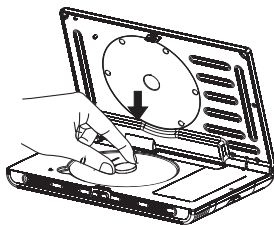


2

Note:

1. Make sure the disc is inserted properly. Failure to insert it properly may result in damages.
2. Do not use warped or cracked discs.
3. For single-sided discs, place them with the label side up.
4. For double-sided discs, since they have a recording layer on both sides of the disc, check each other carefully and make sure not to scratch them when removing them from the player.


PLAYBACK

1. Turn the power on.
2. Open the disc door, and insert a disc correctly.
3. Close the disc door.
4. The player will load the disc, and start the playback automatically. If not, press ►||.

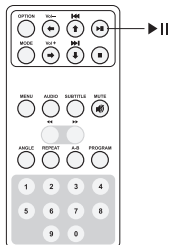


STOPPING PLAYBACK

1. Press ■ during the playback, and the player remembers the stopping point.
2. To resume playback from its stopping point, press ►||.
3. To cancel the stopping point, press ■ again in the STOP status. The player will not resume playback from the stopping point next time you press ►||.

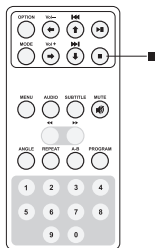

PAUSING PLAYBACK

1. Press ►|| during the playback.
2. To resume playback, press ►|| again.

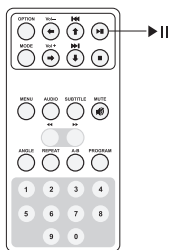

OPTION

When the OPTION button on the unit is pressed, an option list will pop up, which includes the settings of IR Headphone, Display, Setup, Disc Menu, Information, Mute, Audio, Subtitle, Repeat, and Zoom.



IR HEADPHONE





When an IR Headphone is connected to the player, you can select the channel you prefer. Navigate to IR Headphone, and press ► to enter the sub-menu.




- **Channel A:** If you want to select Channel A, select this, and press ► to confirm.
- **Channel B:** If you want to select Channel B, select this, and press ► to confirm.
- **Off:** When there is no IR headphone connected to the player or you want to turn off the IR headphone, select this, and press ► to confirm.

DISPLAY


Navigate to Display, and press **▶||** to enter the sub-menu.

 1. Brightness: Navigate to Brightness , press **▶||**, and then use **↑** and **↓** to adjust the brightness. Press **▶||** to confirm.
2. Color: Navigate to Color , press **▶||**, and then use **↑** and **↓** to adjust the color. Press **▶||** to confirm.
3. Screen ratio: Navigate to Screen ratio , press **▶||**, and then use **↑** and **↓** to select between 16:9 and 4:3. Press **▶||** to confirm.
4. AV IN: Navigate to AV IN  ^{AV IN}, press **▶||**, and then use **↑** and **↓** to select between CVBS and S-VIDEO. Press **▶||** to confirm.

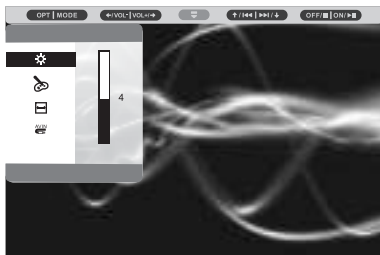

MONITOR DISPLAY

When adjusting Display of the monitor, navigate to the option you choose, press **ENTER**, and then use **↑** and **↓** adjust. Press **ENTER** again to confirm, or press **OFF** to exit the operation.

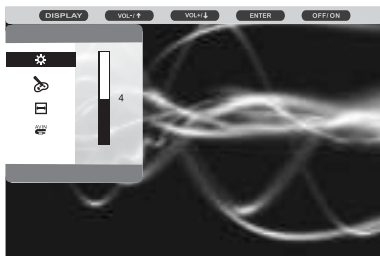


TV SYSTEM

Some DVDs have set up TV Systems, and their TV Systems may be varied. Before playing a DVD, you need to check its TV System first, and select the proper system. Navigate to Setup, press ► to pop up the menu of TV System, and press ► again to enter the menu.

- **NTSC:** Select this if the player is connected to a NTSC TV.
- **PAL:** Select this if the player is connected to a PAL TV.
- **Auto:** Select this if the player is connected to a multi-system TV.

The default setting is Auto.

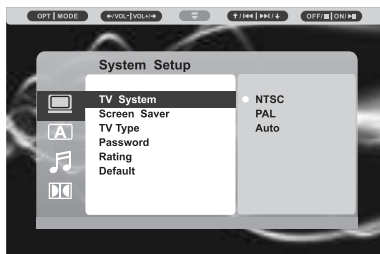


Note:

If an incorrect TV system is selected, the picture will be displayed in black and white.

SCREEN SAVER

Navigate to Screen Saver, and press ► to enter the sub-menu.


- **On:** Select this to activate the screen saver. When the player is in STOP or NO DISC status, or there is no motion for a long time, the screen will be displayed to protect the screen from damages.
 - **Off:** Select this to cancel the screen saver.
- The default setting is On.

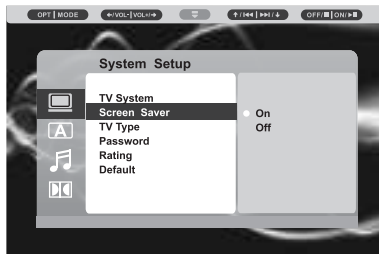

TV TYPE

Navigate to TV Type, and press **▶|** enter the sub-menu.


- **4:3PS** : Select this to adjust DVD aspect ratio to 4:3 pan & scan.
- **4:3LB** : Select this to adjust DVD aspect ratio to 4:3 letterbox.
- **16:9** : Select this to adjust DVD aspect ratio to 16:9.

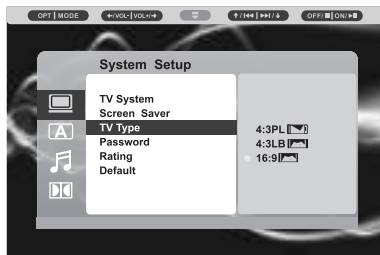

PASSWORD

The Password function is provided for parents to give DVD access to their kids selectively.

- For the first time use, enter 0000 or the assigned password to unlock the parental control.
- Once the parental control is unlocked, go to the Rating menu and set the rating for a program.
- Assign a new password (4 digits) to lock the rating.
- If you forget the password you assign, enter 0000 to unlock the rating again.

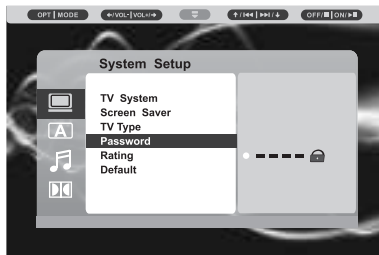


RATING

The RATING function works with those DVDs which a rating has been assigned to. This helps you to give DVD access to others selectively.

- 8 options are provided: Kid Safe, G, PG, PG13, PG-R, R, NC-17, and Adult.

The default rating is Adult.

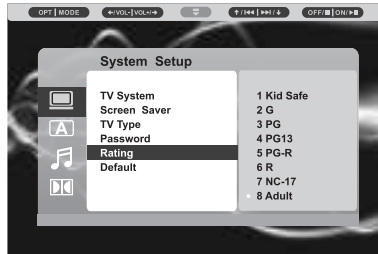

Note:

When the Password function is locked, you cannot change the rating.

DEFAULT

Select this to resume all the settings to default.



LANGUAGE

Navigate to Language Setup, press ► to enter the DISPLAY menu, and press ► again to enter the LANGUAGE menu.

- 6 optional languages are provided: English, Deutsch, Español, Français, Italiano, and Swedish.
- Select the language you prefer, and press ► to confirm.
- The default language is English.



SUBTITLE

Navigate to Subtitle, and press ► to enter the sub-menu.

- If you want to play a DVD with subtitle, select On, and press ► to confirm.
- If you want to play a DVD without subtitle, navigate to Off, and press ► to confirm.



AUDIO OUT

Navigate to Audio Setup, press ► to highlight the AUDIO OUT menu, and press ► again to enter the sub-menu. There are 3 optional audio output modes: Analogue, SPDIF/RAW, and SPDIF/PCM.

- **Analogue:** analogue output audio signal.
- **SPDIF/RAW:** digital decoder/amplifier audio signal output.
- **SPDIF/PCM:** digital audio signal output for use with digital stereo amplifier.



SOUND EFFECT

Navigate to Digital Setup, press ► to enter the Sound Effect menu, and press ► again to enter the sub-menu. 2 sound output effects are provided: Normal and Surround. Choose the effect you prefer, and press ► to confirm.




DYNAMIC RANGE

Navigate to Dynamic Range, and press ► to enter the sub-menu. This setting is to adjust the line out compressing ratio and get different effects. Use and to adjust it, and press ► to confirm.

If Off is selected, the audio signal peak value will be compressed to its minimum;

If Full is selected, to its maximum.

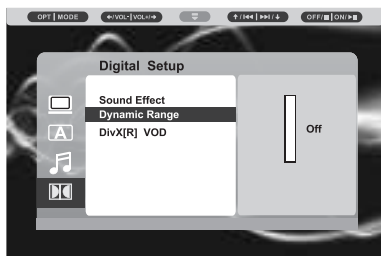


DIVX[R] VOD

DivX(R) VOD files are downloaded after paying a rental from certain commercial websites. Prior to downloading a VOD you need to input the registration number of your DVD player on the purchase form on the site. Write down the VOD 8-character registration number so that you can fill in the form on the website you purchase your DivX(R) VOD files from

To check the registration number, press **OPTION** on the unit or on the remote control, navigate to **Setup**, and press **▶II** to enter the sub-menu. Navigate to **Digital Setup**, and press **▶II** to pop up the interface below.



Then press **▶II** again, and the message below will appear.

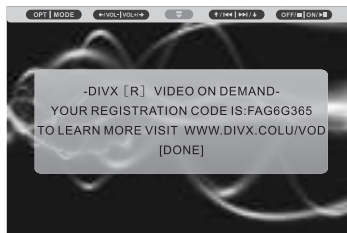


Note:

1. The registration code will be changed each time you use it to download the DivX(R) files. You have to use new code to carry out downloading operation next time.
2. If you cannot play a DivX VOD file recorded on a CD-R disc after downloading it, the rental period allocated during purchasing from the website may have expired. It is also possible that the recorded file is not compatible with your player because of different versions or incorrect download parameters. The parameters used when copying to CD-R may be another reason for this.
3. Since it is not possible here to supply all the information, parameters and advice relating to the use of DivX(R) VOD files, we recommend that you visit specialist websites such as WWW.DIVX.COM/VOD.

DISC MENU


If a disc is provided with a menu, you can display the menu by navigating to Disc Menu and pressing ►, or by pressing the MENU button on the remote control.

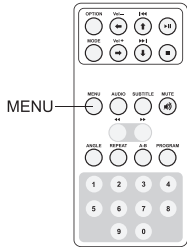

INFORMATION


Navigate to Information, and press ►. The disc and playback information will be shown on the top of the screen.



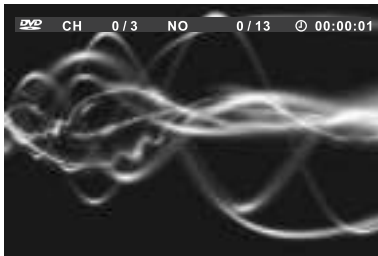


MUTE

To mute the sound, you can either navigate to MUTE and press **▶II**, or press the MUTE button on the remote control. Repeating the above step will un-mute the sound.

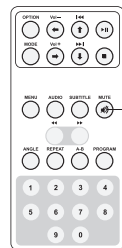

AUDIO


If a DVD is provided with different audio languages, you can choose the audio language you prefer by navigating to Audio and pressing ►, or by pressing the AUDIO button on the remote control.

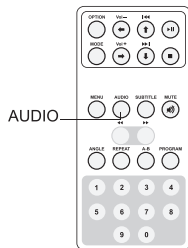**Note:**

For VCD or CD, you can choose different channels to play.


SUBTITLE

Select the subtitle you prefer on DVDs by navigating to Subtitle and pressing **▶▶**, or pressing the SUBTITLE button on the remote control during playback.

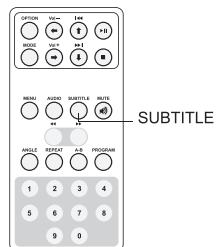

REPEAT

During a playback, if the option Repeat is selected, or the Repeat button on the remote control is pressed, the title/chapter of a DVD or the track/entire disc of a CD will be played repeatedly.

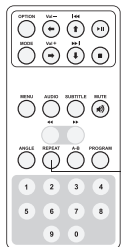

Note:

The REPEAT mode will be changed each time the REPEAT button is pressed.

ZOOM

If you want to zoom the picture on the screen, navigate to Zoom and press **▶▶**. The zooming rate will be changed to 2, 3, 4, 1/2, 1/3, 1/4 and 1 time its original size each time the button is pressed.



Zoom: x2 ↓



Note:

If the option ZOOM is selected during the playback, the movie will be automatically paused.

MODE

When the MODE button on the unit is pressed, an option list will pop up, which includes DVD, USB, Memory Card, and AV Input.



- **DVD:** Select this if you want to play the DVD inside the player. Navigate to **DVD VIDEO**, and press **▶||** to start the playback.
- **USB:** Select this if you want to watch the video clips, listen to music, or view pictures in a USB disk. Navigate to **USB**, press **▶||** to load the USB disk, and the menu below will pop up.
- **Memory Card:** Select this if you want to watch the video clips, listen to music, or view pictures in a memory card. Navigate to **Memory Card**, press **▶||** to load the card, and the menu below will pop up.



- **AV INPUT:** Select this if an ATV box (optional) or a DVB box (optional) is inserted into the player. Navigate to **AV INPUT**, and **press** to load the contents in ATV/DVB box.

USB AND MEMORY CARD READING

- When inserting a USB disk and a memory card at the same time, the player will play the contents in the storage which was inserted in the player last time.
- If a storage base is connected to the player while another storage base is playing, the playback will stop, and the player will play the media contents in the newly-inserted storage base.




PLAYING AT FAST SPEED

1. Press ◀◀ or ▶▶ on the remote control during playback.
2. The playback speed will be changed each time you press or. It will respectively change to 2, 4, 8, 20 and 1 time its normal speed.

Note:

When a disc (except for CD or MP3 disc) is playing at fast speed, the sound will be muted.

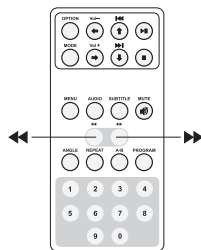

A-B PLAYBACK

1. During a playback, if A-B button on the remote control is pressed once, the current point will be located by the remote control, and Repeat A- will appear on the screen.
2. Press A-B button again, point B will be located, and the player will play from point A to point B repeatedly.
3. Press A-B button for the third time to cancel the A-B playback, and the player will resume its normal playback.




1



2





3

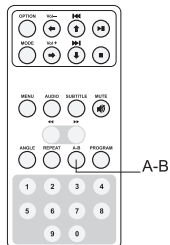

ANGLE


 
While playing a scene recorded with multiple angles, press the ANGLE button on the remote control to change the angle. If the scene is not recorded with multiple angles, the button will be invalid.

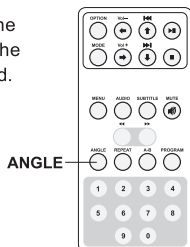


PROGRAM

The PROGRAM function can automatically play chapters or tracks according to the order you program.


1. After inserting a disc, press the PROGRAM button on the remote control, and the menu below will pop up.

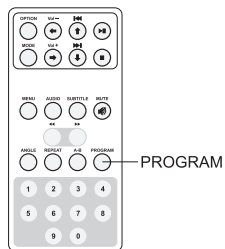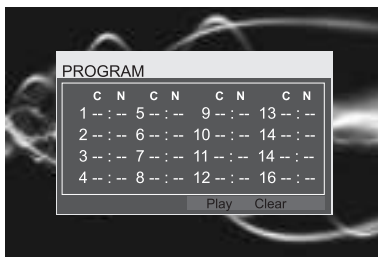

2. Use \uparrow , \downarrow , \leftarrow , \rightarrow and the number keys to select chapters, and arrange them in an order you prefer.

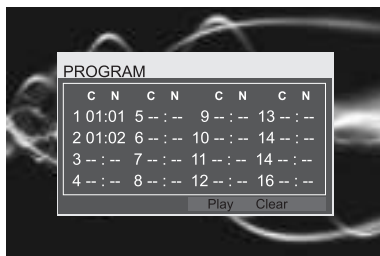

3. Use \uparrow , \downarrow , \leftarrow , \rightarrow to move the cursor to Play, and press \blacktriangleright to confirm.

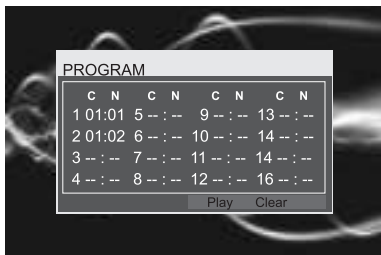

4. To cancel the program, press the PROGRAM button again.

Note:


1. When the player is off or the disc is taken out, the program you arrange will be removed.
2. If the chapter you select does not exist, the program playback will be canceled automatically.
3. This function may be invalid in some discs.

PLAYING A DISC IN MP3 OR JPEG FORMAT


When a disc is inserted and if there is an MP3 file in the disc, the player will play the file automatically as shown below.




Press OFF to exit the page and enter the folder list.

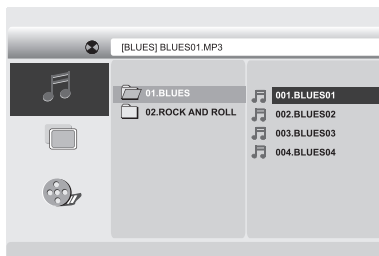

■ If you want to listen to music:

1. Navigate to , and press ► to enter the folder list.
2. Select the folder which stores the music clips you want to listen to, and press ► to enter the folder.
3. Select the clip you prefer, and press ► to start playing it.


4. During playback, you can press the A-B button to get the A-B repeat function. Or, you can press the REPEAT button to change the repeat modes, which includes Repeat: [Repeat 1] means repeating the clip that is playing; Repeat: [Repeat Dir] means repeating the folder; Repeat: [Repeat All] means repeating the disc; and Repeat: [Repeat Off] means no repeating.

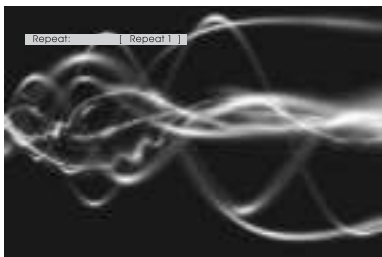


Note: When the disc is a DVD, the options are Repeat: [Off], Repeat: [Chapter] and Repeat: [Title]; for other discs, the options are Repeat: [Repeat 1], Repeat: [Repeat Dir] , Repeat: [Repeat All] and Repeat: [Repeat Off].

5. Press ■ to stop the playback, and press ■ again if you want to go back to the folder list.




 
■ If you want to view JPEG files:

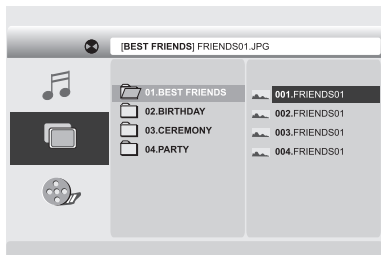
1. Navigate to , and press **▶||** to enter the folder list.
2. Select the folder which stores the JPEG files you want to view, and press **▶||** to enter the folder.
3. When you navigate in the folder, the JPEG file you navigate to will be displayed in its thumbnail form in the middle blank.
4. Select the JPEG you prefer, and press **▶||** to view it in full screen.



5. Press **■** to stop the full-screen display, and press **■** again if you want to go back to the folder list.

■ If you want to watch video clips:

1. Navigate to , and press  to enter the folder list.
2. Select the folder which stores the clips you want to watch, and press  to enter the folder.
3. Select the clip you prefer, and press  to start playing it.
4. During playback, you can press the A-B button to get the A-B repeat function. Or, you can press the REPEAT button to change the repeat modes, which includes Repeat: [Repeat 1], Repeat: [Repeat Dir], Repeat: [Repeat All], and REP Off. REP1 means repeating the clip that is playing; REP DIR means repeating the folder; REP ALL means repeating the disc; and REP Off means no repeating.

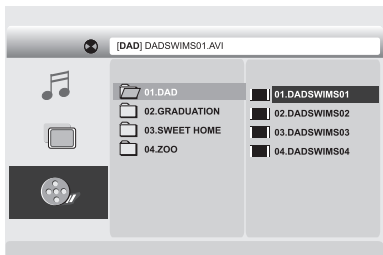

5. Press  to stop the playback, and press  again if you want to go back to the folder list.

DIMENSION AND PARAMETERS

Product name:	Click 9 Click 9 Duo Click 9 Duo Deluxe
Power:	12V / 1.5A
Consumption:	
Main unit:	<14W
Monitor:	<6.7W
Audio out:	Line L/R
Video out:	S-Video / CVBS
Main unit size:	252x174x30mm
Monitor size:	252x174x24.8mm
Main unit weight:	850g
Monitor weight:	550g

TROUBLE SHOOTING

Symptoms	Possible causes	Remedies
The disc does not play	Disc is not loaded correctly.	Load the disc with the label side up, and firmly press it into the center hole.
	Disc is scratched or not clean.	Make sure there is no scratch or fingerprint on it.
	Wrong regional disc.	Use the right regional disc.
No display	AV cable is disconnected.	Connect the cable firmly.
	Wrong setting or connection for the player.	Setting or connecting correctly with your player.
	Wrong mode setting.	Set the right mode.
No sound	AV cable is disconnected.	Connect the cable firmly.
	Wrong setting or connection for the player.	Setting or connecting correctly with your player.

Maintenance and clean the unit only as recommended in the instruction manual.

A Liquid Crystal Display (LCD) screen is a multilayer complex component.

Under the tough outer plastic layer, the glass sandwich beneath holds the LCD crystals in place, which are themselves suspended in fluid. In the unfortunate event of an accident, particularly a sharp localized impact, the glass will break. The tough plastic outer sheet on the surface of the glass keeps all the glass intact underneath, preventing shards from falling out. This is a specific safety feature, particularly implemented for the younger user and also for in-car use. The broken glass normally shows signs of the impact mark and also cracks radiating away. The resultant fluid leakage renders the panel inoperable.

Symptoms are often a dark round mark, a white screen without picture and maybe some multicolored lines. Depending on the individual break, an element of the TV picture may remain for a while, but not for long, as the fluid leaks away. Some inky black staining may also appear upon the crack lines, as the fluid escapes.

Unfortunately a break of this nature is not covered under the manufactures warranty, as it is accidental damage to the product, rather than an original defect from manufacture. Please see below for some sample images of broken LCD panels for reference.



DAMAGE REQUIRING SERVICE

Have the unit serviced by a qualified service technician if:

- The unit has been exposed to rain or water.
- The unit does not seem to operate normally.
- The unit exhibits a marked change in performance.

DO NOT ATTEMPT TO SERVICE THE UNIT BY YOURSELF!



www.next-base.com

CLICK 9 SERIES-NB-ENG-MANUAL-A1

