

# Canon PIXMA MG5700 series

## Getting Started 1

### Démarrage 1

### Inbetriebnahme 1

### Aan de Slag-gids 1

### Guida Rapida 1

### Para Começar 1

### Guía de inicio 1

### ΞΕΚΙΝΩΝΤΑΣ 1

1



**Video Tutorials**  
Didacticiels vidéo  
Videolernprogramme  
Videozelfstudies

**Tutorial video**  
Tutorial em Vídeo  
Tutorial en vídeo  
Βίντεο με οδηγίες

<http://canon.com/ijssetup>



RMC (Regulatory Model Code): K10426

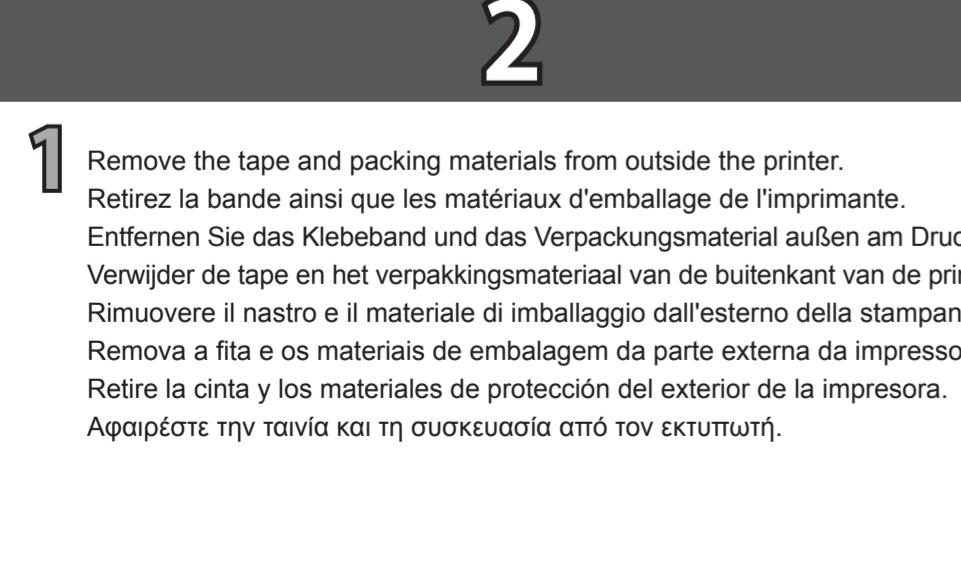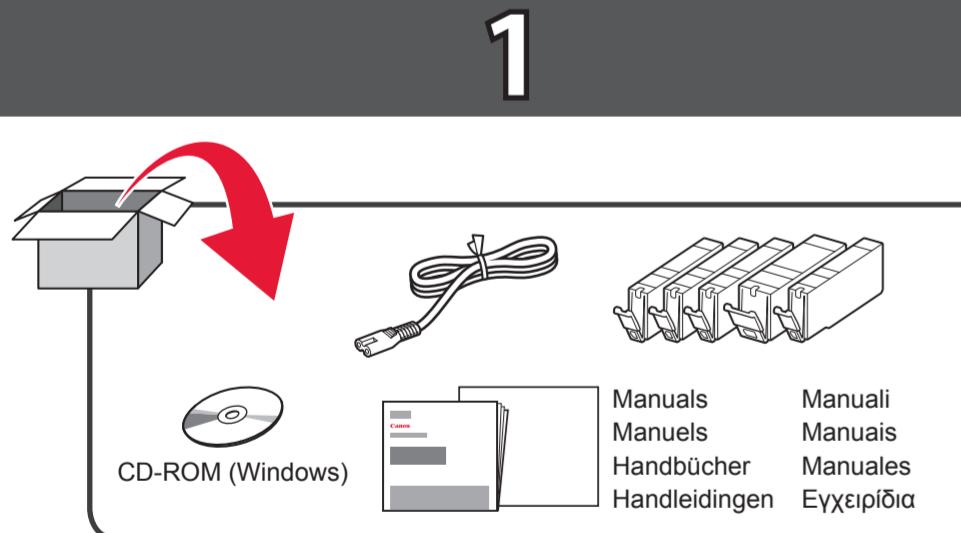

**1** Remove the tape and packing materials from outside the printer.  
Retirez la bande ainsi que les matériaux d'emballage de l'imprimante.  
Entfernen Sie das Klebeband und das Verpackungsmaterial außen am Drucker.  
Verwijder de tape en het verpakingsmateriaal van de buitenkant van de printer.  
Rimuovere il nastro e il materiale di imballaggio dall'esterno della stampante.  
Remova a fita e os materiais de embalagem da parte externa da impressora.  
Retire la cinta y los materiales de protección del exterior de la impresora.  
Αφαιρέστε την τανία και τη συσκευασία από τον εκτυπωτή.

