

LCM8 and LCM16 Local Console Managers

Product Guide

The 1x8 and 2x16 Local Console Managers (LCM8 and LCM16) are the next generation analog keyboard-video-mouse (KVM) console managers that provide enhanced local access, management, and security capabilities to Lenovo server environments.

The LCM8 has eight target ports and supports one local user, and the LCM16 has 16 target ports and supports up to two local users. Local video resolution can be up to 1600x1200 or 1680x1050 (widescreen). Two level tiering allows you to manage up to 256 servers connected to multiple switches from one local console. The following figure shows the LCM8 and LCM16.



Figure 1. The Local Console Managers: LCM8 (top) and LCM16 (bottom)

Did you know?

The LCM8 and LCM16 support Two Factor Authentication (TFA), a system where two different security elements are used in conjunction to authenticate to a server or desktop. TFA is an authentication process where a person proves their identity with two methods: *something you know* (for example, a password or PIN) and *something you have* (such as a smart card). Use of TFA is growing due to requirements by governments and other institutions with a high need for security. An example of a TFA device that the Local Console Managers support is the CCID-compliant Common Access Card (CAC) reader.

You can use the LCM8 and LCM16 with a Global Console Manager to provide network-wide remote access with out-of-band access to servers, network equipment, and other devices with serial configuration or console ports all from a single appliance. This unified approach improves staff efficiency by reducing the time required to remotely diagnose, reconfigure, repair, or restore servers and network devices and other hardware with serial configuration, management consoles, or both.

Part number information

Ordering information is shown in Table 1. Note that when ordering with feature codes, use machine type-model 1754HC3 for the LCM8 and 1754HC4 for the LCM16.

Table 1. Ordering part numbers and feature codes

Description	Part number	LCM8 feature code	LCM16 feature code
Local 1x8 Console Manager (LCM8)	1754A1X	1754HC3 fc 0725	Not applicable
Local 2x16 Console Manager (LCM16)	1754A2X	Not applicable	1754HC4 fc 0726
Virtual Media Conversion Option Gen2 (VCO2)	46M5383	1754HC3 fc 5341	1754HC4 fc 5341
1754 LCM Digital Activation Key	81Y2393	1754HC3 fc A17X	1754HC4 fc A17X

The LCM8 Local Console Manager includes the following items:

- An 8-port console switch
- Mounting hardware for an EIA space for rack sidewall compartment
- One 1U filler panel
- One 1.5 m C13/C14 rack power cable
- One RJ45-DB9F DCE adapter for use with the Setup port
- One RJ45-DB9M DTE adapter for use with the Modem port
- Eight terminators for daisy-chaining configurations
- Installation publications and warranty

The LCM16 Local Console Manager includes the following items:

- A 16-port console switch
- Mounting hardware for an EIA space for rack sidewall compartment
- One 1U filler panel
- One 1.5 m C13/C14 rack power cable
- One RJ45-DB9F DCE adapter for use with the Setup port
- One RJ45-DB9M DTE adapter for use with the Modem port
- 16 terminators for daisy-chaining configurations
- Installation publications and warranty

Each of the Conversion Option parts listed in Table 1 ships with:

- One Conversion Option
- Installation publications and warranty

The 1754 LCM Digital Activation Key includes the following:

- One USB key
- Installation instructions

The Local Console Managers enable you to share one workspace (keyboard, mouse, and display) across many target systems. The target systems are connected to the console switch via CAT-5 cables and the appropriate conversion option at the target end.

With server densities continually increasing, cable bulk remains a major concern for network administrators. The LCM8 and LCM16 switches significantly reduce KVM cable volume in the rack by utilizing the innovative conversion option cables and single, industry-standard CAT-5 UTP cabling. This allows a higher server density while providing greater airflow and cooling capacity. In addition, multiple target systems can be daisy-chained together using CAT-5 cables, and then all connected to the console switch using one cable, thereby eliminating a lot of cable clutter.

The 1754 LCM Digital Activation Key, part number 81Y2393, is a upgrade that turns the LCM KVM analog switch into a digital device enabling remote access to servers it is connected to. This device enables one remote user. The Digital Activation Key is a small USB device that is inserted into one of the USB ports at the rear of the unit. The following figure shows the Digital Activation Key. An LED on the end of the key shows its status.



Figure 2. 1754 LCM Digital Activation Key

Feature comparison

The following table compares the two LCM console switches.

Table 2. Comparison of features

Feature	LCM8	LCM16
Part number	1754A1X	1754A2X
Number of local concurrent users	1	2
Local user connections: KVM	VGA + USB	VGA + USB
Local user connections: Extra USB	Yes	Yes
Remote user connections	Optional, with LCM Digital Activation Key	Optional, with LCM Digital Activation Key
Maximum number of target systems: Direct (analog rack interface (ARI) ports)	8	16
Maximum number of target systems: Daisy-chained	128	256
Maximum number of target systems: Tiered configuration	128	256
Maximum video resolution	1600x1200 (4:3) 1680x1050 (wide)	1600x1200 (4:3) 1680x1050 (wide)
Support for Virtual Media Conversion Option Gen2, VCO2 (46M5383)	Yes	Yes
Virtual Media	Yes	Yes
Tiering	Yes	Yes
Two Factor Authentication (TFA) device support	Yes	Yes
Password protection	Yes	Yes
Serial port	Yes	Yes
True serial capabilities	No	No
Ethernet port (10/100)	Yes	Yes
Supports remote access with LCM Digital Activation Key	Yes	Yes
IPv6 support	Yes	Yes
Keep Alive feature in Conversion Options	Yes	Yes
Firmware upgrades to the console switch	Via Ethernet or serial	Via Ethernet or serial
Firmware upgrades to the COs	Via Web GUI or serial	Via Web GUI or serial
Input power	100-240V, 50/60 Hz 8.5W power, 15W max	100-240V, 50/60 Hz 8.5W power, 15W max

Connections

The following figure shows the connections on the LCM16 Local Console Manager. The LCM8 Local Console Manager has identical connections except it only has one local user port and eight analog rack interface (ARI) ports, whereas the LCM16 has two local user ports and 16 ARI ports.

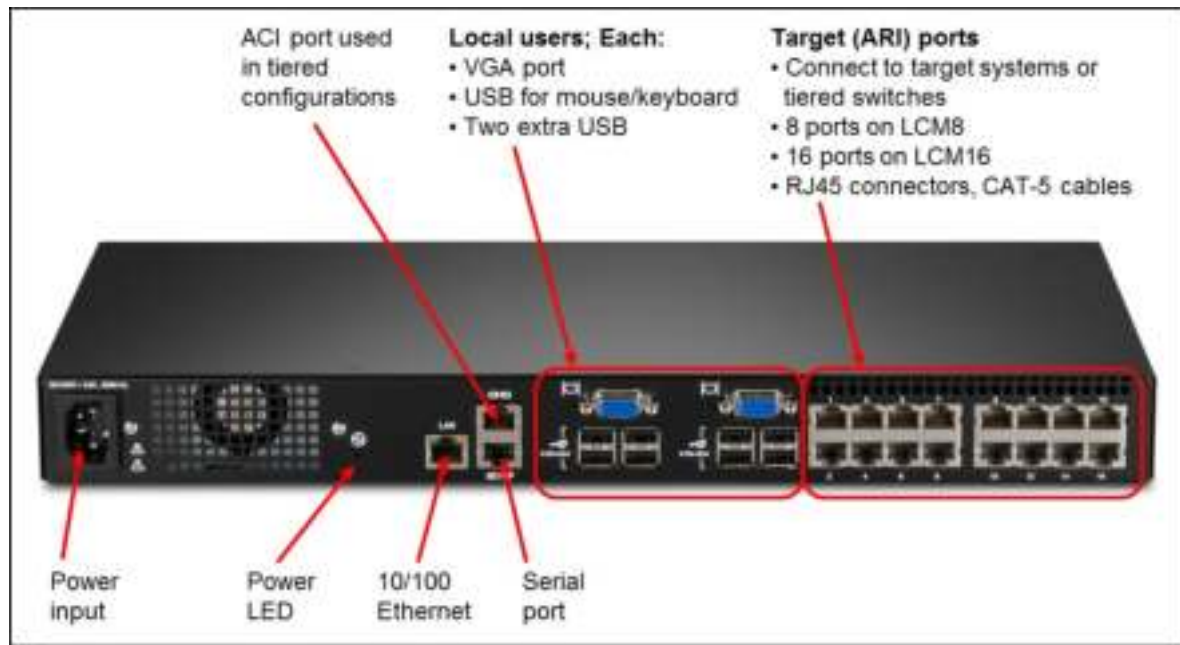


Figure 3. Connections on the LCM16 Local Console Manager

Note: The above figure shows the rear of the unit. There are no connectors on the front of the unit.

Features

Details about the features of the LCM8 and LCM16 are discussed in this section.

Local users

The LCM8 console switch enables one local user and the LCM16 console switch enables two local users to access any attached servers. Local displays are connected to the console switch using VGA analog connections and local keyboards and mice use USB connections.

Two additional USB ports (for a total of four USB ports) are available for each local user, and devices plugged into these ports (for example, memory key, optical drive, and CAC reader) are visible to the target servers if a Virtual Media Conversion Option Gen2 (VCO2), part number 46M5383 is used. Note, however, that the VCO2 does not support chaining of target systems. (There is more information about virtual media in the "Virtual media" section below.)

For the LCM16, if the target server is currently in use, a second user attempting to gain access will be given an opportunity to force a connection to the device if their preemption level is equal to or higher than the current user's level. If the user attempting to gain access has a lower preemption level, the active user will be asked if they wish to give up control to the new user (a timeout is also configurable).

Target systems

The LCM16 has 16 target system ports (known as analog rack interface (ARI) ports) and the LCM8 has eight target system ports. These can be directly attached to systems with the appropriate USB or PS/2 conversion option connector on the end. These connections use standard CAT-5 cables. You can increase the number of connected target systems by two methods: chaining or a tiered arrangement of switches. (There is more information about these options in the [Chaining](#) and [Tiered consoles](#) sections below). Both methods mean that each of the eight or 16 ports will have multiple systems connected to it. You can mix connection methods.

Conversion options

These are cable-connector combinations that are connected between the CAT-5 cables from the console switches to the target systems. The figure below shows the conversion option cables that can be used with the console switches. The part numbers are listed in the [Part number information](#) section.

The Virtual Media Conversion Options (VCO and VCO2) supports the virtual media capability of the console switches; however, they do not support chaining.

Note: The KVM and USB conversion options are withdrawn from marketing.

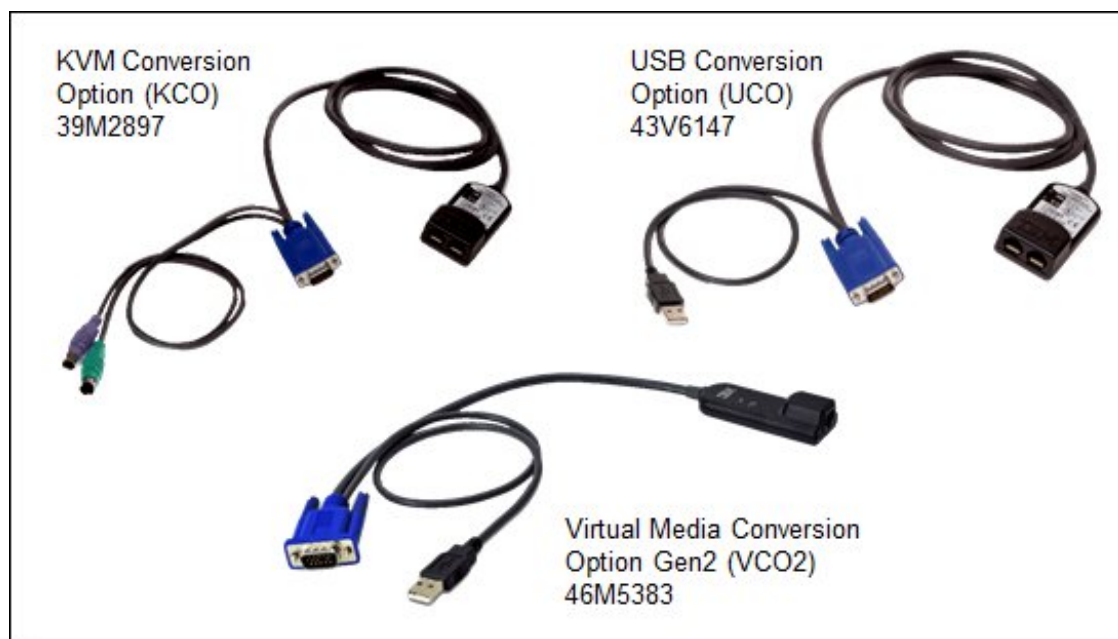


Figure 4. Supported conversion options

The built-in memory of each connection option helps simplify the configuration by assigning and retaining unique server identification codes for each attached server. This integrated intelligence enhances security and helps prevent unauthorized access to a server through cable manipulation. The connection option is powered directly from the server, providing Keep Alive functionality even if the server is not powered on.

Supported video resolutions are listed in the following table.

Table 3. Supported video resolutions

VCO2 Standard (4x3)	VCO Widescreen (withdrawn)	KCO & UCO (withdrawn)
640 x 480 @ 60 Hz 800 x 600 @ 75 Hz 960 x 700 @ 75 Hz 1024 x 768 @ 75 Hz 1280 x 1024 @ 75 Hz 1600 x 1200 @ 60 Hz	800 x 500 @ 60 Hz 1024 x 640 @ 60 Hz 1280 x 800 @ 60 Hz 1440 x 900 @ 60 Hz 1680 x 1050 @ 60 Hz 1920 x 1080 @ 60 Hz	640 x 480 @ 60 Hz 800 x 600 @ 75Hz 1024 x 768 @ 75 Hz 1280 x 1024 @ 75 Hz

Local and remote user interfaces

The LCM8 and LCM16 offer two user interfaces to manage connections:

- An on-screen display (OSCAR) accessible via the Print Screen button on either local user keyboard. This interface is used to control connectivity to the target servers.
- A Web browser interface accessible from any computer on the same Ethernet network as the console switch (provided the Ethernet port of the console switch is connected and properly configured). This interface is used to configure and manage the appliance.

Virtual media

The LCM8 and LCM16 support virtual media when the target systems are connected using the Virtual Media Conversion Option Gen2 (VCO2), part number 46M5383. You can use virtual media support to connect USB 2.0 media devices to the console switch using one of the four USB ports and make those devices available to any connected system. With this feature, you can install software, install, upgrade, or recover the operating system, update the BIOS code, or boot the target system from a USB drive.

Control of how the USB device is connected to the target system is managed through the user interface. The user interface presents the following configuration options:

- Virtual Media Locked: The locking option specifies whether a virtual media session is locked to the KVM session on the target device. When locking is enabled (default) and the KVM session is closed, the virtual media session will also be closed. When locking is disabled and the KVM session is closed, the virtual media session will remain active.
- Allow Reserved Sessions: Ensures that a virtual media connection can only be accessed with your user name and that no other user can create a KVM connection to that target device. When the associated KVM session is disconnected, the virtual media session may be disconnected according to the Locked setting.
- Write Access: With this option, you can specify whether the target system can write to the USB device (assuming it is writable).
- Encryption: You can configure encryption levels for virtual media sessions. The choices are None (default), 128-bit SSL (ARCFOUR), DES, 3DES, and AES.

Note that USB ports are assigned to a single virtual media session and cannot be independently mapped. This means you cannot map one USB device to one target system and another USB device to another target system.

Use of smart cards to authenticate access

The LCM8 and LCM16 switches allow you to use CCID-compliant smart cards to ensure access is authorized. Smart cards are pocket-sized cards that store and process information and enable Two Factor Authentication (TFA). Smart cards can be used to store identification and authentication to enable access to computers, networks, and secure rooms or buildings. Smart card readers are connected directly to the switch via one of the USB ports.

Note: For smart card use, the target device must be connected to the console switch using the Virtual Media Conversion Option Gen2 (VCO2), part number 46M5383. Other conversion options such as the VCO are not supported with smart cards.

Tiered consoles

You can tier multiple rack console switches to enable access to additional servers. In a tiered system, an ARI port on the main rack console switch connects to the Analog Console Interface (ACI) port of a tiered rack console switch (see the [Connections](#) section for a photo showing the locations of these ports). Consider a tiered configuration if you want to manage servers connected to multiple switches from one central location. For example, you could have a primary LCM16 console switch with 16 switches tiered underneath it that all have servers chained to their ports.

The LCM8 and LCM16 support two levels of tiering. The use of virtual media and smart card authentication are both supported only when primary and secondary switches are LCM8 or LCM16 console switches.

The following figure shows an example of tiered consoles. The red connections are simply CAT-5 cables between an ARI port on the master and the ACI port of each secondary switch.

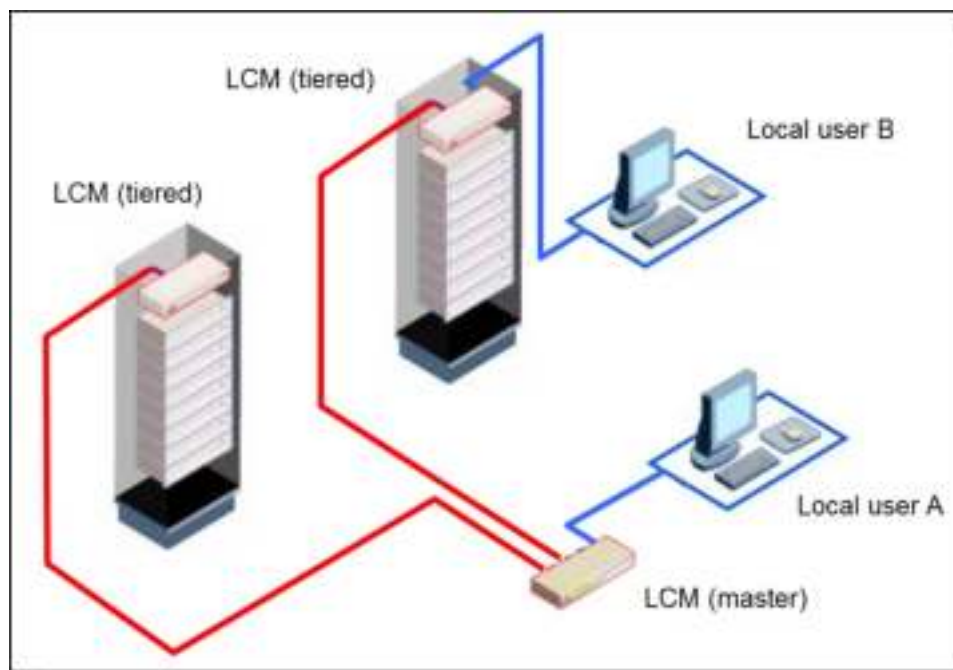


Figure 5. Tiered consoles

If there are local users attached to other tiered consoles, each can control target systems connected to that specific console. The local user at the primary console (Local user A in the figure) can preempt other local users if necessary.

The LCM8 supports up to 128 target systems and the LCM16 supports up to 256 target systems in a tiered configuration.

If the master switch is a Global Console Manager, GCM16 (1754D1X), or GCM32 (1754D2X), then tiering can also be used with the additional benefit of supporting remote network-attached users.

Physical specifications

The LCM8 and LCM16 have the following specifications:

Height: 4.37 cm (1.72 inches): 1 rack unit (1R)

Width: 43.2 cm (17 inches)

Depth: 16.5 cm (6.5 inches)

Weight: 1.9 kg (4.2 lb)

Operating environment

The adapter is supported in this environment:

- Temperature:
 - Operating: 0° to 50°C (32° to 132°F)
 - Non-operating: -20° to 70°C (-4° to 158°F)
- Relative humidity:
 - 10% to 95%

Warranty

The LCM8 and LCM16 have a three-year limited warranty.

Server support

The console switches are supported connected to the servers listed in the following tables.

Support for ThinkSystem servers

Table 4. ThinkSystem server support

Part number	Description	2S Rack & Tower							4S Rack			Dense/ Blade	
		ST550 (7X09/7X10)	SR530 (7X07/7X08)	SR550 (7X03/7X04)	SR570 (7Y02/7Y03)	SR590 (7X98/7X99)	SR630 (7X01/7X02)	SR650 (7X05/7X06)	SR850 (7X18/7X19)	SR860 (7X69/7X70)	SR950 (7X11/12/13)	SD530 (7X21)	SN550 (7X16)
1754A1X	Local 1x8 Console Manager (LCM8)	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	N	N
1754A2X	Local 2x16 Console Manager (LCM16)	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	N	N

Support for System x and dense servers with Xeon E5/E7 v4 and E3 v5 processors

Table 5. Support for System x and dense servers with Xeon E5/E7 v4 and E3 v5 processors

Part number	Description	x3250 M6 (3943)	x3250 M6 (3633)	x3550 M5 (8869)	x3650 M5 (8871)	x3850 X6/x3950 X6 (6241, E7 v4)	nx360 M5 (5465, E5-2600 v4)	sd350 (5493)
1754A1X	Local 1x8 Console Manager (LCM8)	Y	Y	Y	Y	Y	N	N
1754A2X	Local 2x16 Console Manager (LCM16)	Y	Y	Y	Y	Y	N	N

Support for servers with Intel Xeon v3 processors

Table 6. Support for servers with Intel Xeon v3 processors

Part number	Description	x3100 M5 (5457)	x3250 M5 (5458)	x3500 M5 (5464)	x3550 M5 (5463)	x3650 M5 (5462)	x3850 X6/x3950 X6 (6241, E7 v3)	nx360 M5 (5465)
1754A1X	Local 1x8 Console Manager (LCM8)	Y	Y	Y	Y	Y	Y	N
1754A2X	Local 2x16 Console Manager (LCM16)	Y	Y	Y	Y	Y	Y	N

Support for servers with Intel Xeon v2 processors

Table 7. Support for servers with Intel Xeon v2 processors

Part number	Description	x3500 M4 (7383, E5-2600 v2)	x3530 M4 (7160, E5-2400 v2)	x3550 M4 (7914, E5-2600 v2)	x3630 M4 (7158, E5-2400 v2)	x3650 M4 (7915, E5-2600 v2)	x3650 M4 BD (5466)	x3650 M4 HD (5460)	x3750 M4 (8752)	x3750 M4 (8753)	x3850 X6/x3950 X6 (3837)	x3850 X6/x3950 X6 (6241, E7 v2)	dx360 M4 (E5-2600 v2)	nx360 M4 (5455)
1754A1X	Local 1x8 Console Manager (LCM8)	Y	Y	Y	N	Y	N	Y	Y	Y	Y	Y	N	N
1754A2X	Local 2x16 Console Manager (LCM16)	Y	Y	Y	N	Y	N	Y	Y	Y	Y	Y	N	N

Support for servers with Intel Xeon v1 processors

Table 8. Support for servers with Intel Xeon v1 processors

Part number	Description	x3100 M4 (2582)	x3250 M4 (2583)	x3300 M4 (7382)	x3500 M4 (7383, E5-2600)	x3530 M4 (7160, E5-2400)	x3550 M4 (7914, E5-2600)	x3630 M4 (7158, E5-2400)	x3650 M4 (7915, E5-2600)	x3690 X5 (7147)	x3750 M4 (8722)	x3850 X5 (7143)	dx360 M4 (7912, E5-2600)
1754A1X	Local 1x8 Console Manager (LCM8)	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	N
1754A2X	Local 2x16 Console Manager (LCM16)	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	Y	N

See the ServerProven Web site for the latest compatibility information:

<http://www.lenovo.com/us/en/serverproven/>

Rack support

The LCM8 and LCM16 Console Managers can be mounted in one of the following rack cabinets:

- 42U S2 Rack
- 42U Enterprise Rack
- 25U S2 Rack
- 11U Office Enablement kit
- S2 42U Dynamic Standard Rack
- S2 25U Standard Rack
- 1200 mm Deep Static Rack
- 1200 mm Dynamic Rack
- 42U Enterprise V2 Rack

Related publications and links

For more information, refer to these documents and websites:

- Lenovo Console Switches product page
<https://www3.lenovo.com/us/en/data-center/servers/server-options/system-x-options/rack-and-power-infrastructure/kvm-switches-and-consoles/c/kvm>
- Local Console Manager LCM8 and LCM16 Installation and User's Guide
<https://support.lenovo.com/docs/UM103303>
- Lenovo Press Product Guides for console switches and console kits:
<https://lenovopress.com/servers/options/kvm>
- US Announcement Letter
<http://ibm.com/common/ssi/cgi-bin/ssialias?infotype=dd&subtype=ca&&htmlfid=897/ENUS110-171>

Related product families

Product families related to this document are the following:

- [KVM Switches & Consoles](#)

Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service. Lenovo may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.
1009 Think Place - Building One
Morrisville, NC 27560
U.S.A.
Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. Lenovo may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk. Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

© Copyright Lenovo 2020. All rights reserved.

This document, TIPS0788, was created or updated on June 2, 2020.

Send us your comments in one of the following ways:

- Use the online Contact us review form found at:
<http://lenovopress.com/TIPS0788>
- Send your comments in an e-mail to:
comments@lenovopress.com

This document is available online at <http://lenovopress.com/TIPS0788>.

Trademarks

Lenovo and the Lenovo logo are trademarks or registered trademarks of Lenovo in the United States, other countries, or both. A current list of Lenovo trademarks is available on the Web at <https://www.lenovo.com/us/en/legal/copytrade/>.

The following terms are trademarks of Lenovo in the United States, other countries, or both:

Lenovo®

ServerProven®

System x®

ThinkSystem

X5

The following terms are trademarks of other companies:

Intel® and Xeon® are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

Other company, product, or service names may be trademarks or service marks of others.