

### User Manual USB 3.0 enclosure for a SATA HDD/SSD (6,35cm/2,5")



Silent Power Electronics GmbH  
Formerweg 8  
47877 Willich  
Germany  
support@lc-power.com  
www.lc-power.com

Thank you for purchasing this hard disk drive enclosure from LC-Power. Please read the manual before usage. Specifications may be subject to change without prior notice.

#### 1. Specifications

##### Hard disk drive enclosure for a 6,35cm/2,5" SATA HDD/SSD

- USB 3.0, downwardly compatible to USB 2.0 and USB 1.1
- For a 6,35cm/2,5" SATA hard disk drive/SSD up to 3TB
- Chipset for SATA I, II & III
- Plug'n'Play

##### Nominal data transfer rate:

- Superspeed up to 5Gb/s (USB 3.0)
- Highspeed up to 480Mb/s (USB 2.0)
- Fullspeed up to 12Mb/s (USB 1.1)

##### System compatibility:


Windows XP/Vista/7/8/10, Mac OS 9.1, Linux 2.4 or higher

##### Included in delivery:

Enclosure, USB 3.0 cable and manual


#### 2. Installation

##### Step 1:

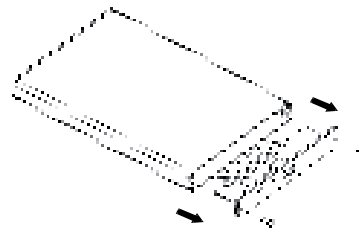

Unscrew both screws on the side of the enclosure and remove the circuit board.

##### Step 2:

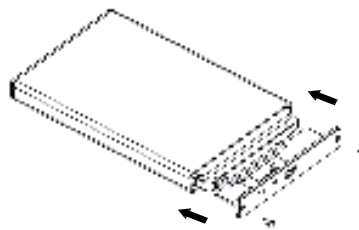

Carefully connect a 6,35cm/2,5" SATA hard disk drive (not included in delivery) with the matching connector of the PCB interface. Move the PCB interface and the hard disk drive into the enclosure and fix the interface with the screws to the enclosure.

#### 3. Notes

Avoid direct sunlight and a high temperature environment, keep the enclosure far away from fire and heat sources.

Keep it in dry places, keep it away from corrosiveness causing materials.

#### 4. Service

The product has a two year warranty period from the date of purchase, service issues will be handled by your dealer.

If the enclosure is damaged due to improper operation, the warranty period expires immediately.

The enclosure supports most hard disk drives. Incompatibility to a certain individual hard disk drive is not a reason for repair or replacement.

We recommend that parents should guide their children using the item, strictly following the notes in this manual.

Check [www.lc-power.com](http://www.lc-power.com) or contact us by e-mail at [support@lc-power.com](mailto:support@lc-power.com).