

BRASQ

USER MANUAL

F100

WARNING


If in the case the electric cable is damaged, please contact immediately technical service centre for a proper repair or substitution.

PRECAUTIONS

1. Do not plug the power cord into the outlet until the unit has been completely assembled.
2. Before connecting the plug, make sure the voltage of the unit and the outlet are the same.
3. Do not insert your fingers inside the grill or guard while the fan is working.
4. Do not attempt to force the louver to turn.

DESCRIPTION OF PARTS

1. Grill
2. Blade
3. Grill
4. Motor cover
5. Oscillating knob
6. Motor
7. Screw D
8. Extension pole
9. Height adjustment ring
10. Base cover
11. Base tube
12. Screw A
13. Shaft
14. Piano keys
15. Screw B
16. Blade screw
17. Screw C
18. Swivel adjustment knob
19. Grill Cover
20. Base
21. Remote control

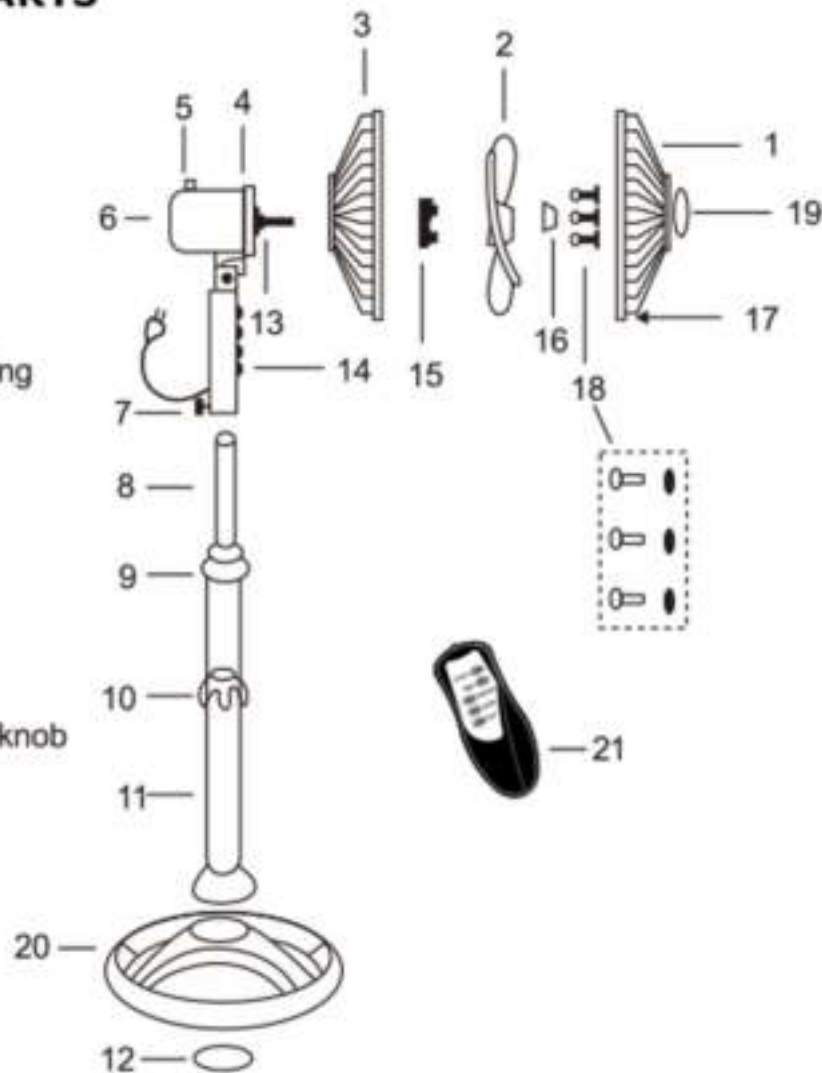

SAFETY:

- Read all instructions before using the appliance.
 - Always check that the voltage of the apparatus is the same as the electricity grid.
 - Do not insert your fingers, pens and other objects in the grid when the fan is running.
 - Disconnect the plug when you move the fan from side to side.
 - Disconnect the plug when you dismantle the grill to clean it.
 - Place the fan on a flat, stable surface to avoid tipping.
 - Avoid contact with water and heat sources.
 - Do not groped to adjust the fan, always turn to qualified personnel
- Before assembly and use, always check that the fan grills and the blades are not damaged.

BASE AND FAN ASSEMBLY:

1. Place the Base cap at the top of the base (see fig 1 above)
2. Fasten the lower pipe on the base with screws provided.
3. Slide the base cover onto the base along the pipe (see fig 3 above)
4. Put the height adjustment ring and fasten the connect position of the base and the extension pole.
5. After adjusting the height of the extension pole, place the switch box firmly on top of the extension pole and tighten with the screws provided.
6. Assemble the grill and the blade on the motor (see picture on page 1) and as described below
 - Place the back of the grill (3) towards the shaft (13) and secure it with screw.
 - Place the blade (2) on the shaft (13) and screw the blade screw (16) counter clockwise.
 - Place the front of the grill (1) on the back grill (3) and secure it with the clasps. Finally, for greater security, lock the two grills with the screw provided.
 - Place the grill cover (19) on the front grill (1)



fig 1



fig 2



fig 3



fig 4

INSTRUCTIONS FOR USE:

- a) To turn on the machine by pressing one of the buttons (1/2/3) placed on the Piano key (14).
- b) To turn off the fan press "0".
- c) Using the buttons you can change the speed of the blades and therefore change the air flow:
(1 slow, 2 medium, 3 fast).
- d) Oscillating knob (5): pressing this button down makes the fan start to oscillate. To disable the oscillation, pull the button upwards.
- e) Angle Adjustment: Loosen the knob at the side of the motor, adjust to the desired angle and tighten the knob again.

MAINTENANCE

1. Store the fan in a dry and cool place.
2. Always keep the unit clean from dust. Use a piece of soft cloth damped with water and soap to clean the dust and stains. Do not use any kind of solvents which can damage the product.
3. Once the fan is cleaned, pack it and store it in a cool and dry place.