



PowerA™

NANO ENHANCED WIRELESS CONTROLLER

USER MANUAL
Manuel de l'utilisateur
Bedienungsanleitung
Manual de usuario
Manuale per l'uso
Manual do usuário



Customer Service
Service client
Kundendienst
Servicio a clientes
Assistenza clienti
Apoio ao Cliente

PowerA.com/Support

BDA, LLC.
15525 Woodinville-Redmond Rd NE
Woodinville, WA 98072



Two year limited warranty

For warranty details or support with your authentic PowerA accessories, please visit PowerA.com/Support.



Beschränkte 2-Jahre-Garantie Informationen zur Garantie oder Unterstützung zu Ihrem PowerA-Originalzubehör finden Sie unter PowerA.com/Support.

Garantía limitada de dos años Si quieres más información sobre la garantía o necesitas ayuda con tus accesorios originales de PowerA, visita PowerA.com/Support.

Garantie limitée de deux ans Pour plus de détails sur la garantie ou pour obtenir une assistance pour vos accessoires PowerA d'origine, veuillez consulter le site PowerA.com/Support.

Garanzia limitata di due anni Per i dettagli sulla garanzia o per richiedere assistenza per i tuoi accessori PowerA autentici, visita la pagina PowerA.com/Support.

Garantia limitada de dois anos Para mais informações sobre a garantia ou os acessórios originais da PowerA, visita PowerA.com/Support.

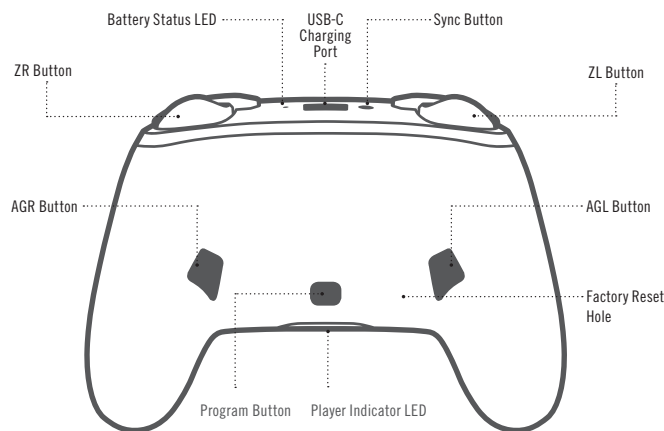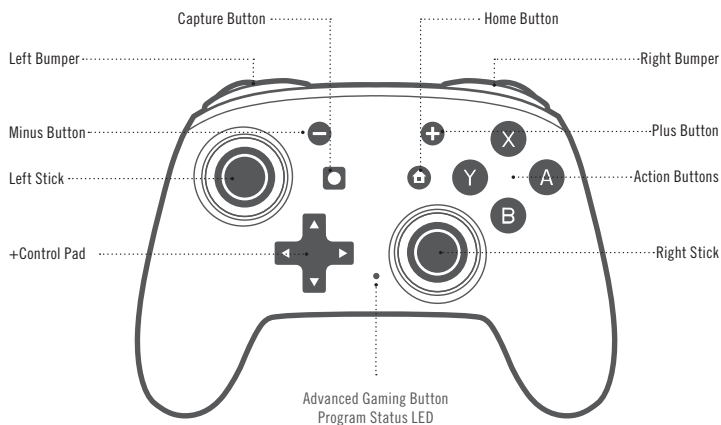

ENGLISH

CONTENTS

- Nano Enhanced Wireless Controller
- 6ft (1.8m) USB-C charge cable
- Pouch with drawstring
- User Manual

SET UP

Check for system update. Nintendo Switch™ system update version 6.0.1 or later is required for use of PowerA Wireless controllers.

1. Connect your Nintendo Switch to the Internet
2. Typically, system updates will be downloaded automatically when connected online.
3. Select 'System Settings' from HOME menu, then scroll down to 'System' to see System Update version and automatically check for system update.

For additional help, search 'system update' from Nintendo Support website.

RECHARGEABLE 600 MAH INTERNAL BATTERY

Controller was charged at the factory, but if top LED is flashing red, plug in USB cable to charge prior to initial pairing. Get up to 20 hours of game play when fully charged (other variables affect play time).

NOTE: Remember to charge controller at least once every 45-60 days (regardless of use) so battery retains ability to charge. Battery capacity will gradually reduce over time with repeated charging.

WIRELESS PAIRING



From the HOME Menu, select 'Controllers,' then 'Change Grip and Order.' While the following screen is displayed, press and hold down the SYNC Button for at least one second on the controller you wish to pair.

NOTE: After controller is paired once, it will auto-connect next time.

UNDERSTANDING LED INDICATORS

1. The top LED near the USB port will flash red when the internal battery is near depletion. Plug in USB cable to charge once indicator is flashing for uninterrupted game play. LED will turn solid red during charging, and off once fully charged.
2. The front LED (between Right stick and +Control Pad) indicates controller will flash during programming of Advanced Gaming Buttons.
3. The four LEDs on the bottom indicate power, player number 1-8, and will cycle from left to right during wireless pairing.

ASSIGNING ADVANCED GAMING BUTTONS

1. Press the Program Button on the bottom of the controller. The Advanced Gaming Button Program Status LED will flash, signaling the controller is in assign mode.
2. Press 1 of the following buttons (A/B/X/Y/L/R/ZL/ZR/Left Stick Press/Right Stick Press/+Control Pad) to re-assign. Then press the Advanced Gaming Button (AGR or AGL) that you wish to assign. The Advanced Gaming Button Program Status LED will stop flashing, signaling the Advanced Gaming Button has been set.
3. Repeat for the remaining Advanced Gaming Button.

NOTE: Advanced Gaming Button assignments will remain in memory even after disconnected.

RESETTING ADVANCED GAMING BUTTONS

1. Hold the program button down for 2-3 seconds. The Advanced Gaming Button Program Status LED will slowly flash, signaling the controller is in program mode.
2. Press and hold the Assign Program Button for 5 seconds to reset to no function.

TROUBLESHOOTING

Q1. My Wireless Controller is not pairing.

- A1. Confirm batteries are charged by plugging in USB-C cable.
- A2. Confirm you are following the 'Wireless Pairing' process.
- A3. Insert paper clip into Factory Reset Hole as marked above to reset controller to factory settings.

For latest FAQs, visit PowerA.com/Support

BATTERY WARNING

Don't attempt to replace the rechargeable battery yourself - you may damage the battery, which could cause overheating, fire, and injury. The Lithium-ion battery in your device should be serviced or recycled by PowerA or an authorized provider and must be recycled or disposed of separately from household waste.

Dispose of batteries according to your local environment laws and guidelines.

Don't use or leave the product containing rechargeable batteries exposed to very high temperatures (e.g. at strong direct sunlight or in a vehicle in extremely hot weather). Otherwise, it can overheat, catch fire, or the performance will degenerate, and the service life will be shortened.

Don't use the rechargeable battery item in a location where static electricity is rich, otherwise, the internal safety devices may be damaged, causing a harmful situation.

In case the electrolyte gets into the eyes due to the leakage of battery, do not rub eyes. Rinse eyes with clean running water and seek medical attention immediately. Otherwise, it may injure eyes or cause a loss of sight.

If the battery gives off an odor, generates heat, or in any way appears abnormal during use, recharging or storage, immediately remove it from battery charger and place it in a contained vessel such as a metal box. Be aware discarded batteries may cause fire, do not heat the controller or throw it into fire.

MOTION WARNING

Playing video games can make your muscles, joints, skin or eyes hurt. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, skin irritation or eyestrain:

- Avoid excessive play. Take a 10 to 15 minute break every hour, even if you don't think you need it. Parents should monitor their children for appropriate play.
- If your hands, wrists, arms or eyes become tired or sore while playing, or if you feel symptoms such as tingling, numbness, burning or stiffness, stop and rest for several hours before playing again.
- If you continue to have any of the above symptoms or other discomfort during or after play, stop playing and see a doctor.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. this device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the

