

## PRODUCT SPECIFICATION

MODEL NAME	TC-730
RATED INPUT VOLTAGE	<input type="checkbox"/> 100~120V <input type="checkbox"/> 220~240V
RATED FREQUENCY	<input type="checkbox"/> 50Hz <input type="checkbox"/> 60Hz
POWER CONSUMPTION	230W
N.W. / G.W.	110kg / 125kg
PRODUCT SIZE	L1460xW755xH1200(mm)
CARTON SIZE	L1510xW760xH1210(mm)
ORIGINAL COUNTRY	TAIWAN
SERIAL NO	

## LIMITED WARRANTY

The company will repair this product with new or rebuilt parts, free of charge for one year from the date of original purchase to the event of defect in material or workmanship.

A purchase invoice or any other proof of date of original purchase will be required before warranty performance is rendered. This warranty does not cover any damage which results from accident, misuse, abuse, alteration, modification or commercial use of this product.

This warranty is not available if the product is used in a health club or for any commercial purposes.

CUSTOMER NAME: \_\_\_\_\_

DATE: \_\_\_\_/\_\_\_\_/\_\_\_\_

 
DEALER NAME: \_\_\_\_\_

DEALER ADDRESS: \_\_\_\_\_

\_\_\_\_\_

# tokuyo

## INSTRUCTION MANUAL MESSAGE CHAIR

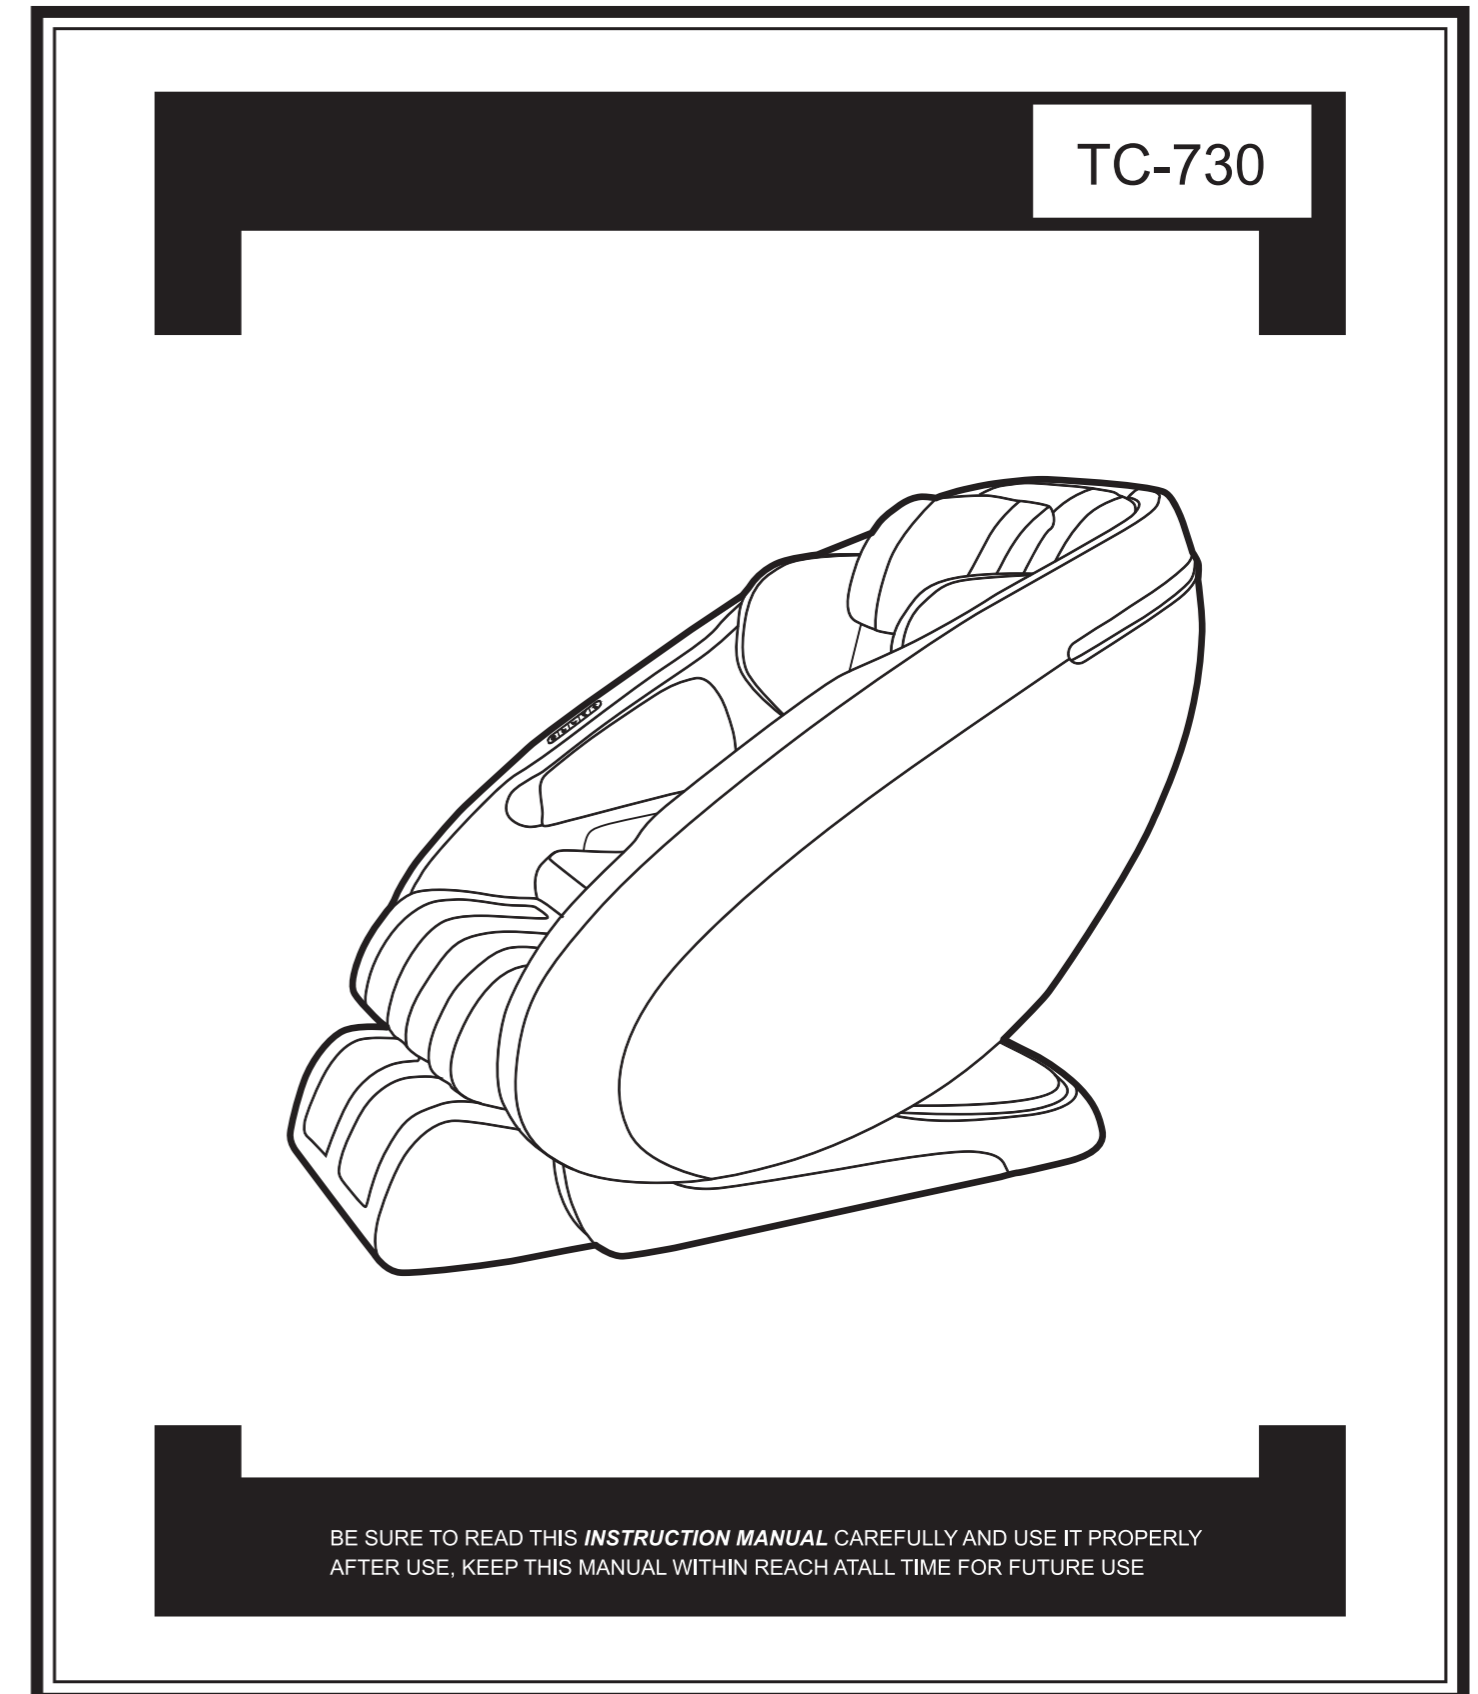

BE SURE TO READ THIS *INSTRUCTION MANUAL* CAREFULLY AND USE IT PROPERLY  
AFTER USE, KEEP THIS MANUAL WITHIN REACH AT ALL TIME FOR FUTURE USE





# IMPORTANT SAFETY INSTRUCTIONS

For safety reasons and in order to clearly indicate potential dangers should the product be used improperly, instructions have been marked in the following manners and should be strictly noted

## ⊘ CAUTIONS

**Non-professional technicians are not allowed to dismantle or repair to avoid fire, electrical shock or serious hurt.**



**Do not flush to the switch when cleaning to avoid insulation fault, electrical shock or short-circuit.**



**When storing or maintenance, be sure to disconnect the power plug from socket.**

Do not detach the plug by wet hands.



**Make sure to shut off and detach the power plug when cleaning or storing product.**

During cleaning or moving the machine, make sure to detach power cord to avoid fire or electrical shock.



**Do not place the machine onto an unstable surface to avoid roasting, insulation failure, electrical shock or turnover.**

When storing the machine, make sure to disconnect power plug to avoid fire caused by electricity leaking.



**Clean power plug periodically to avoid fire due to dust.**



**Do not use it at any unsafe places or on other purposes.**

It is the main reason of product damage or accident.



**Do not store the machine onto an unstable surface.**

Unexpected earthquake or external force will cause damage or injury.



**Keep supply cord unobstructed at all time, i.e. not twisted, knotted, over flexed or pulled and do not place anything heavy on it.**



## NOTE

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

Please inspect this product when regularly use. If not use for a long time, please make sure this product can operate normally when use again.

Situations	Solutions
Indicator out and no operation	<ul style="list-style-type: none"> <li>● Please make sure the power plug is stable.</li> <li>● Please check the power switch is in the on position.</li> </ul>
Noise occurred when operating	<p>It is normal when following situations happen:</p> <ul style="list-style-type: none"> <li>● When tapping or kneading action.</li> <li>● When adjust speed.</li> <li>● Sound from the frame when operating.</li> <li>● When massage ball rub the cloth.</li> <li>● When air press operating.</li> <li>● Vibrator noise. (Especially when nobody lay on the chair)</li> <li>● When adjusting the footrest.</li> <li>● When motor working on loaded.</li> </ul>

## EMERGENCY SOLUTIONS


1. When abnormal situations, turn off the power and pull off the power plug.
2. Call customer service for repair when it is breakdown.
3. Power cord may only be replaced by the qualified personnel.


## WARNING


To prevent fire or electric leakage, only qualified personnel may disassemble or fix the machine.

# IMPORTANT SAFETY INSTRUCTIONS

## CAUTIONS


**Do not modify the structure or change components by unauthorized person.**  
Do not dismantle the machine by unauthorized person to avoid electrical shock, short-circuit or fire. 

**Do not store it near fire or flammable substances.**  
It is one of the reasons of causing product torture, deviation or damage. 

**Do not should any abnormality occur (i.e. scorching smell), stop using imme - diately and detach power plug from socket.**  
Keeping operating under an abnormal situation will cause fire or electrical shock, please contact your local seller or authorized service agent for maintenance. 

**Do not place the machine onto an unstable surface to avoid roast, insulation failure, electrical shock or turnover.** 

**Only rated voltage must be used.** 

**Stop using immediately if supply cord or power plug be damaged or loosen.** 

 
**Be sure to keep children away during operating to avoid any hazard.** 

**Do not explore it under sunshine at all time.** 

**If the supply cord is damaged, it must be replaced by the manufacturer or its authorized persons for repaire or maintenance to avoid any hazard.**

## PRODUCT COMPONENTS

### Main Body Diagram(Front)

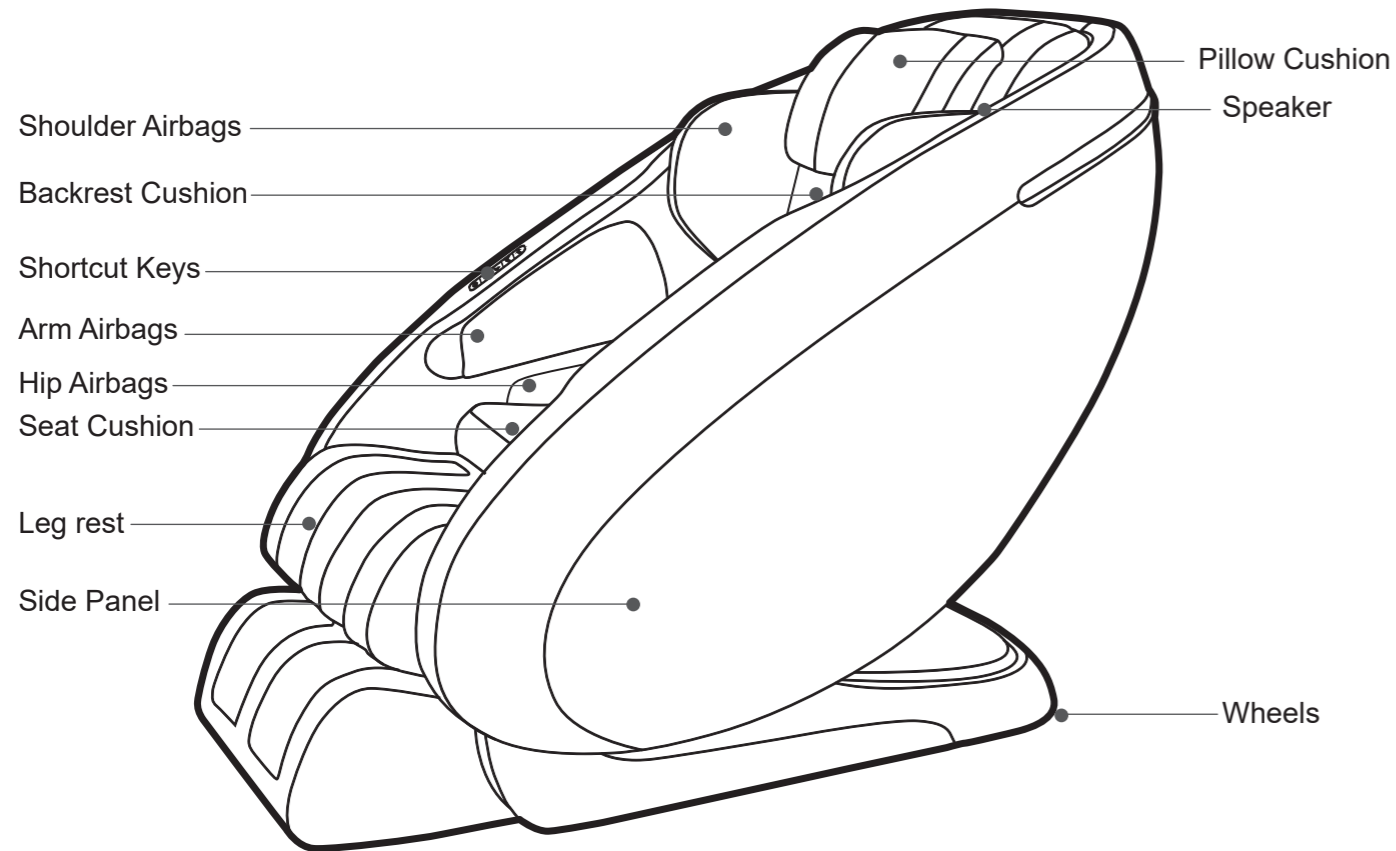

## CLEAN, CARE AND MAINTENANCE

### ■ Maintenance

- Please do not remove the backrest, it may cause electric shock by touching parts inside massage chair.
- Please do not remove parts or repair massage chair by yourself. This may cause electric shock or accident.
- Please pull off the power plug when proceed maintenance.
- Please keep the massage chair clean and dustless. Please put the massage chair in dry area.
- If not use for a long time, please cover the massage chair with cloth to keep from dust.
- Please do not put massage chair under the sunlight directly.

 
### ■ Chair Maintenance

- Please clean the head pad, backrest pad and footrest by neutral detergents, and keep it dry after cleaning.
- Plastic part, tube and leather can be cleaned by cleaner also, mop it with dry cloth afterward.
- Do not use organic cleaners such as benzene for cleaning, as it may cause leather discoloration, ageing and disintegration.
- Please do not use insecticide, it may cause an electric shock or fire.
- Use only dry cloth to clean the machine to prevent malfunction.

### ■ Controller Maintenance

- Keep it away from fire and heat.
- Please keep it in dry condition.
- Please mop it with dry cloth softly or clean it with hairbrush.
- Do not use VOCs to clean. (Such as volatile, organic compounds)


# OPERATION GUIDE

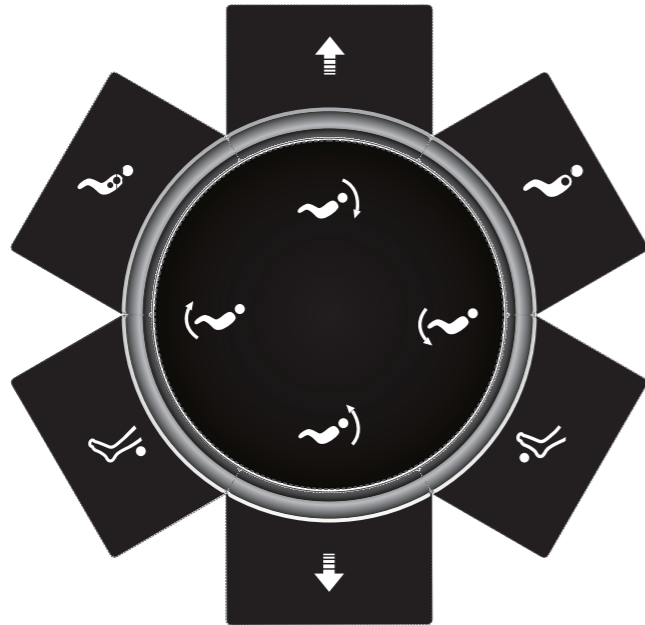

Button	Name	Description
	Fix Spot Massage	Press to stop the roller at a particular area for a fixed point focal massage in manual mode.
	Area Adjustment Button	In manual mode, press to select between specific areas in the following order.
	Foot Massage	Roller massage for sole.(3Level)
	Kneading Massage	Kneading massage for calf.
	Roller Location Adjustment	Hold the up or down arrow to move the massage rollers to the desired location.
	Recline Adjustment	Press the button and hold on to adjust the footrest independently.
		Press the button and hold on to adjust the massaging position of backrest or legrest.

# PRODUCT COMPONENTS
 
## Main Body Diagram(Rear)

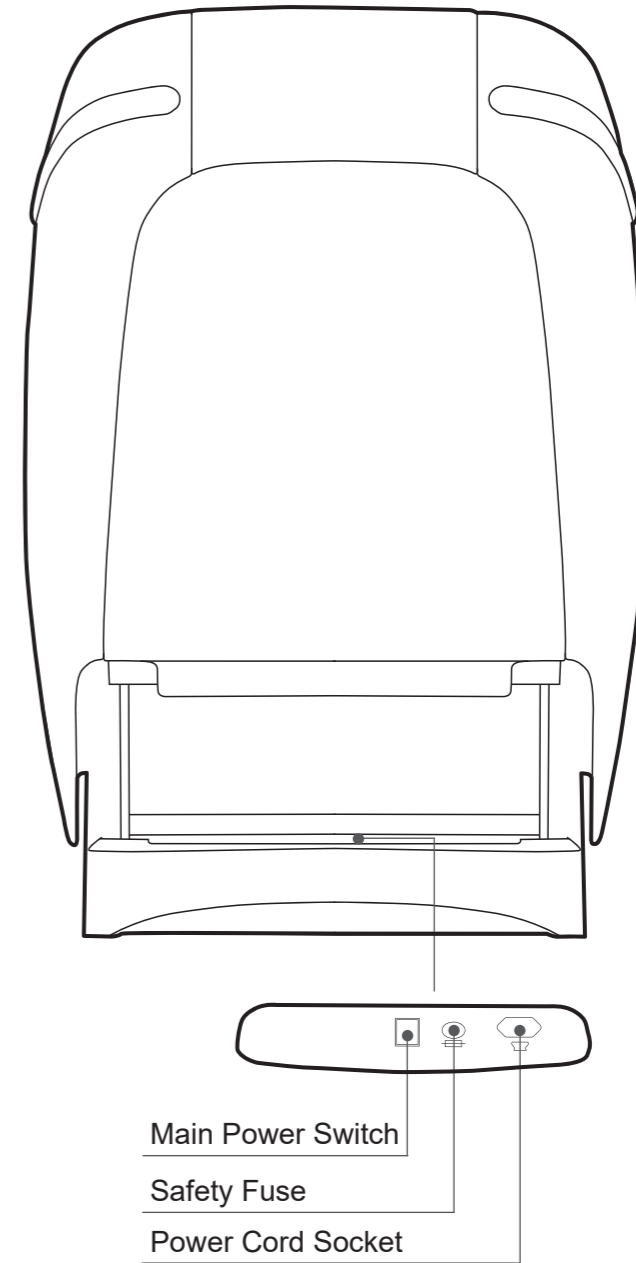

# REMOTE CONTROLLER

## Controller Instructions



# OPERATION GUIDE





## Manual Mode

Button	Name	Description
	Manual Massage	5 manual massage programs Kneading  → Tapping  → Dual → Shiatsu  → Rolling
	Speed Adjustment	Tapping & Kneading & Dual Action & Shiatsu speed adjustment (3 Levels)
	Pressure Massage Position Button	Each time you press this button, there will be a spot flashing in screen, which means that part will be massaged. Press the button continued, there will be different parts of the combination of massage.
	Strength	This button allows you to control the intensity of the air bag on 3 different intensity levels.
	Timer Button	5-30 minutes adjustable, 5 minutes as a adjustable unit, default working time 15 minutes.
	Heating	Switch on/off for back heating function.
	Roller Width	Press this button to adjust the width of 2 roller, Three levels is adjustable.



 
 
# OPERATION GUIDE

## Remote Controller

Button	Name	Description
	On/Off	Power On/Off
	Zero Gravity	3 stage of zero gravity
	Pause	Use this button to temporary pause the massage chair.
	Auto Mode	This chair design with 4 sets of auto massage program for different time and people to use.


# REMOTE CONTROLLER

## Shortcut key function chart : (Right Side Panel)

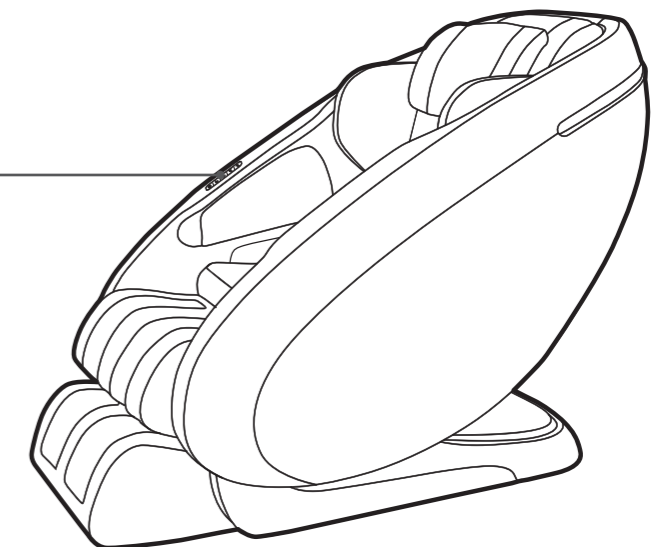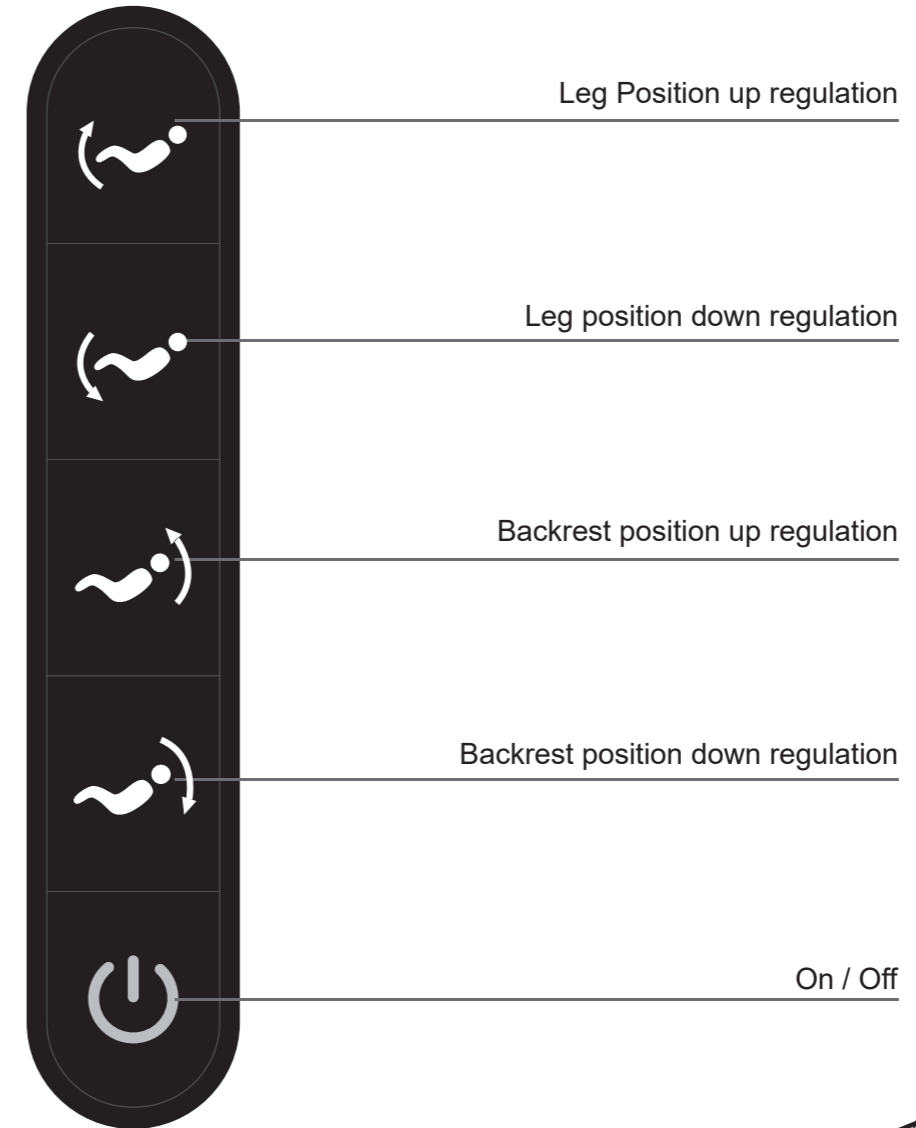


# INSTRUCTIONS REMOTE CONTROLLER
 
## Display Diagram LCD Screen

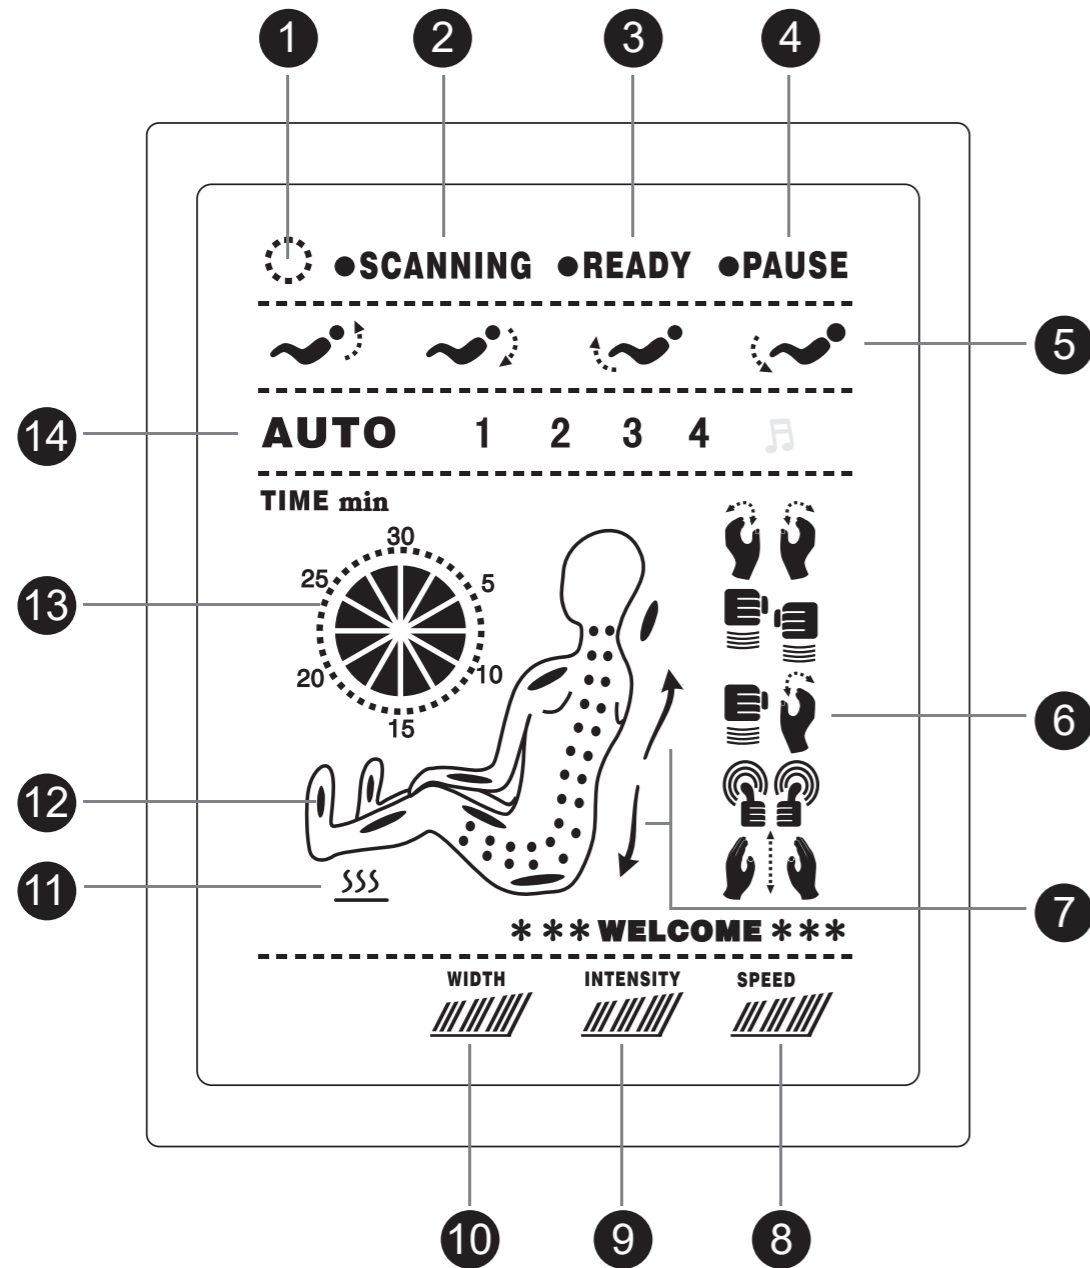


1. Massage chair is powered on.
2. Massage chair is scanning the back control and preparing for initiation.
3. Scanning is complete and ready for massage programs.
4. Pause button has been pressed and chair is temporarily stopped.
5. Reclining position adjustment buttons are pressed and the backrest and or legrest are moving.
6. Displays which massage technique is activated at the time. In order from left to right: Kneading, Tapping, Dual, Shiatsu, Rolling.
7. Depicts the direction of the massage rollers, moving upwards or Downwards.
8. Shows the massage speed level.
9. Shows the air intensity level.
10. Shows massage roller width.
11. Heating function is on.
12. Displays the location of massage rollers and active air bags.
13. 5~30 minutes adjustable
14. Displays which automatic program is activated.

# BEFORE USE

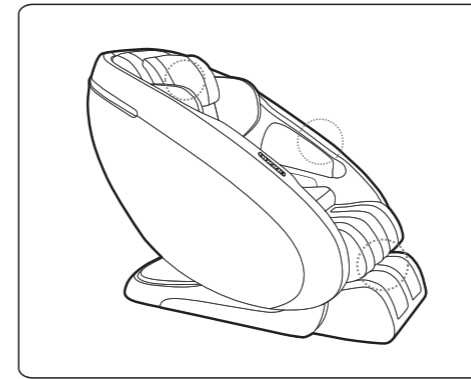 


## 1. Make sure that the product is good

 - Confirm that headrest and backrest pad are normal
- Confirm that the power plug is normal
- Make sure whether the footrest is correct (if it is under the horizontal surface, when you sit on the chair and exert big force the chair will be damaged)

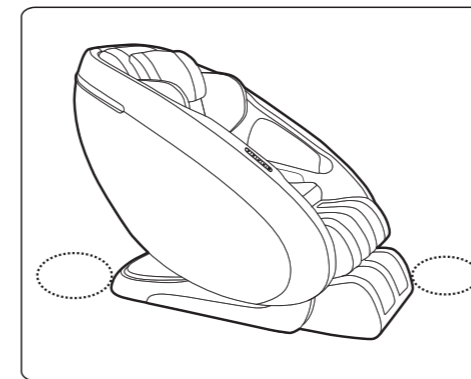


## 2. Confirm the surrounding environment

 - Make sure whether there are no barriers around the massage chair.

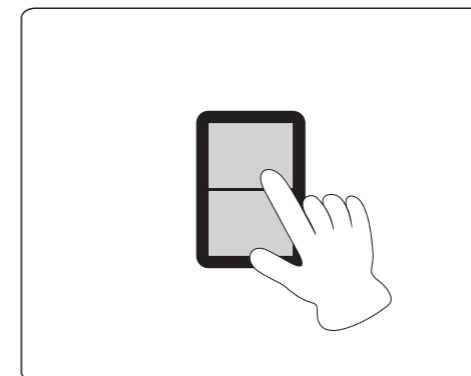

## 3. Connect the power of the chair

 - Connect the power line.
- Turn on the power switch on the right side of the chair.

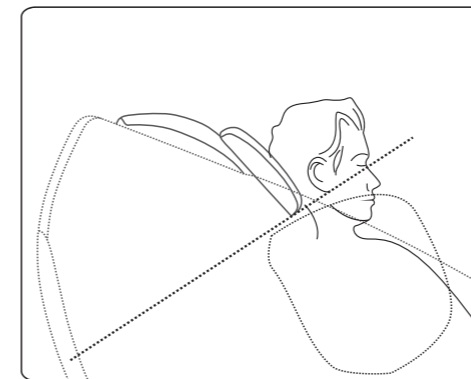

## 4. Adjusting the position of the headrest when using

- Adjust the under-part position of the headrest and make the position of the ear and it on the same horizontal plane.