



- EN

Instruction manual
- NL

Gebruiksaanwijzing
- FR

Mode d'emploi
- DE

Bedienungsanleitung
- ES

Manual de usuario
- PT

Manual de utilizador
- IT

Manuale utente
- SV

Bruksanvisning
- PL

Instrukcja obsługi
- CS

Návod na použití
- SK

Návod na použitie
- RU

Руководство по эксплуатации



Iron & Travel
01.328000.01.001

PARTS DESCRIPTION / ONDERDELENBESCHRIJVING / DESCRIPTION DES PIÈCES / TEILEBESCHREIBUNG / DESCRIPCIÓN DE LAS PIEZAS / DESCRIÇÃO DOS COMPONENTES / DESCRIZIONE DELLE PARTI / BESKRIVNING AV DELAR / OPIS CZĘŚCI / POPIS SOUČÁSTÍ / POPIS SUČASTÍ / ОПИСАНИЕ ЗАПЧАСТІ



EN Instruction manual

SAFETY

- By ignoring the safety instructions the manufacturer cannot be held responsible for the damage.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Never move the appliance by pulling the cord and make sure the cord cannot become entangled.
- The appliance must be placed on a stable, level surface.
- The user must not leave the device unattended while it is connected to the supply.
- This appliance is only to be used for household purposes and only for the purpose it is made for.
- This appliance shall not be used by children aged less than 8 years. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Keep the appliance and its cord out of reach of children aged less than 8 years. Cleaning and user maintenance shall not be made by children unless older than 8 and supervised.
- To protect yourself against an electric shock, do not immerse the cord, plug or appliance in the water or any other liquid.
- Keep the appliance and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Do not left the iron unattended while it is connected to the mains supply.
- Do not use the iron when it's dropped or if there are visible signs of damage.
- Make sure the iron will be used and rest on a stable surface.

- Surface is liable to get hot during use.

Battery safety

- Rechargeable battery is only to be charged under adult supervision.
- Do not attempt to open the rechargeable battery or battery pack as there are no serviceable parts inside.
- Keep the battery out of reach from children. If swallowed, consult a physician immediately.
- Avoid storing the battery in extremely hot or cold environment. A device with a hot or cold battery may not work temporarily, even when the battery is fully charged.
- Do not dispose battery in a fire as it may explode. Battery may also explode if damaged. Please dispose it according to local regulation. Do not dispose it as household waste.

Cleaning and maintenance

- Always unplug the device and let it cool down completely before cleaning
- To avoid damage to the soleplate, never use any sharp object or metal utensil to scrap the soleplate
- Use a soft damp cloth to clean the housing of the device.
- Do not use any abrasive detergent or steel wool to clean the iron, as it may scratch the surfaces.

PARTS DESCRIPTION

- Handle
- Button
- Display
- Insulation plate
- Connectors
- Soleplate
- Soleplate silicone mat
- Spray bottle
- Usb charge cable

BEFORE THE FIRST USE

- Carefully read all instructions before using the iron.
- Remove the insulation plate between handle and soleplate before use.



- Clean the soleplate with a soft damp cloth before the iron will be used for the first time.
- Smell or smoke may disperse at the beginning as caused by the warming up of the insulation material.

USE

Dry ironing

- Press and hold the button until the indicator light turns on.
- Press the button multiple times to select the desired temperature level, the indicator icon light will flash.
- Once the desired temperature has been reached the indicator icon light will stay on. The appliance is now ready to start ironing.

Selecting the temperature

- Check the ironing instructions on the garment to be ironed.
- If the garment does not have any ironing instructions but you know the kind of fabric in question, use the chart below.
 - Fabrics that have some kind of finish(polishing, wrinkles, contrast)can be ironed at the lowest temperatures.
- If the fabric contains several kinds of fibres ,always select the temperature applicable, if an article contains 60% polyester and 40% cotton, you must always choose the temperature corresponding to polyester.
- First classify the garments to be ironed according to the most suitable ironing temperature: wool with wool, cotton with cotton, etc. as the iron heats up as fast as it cools, start by ironing the articles requiring the lowest temperature such as those made of synthetic fibres. Progress towards those that require the highest temperatures.

LABEL SYMBOL	FABRIC TYPE	THERMOSTAT REGULATION	MAX Temperatur e	MAX Working time
	Nylon Synthetic	low temperature	100°C	20 min
	Silk Wool	medium temperature	140°C	15 min
	Cotton Linen	High temperature	160°C	10 min
	Fabric not to be ironed			

Spray

- Use the spray bottle for ironing out stubborn wrinkles easier.
- Fill the spray bottle with water.
- Point the spray bottle to the desired area and press the spraying button to moisten the garments and fabric.

Charging

- The battery has a capacity of 5000 mAh.
- When the power indicator starts flashing, the battery needs to be charged.
- Plug the USB cable into the micro-USB port on the handle and the other end into an USB power adapter (not included).
- Plug the power adapter into a socket.
- Full charging time is approximately 2.5 hours.

Power bank

- Remove the handle module so you can use it to charge your phone or any other electronic appliance.
- Plug the USB cable into the USB port.
- Plug the other end of the USB cable into the appliance you want to charge.



ENVIRONMENT

- This appliance should not be put into the domestic garbage at the end of its durability, but must be offered at a central point for the recycling of electric and electronic domestic appliances. This symbol on the appliance, instruction manual and packaging puts your attention to this important issue. The materials used in this appliance can be recycled. By recycling of used domestic appliances you contribute an important push to the protection of our environment. Ask your local authorities for information regarding the point of recollection.

The European directive for batteries (2006/66/EC) states that it is not permitted to throw batteries away with the household waste. They may contain substances which are harmful to the environment. Empty batteries can be handed over to a local, public collection point or a local recycling centre. To avoid overheating as a result of a short circuit, lithium batteries must be removed from the product and the poles must be protected using insulation tape or some other means against short-circuiting.

Support

You can find all available information and spare parts at www.princesshome.eu!

