 


# Professional push shear

DESIGNED FOR THE PROFESSIONAL

MODEL: YS-series



Operating Manual

## Warranty Card

Product Name	Rechargeable Clipper for the Professional	Warranty Period
Product Model		Within one year since the purchase date
Purchase Date	From: (M/D/Y)	To : (M/D/Y)

Customer	Add.		Name	
			Tel.	
Retailer	Add.		Name	
	Name		Tel.	

### Product Assurances:

- This product has been manufactured through the precise quality management and inspection process.
- In case of any failure during the normal operating, customer may send to the retailer or maintenance center for free-of-charge Maintenance.  
(Battery and blade are quick-wear parts excluding from the warranty which shall only be provided upon the payment)
- Free service shall not be provided in either case below:
  - Any damage caused by the maintenance and transformation that is not recognized by the manufacturer.
  - Any damage caused by mistake, inadvertent use or accident
  - Any damage caused by natural disaster and abnormal voltage.
  - Any damage caused by non-compliance with the notes as stated in this operating manual.
- This Warranty Card shall be the only proof of warranty, while the product maintenance against invoice shall not be allowed

### Note



- Please do not disassemble the product.
- Water must not be used to wash the clipper, keep away from the dampness while operating.



 
- Only use a little wet cloth or neutral liquid soap to clean the product.
- Never charge the product above 40°C heat source or below 0°C environment.

\*Slight heating during the operating or charging is normal case

\*After the battery life expires, take off and throw the battery in safe manner into the designated recclingsite. Never dump it randomly.


### Cutter Cleaning and Maintenance

#### Taper Blade Cleaning

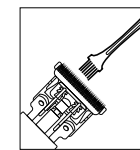

Clear up the blade with cleaning brush.


#### Taper Blade Maintenance

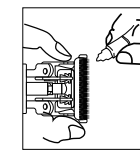 


Before or after use, maintain the blade by dripping some oil on the red point. Places like the left picture.

### Blade Removal & Installation
 
#### Blade Removal

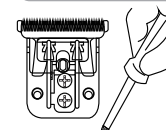

 - Such as a screwdriver with the rotary cutter head under part, remove the cutter head

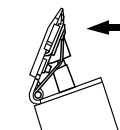

- To prevent the knife from falling, use another hand to hold it

#### Blade Installation



- Tighten the screw with a screwdriver to ensure the head of the knife, Will not fall off.

Warm tip: do not disassemble the knife head without any skill.

