
# **ASSEMBLY INSTRUCTION**

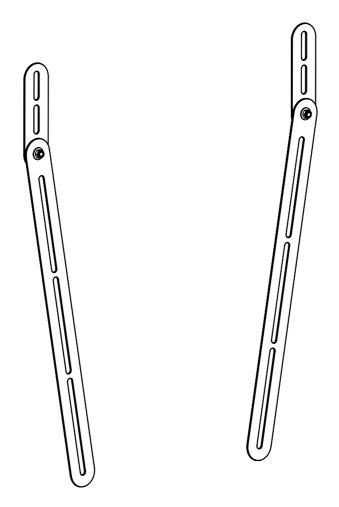

MODEL: XD 5411

- Please read this instruction carefully before assembly.
- Fits for most of Soundbar.
- Weight Capacity: 10KG (22LBS).

#### **Safety Warning:**

Never let children climb on product or play with product.

Do not sit or stand on product.

Do not fasten a TV that is heavier than the recommended load rating to the mount.

Using suitable on concrete wall or wood stud wall.

 
Improper installation may cause property damage and/or personal injury, so the installation must be done by two qualified contractors. The manufacture is not liable for damage or injury caused by incorrect mounting, assembly or use.

Improper handling can result in cuts and lacerations.

Pictures for reference only, subject to our available products.

Keep this instruction for future reference.

#### Part list:



#### Hardware list:

[}	}	B. Control of the con	300000000000000000000000000000000000000	P
aM4X16 bolt	bM5X16 bolt	c-M6X16 bolt	d—M8X20 bolt	eM5X30 bolt
2pcs	2pcs	2pcs	2pcs	2pcs

	0	0	0
f-M5 Nut	g-M5 washer	h-M6 washer	i-M8 washer
4pcs	4pcs	2pcs	4pcs

### 1 : Attach Soundbar bracket at the back of TV.

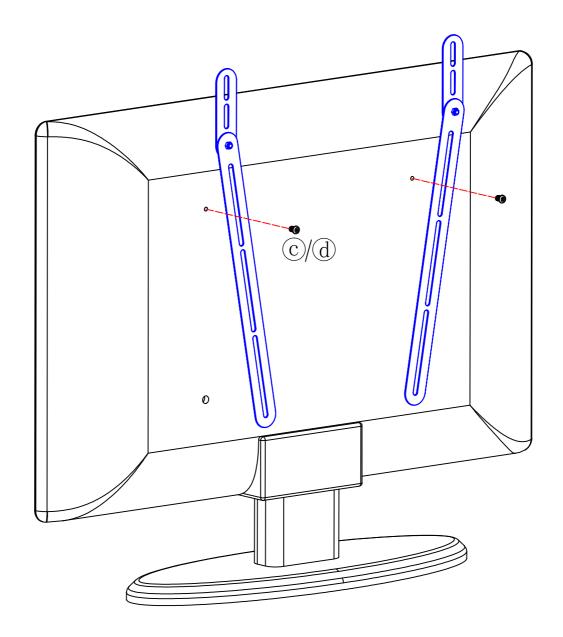


Figure 1

## Option 1:

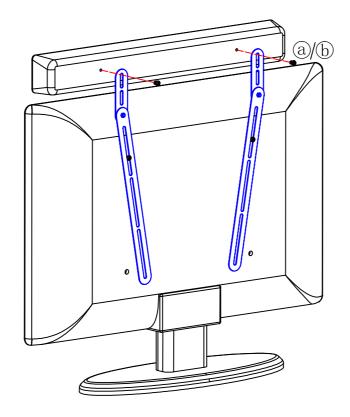


Figure 2

## Option 2:



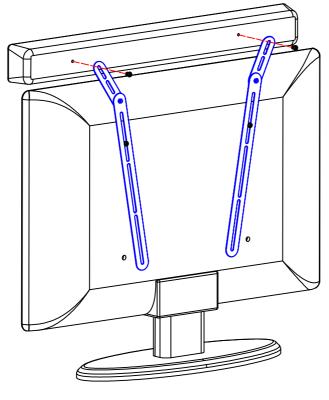


Figure 3


Option 3: If there is bracket with Soundbar itself.

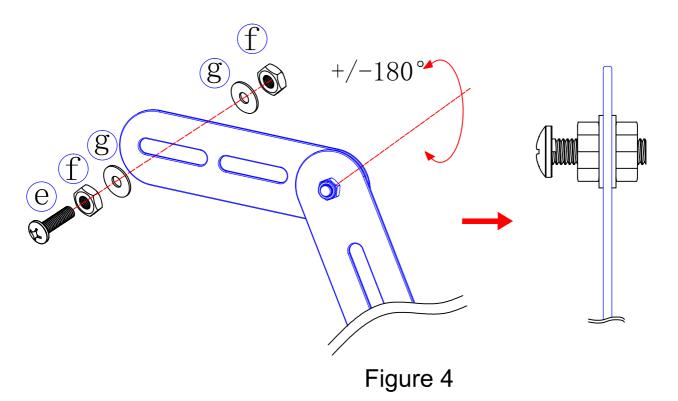

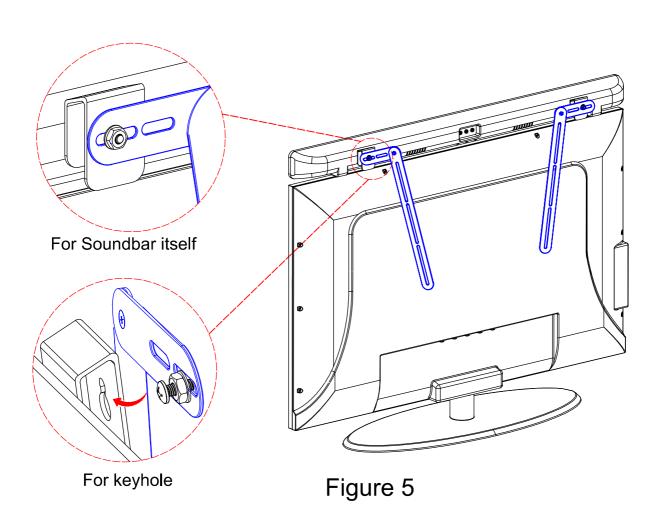


### Used with TV bracket together:

1:

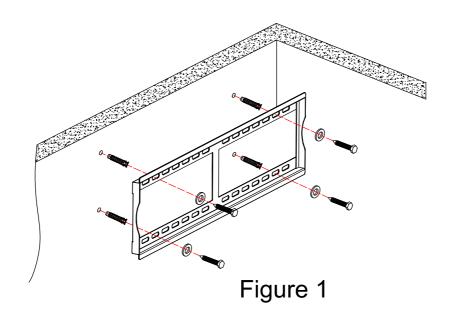

② Assemble above TV:

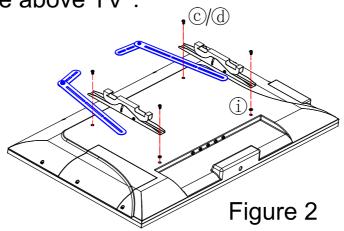

#### Assemble lower TV:

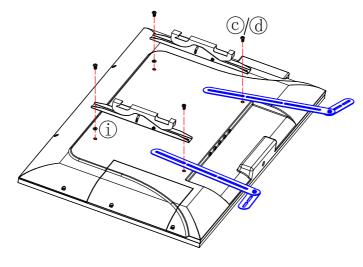


Figure 3

## 3:

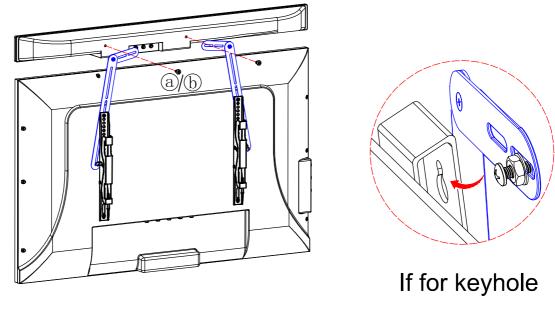


Figure 4

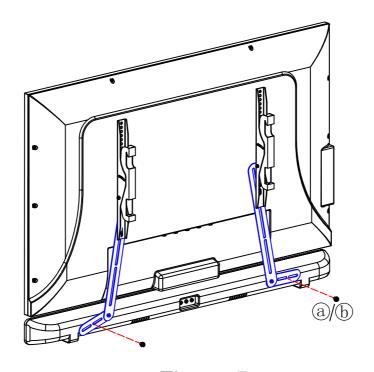


Figure 5

4:

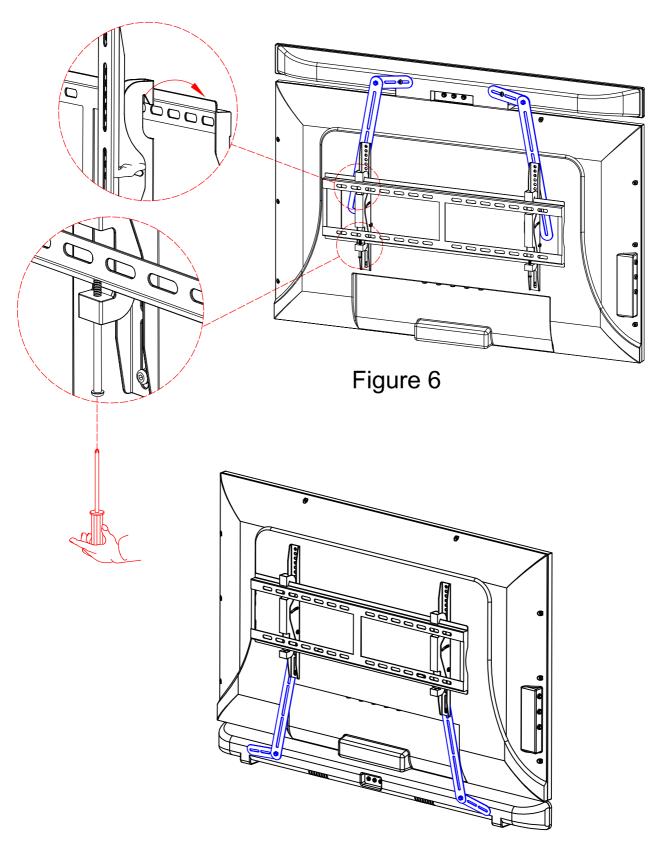


Figure 7