

# INSTRUCTION MANUAL for HOT AIR BRUSH

## Type designation:

MXN-101

## Ratings:

220-240V~ 50/60Hz Class II

900W-1200W

A: Button for accessory


B: Rotation button

C: Power button

D: Swivel power cord

E: 50mm hard brush

F: 36mm plastic brush

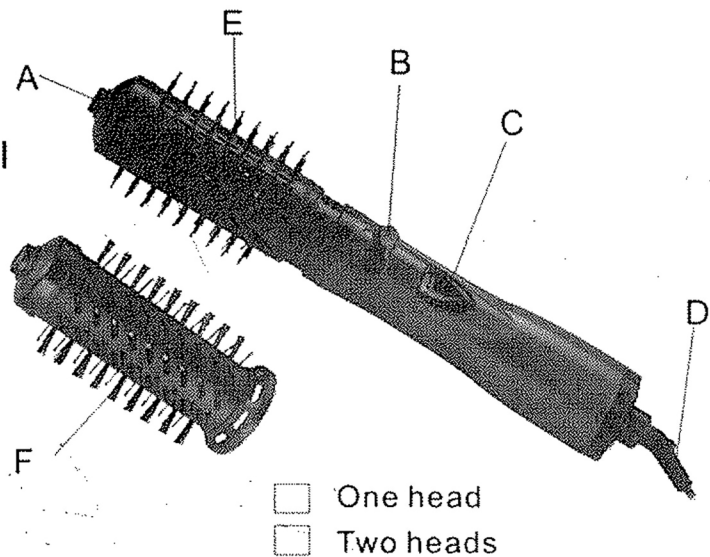

## Dear Customer

Please read this user manual carefully before using your air styler, paying particular attention to the safety notes on this and the following page! Keep the user manual safe for future reference and also to pass on to any subsequent owner.

### Air style

It has 2 inter changeable accessories to style your hair easily; it is powerful enough to dry your hair, at the same time it styles.

Changing accessories

Fitting:

-Push the button (A) and place the accessory you wish into the unit until you hear a click.

Removing the brush

-Push the button (A) and remove the accessory you require from its recess.

Reminder:

The brush accessory (E/F) is very hot when in use. Be careful when removing it.

### 50mm hard brush (E)

The brush let you dry and style your hair at the same time, giving a perfect result both at the front and at the back of your hairstyle. It has rotational function, especially designed so that you can blow dry your hair effortlessly and in a single move-quicker and easier than traditional blow drying.

### 36mm plastic Brush(F)

The brush let you dry and style your hair at the same time, giving a perfect result both at the front and at the back of your hairstyle. It has rotational function, especially designed so that you can blow dry your hair effortlessly and in a single move-quicker and easier than traditional blow drying.

## General safety instructions

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. The device is intended solely for use in the home.
4. The appliance must only be used for other purposes.
5. Each time before the intended use, if there is damage to the device and the power cord in any case do not turn the device into an outlet.
6. Warning! Do not use near a bathtub, sink or other container filled with water. When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
7. Do not immerse in water or other liquids.
8. For additional protection, it is expedient to establish a residual current device (RCD) with rated tripping current not exceeding 30mA in the electrical circuit bathroom. Consult a qualified Professional.

9. Plug appliance into a source of alternating current. Before switching, make sure that the device is designed for the voltage used in the network.
10. The wrong use will void the warranty.
11. The device may be included only in the network with the ground. To ensure your safety grounding must comply with state rules. Do not use nonstandard power supply or connection.
12. Before switching on make sure the switch is not turned on.
13. Do not use outdoors. Protect the device from heat, direct sunlight strikes the sharp corners, humidity.
- (In any case, do not immerse the appliance in water.) Do not touch the appliance with wet hands. When wet the device immediately unplug it.
14. Do not leave the appliance unattended. Keep the appliance out of reach of children.
15. Warning! During operation, the nozzle device is strongly heated.
16. Before you pack the appliance cool completely.
17. Do not block the openings for entry and exit of air during operation. This can lead to overheating of the device.
18. Do not touch hot parts of the plug to the appliance.
19. If the unit automatically turns off overheating. After cooling down after a few minutes, the device can be switched on again.
20. Do not carry the appliance by holding the power cord. To disconnect, remove the device from the network, holding the cord. When you disconnect the device from the mains, pull out the plug.
21. After use, never warp the power cord around the appliance, because over time it can lead to fracture of the wire. Always smooth flatten the wire at the time of storage.
22. The replacement of the cord may be performed only by qualified experts-employees service center. Not repair the appliance by yourself.
23. Do not use near flammable substance: gasoline, paints, varnishes, sprays, etc.
24. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

### The ion technology:

Your appliance automatically emits negative ions to eliminate static electricity. Your hair will shine and be easier to untangle.

### Direction of rotation:

This function enables you to automatically wind the section of hair around the brush to blow dry your hair effortlessly.

- To start rotation, press the rotation button(B) in the desired direction of rotation(right or left).
- Keep pressing the switch while blow drying.
- To stop rotation, release the rotation button(B).

### Switch setting:



- 0 = Fan is off
- C = cold air
- 1 = warm air
- 2 = hot air

## CLEANING AND MAINTENANCE

1. Unplug the appliance and let it cool completely.
2. Regularly clean the suction port with a soft brush.
3. The housing should be cleaned with a soft dry cloth without the use of detergents.
4. In any case, do not immerse in water.
5. Do not use cleaning solvents or abrasives.
6. Thoroughly dry the device after cleaning.

