

Instructions

 
 
WIRELESS CONTROLLER



HS-PS4125

P4 ELITE

Introduction for Key Functions

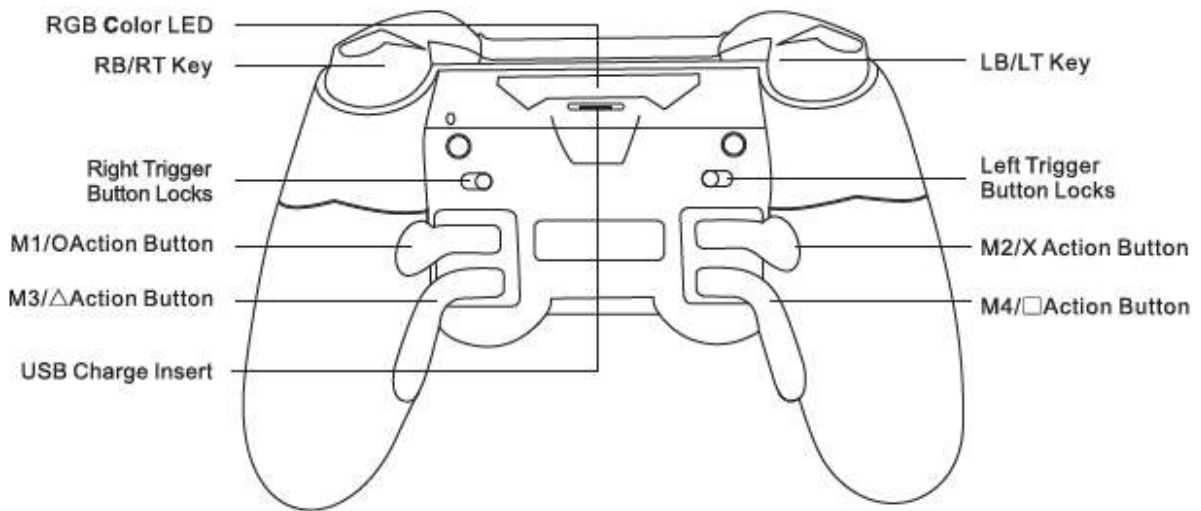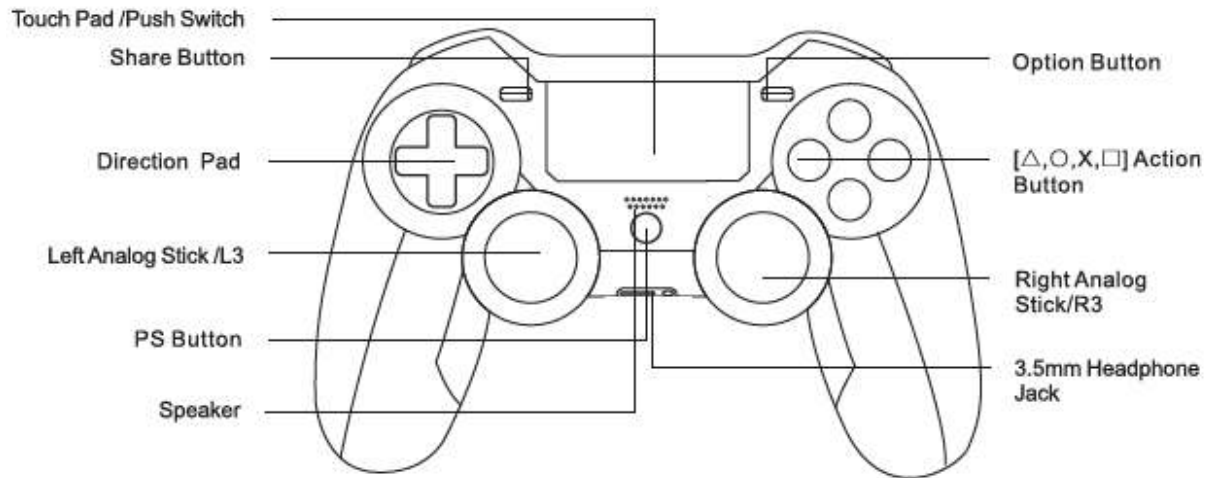

Note:

(Default: M1/○ Action Button, M2/X Action Button, M3/△ Action Button, M4/□ Action Button) and ↓, ←, →, △, ○, □, X, LB, RB, LT, RT, L3, R3 operation buttons can be switched freely by paddle.

Interchangeable Components

1.Paddles

Rotate paddles 90° and pull straight out to remove.

Replace any paddle in any slot by placing straight in and rotating 90°.

2.Thumbsticks

Pull thumbsticks straight out to remove.

 
Insert thumbsticks straight in to replace.

3.D-Pads

Pull D-Pad straight out to remove, Insert D-Pad straight in to replace.

4.Trigger Button

When hair trigger locks are off, triggers have full movement.

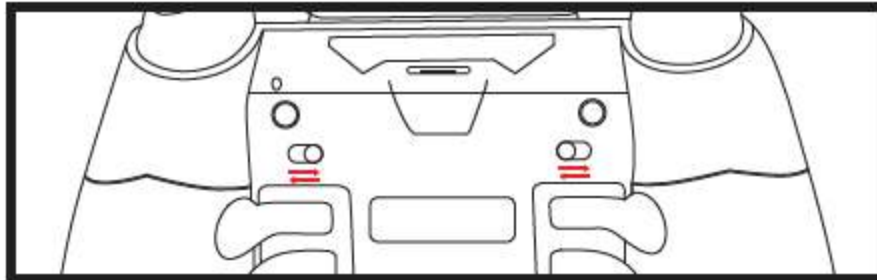

Product Description

This product belongs to P4 wireless controller, which can be used for various games on the PS4 console. With this controller, you can experience the immersive feeling during the games.

- 1) Compatible with all original P4 controller function like buttons, motor corresponding functions, touch functions, audio speakers, stereo headset jacks and Sensor functions.
- 2) Provide 4 Mn keys to set 4 groups of Macro and Remap functions and there are 14 keys (↑, ↓, ←, →, X, O, □, △, LB, RB, LT, RT, L3, R3) can add Macro and Remap functions.
- 3) The arrow keys, thumbstick and 4 Mn back keys are made of hardware materials with magnetic function, which can be replaced or disassembled to meet the needs of different people.
- 4) When the P4 console is in sleep mode, press the PS button on the controller to wake up the console.

Operation Guide

1. Connection Instructions

PS4 Console Connection:

When the controller is in sleep state, please use the Micro-USB cable to connect the console to complete the pairing. After completion, press the PS button to connect wirelessly and then unplug the cable. Now you can use this controller via wireless.

PC Connection:

When the controller is in sleep state, please use the Micro-USB cable to connect the console to complete the pairing. After completion, now you can use this controller. (PC NO Support Vibration).

2. Reconnect Mode

If the controller paired with the console before, press the PS button for 1 second to wake up the controller when the controller is in sleep mode. And it will automatically connect to the paired console after being woken up. (When the PS4 console is in sleep mode, press the PS button on the controller to wake up the console)

3. Macro and Remap Function Instructions

Two Programming Function:

Macro programming is to keep pressing the button and the function does not appear after it appears once;

Remap programming is to keep pressing the button and the function is always have.

Mn Key=M1, M2, M3, M4 Key

(M1 default ○ key, M2 default × key, M3 default △ key, M4 default □ key)

Set Macro or Remap Buttons:

↑, ↓, ←, →, △, ○, □, X, LB, RB, LT, RT, L3, R3 can be programmed to Mn key to have Macro or Remap function.

Note: During the setting process, if you don't press the function key, the original set function will be cleared.

If it is cleared, please follow the steps of the Remap function to set.

Macro Function Setting:

Step 1: Press the Mn key + OPTION key and release it to enter the setting mode;

Step 2: Press the button you want to set and then press the Mn button to complete the setting action and save the record.

Example:

1. Press and hold the M1 button then press the OPTION button to enter the setting mode;
2. Release the M1 key and OPTION key, press the R1 key again and then press the M1 key to save the setting.
At this time, please hold down the M1 key and the function of the R1 key will appear after flash one time.
3. If you need back the default function, please hold down the M1 key and then press the SHARE key to enter the setting mode. Then press the ○ key and then press M1 key again to change back to the default ○ key function.

Remap Function Settings:

Step 1: Press the Mn key + SHARE key and release it to enter the setting mode;

Step 2: Press the button you want to set then press the Mn button to complete the setting action and save the record.

Example:

1. Press and hold the M1 button then press the SHARE button to enter the setting mode;
2. Release the M1 button and the SHARE button then press the R1 button and then press the M1 button to save the setting. At this time, the M1 button will display the function of the R1 button

4. Low Battery Reminder and Charging:

Low Battery Reminder :

When the controller battery is low, the console will prompt the controller low battery and now the controller needs to be charged.

Charging:

The controller can be charged via connect a charging cable to the console or or a power adapter at DC5.0V.

When the cotrollere turned off, the RGB color LED will display orange and flash slowly and the light will off after full charged.

5. Shutdown and Automatic Sleep

 
Controller Shutdown: long press the PS button for 10 seconds then the controller will automatically sleep when the console sleeps.

Packaging Accessories

Accessories List:



Elite Controller



Micro USB Cable



Interchangeable Arrow Key(2)



Interchangeable Joystick (1 Set)



Paddle(1 Set)

Precautions

⚠ WARNING: As with many other electrical devices, failure to take the following precautions can result in serious injury or death from electric shock, fire, or damage to PlayStation 4 accessories and console:

Use only an approved charging cable.

Do not allow a wireless device or charging cable to become wet.

Unplug the charging cable during lightning storms or when unused for long periods.

To prevent damage, avoid sitting or stepping on a wireless device, its cable, or the Cable plug or connector.

⚠ CAUTION: Cables and Cords:

To reduce potential trip hazards or entanglement hazards, arrange any cables and cords so that people and pets are not likely to trip over or accidentally pull on the mass they move around or walk through the area and do not allow children to play with cables and cords.