


2)Non-rechargeable batteries are not to be recharged.

3)Rechargeable batteries are to be removed from the toy before being charged{if

removable}.
4)Rechargeable batteries are only to be charged under adult supervision {if removable}.

5)Different types of batteries or new and used batteries are not to be mixed.
6)Only batteries of the same or equivalent type as recommended are to be used.
7)Batteries are to be inserted with the correct polarity.

8)Exhausted batteries are to be removed from the toy.
9)The supply terminals are not to be short-circuited. Toy appliances in use successfully in the process, you should periodically check the wires, plugs. Shell and other parts for damage, found damage should discontinue use until the repair is intact.

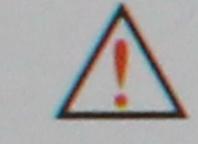

CHILDREN UNDER 3 YEARS DUE TO SMALL PARTS هشدار ابرای کودکان زیر ۳ سال مناسب نیست . دارای قطعات کوچک است تحذير: غر ملام للاطفال تعت للانة (م) سترات بسبب

فلطعاة الصمررة COUNTRY OF ORIGIN: CHINA بلدالمنشاة: الصين



PRECAUCION

PELIGRO DE ASFIXIA -CONTIENE PARTES PEQUENAS NO RECOMENDADO PARA NINOS



WARNING:

CHOKING HAZARD - small parts, Not for children under 3 years.



صنعت وفقا للمواصفات والمعايير العالمية Tested according to international standards






MENORES DE 3 ANOS







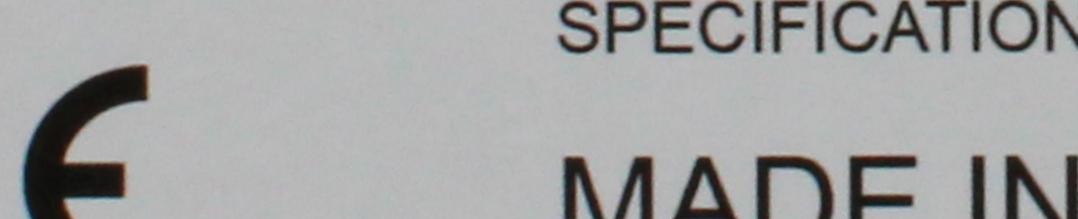



Li-ion 3.7V FINE TUNING

DIRT BIKE BATTERY DESCRIPTION

USE 1X3.7V BATTERY PACK (INCLUDED) OPEN THE BATTERY COVER, REMOVE THE B ATTERY PACK CONNECT CHARGELINE CHARGE.

R/C BATTERY DESCRIPTION

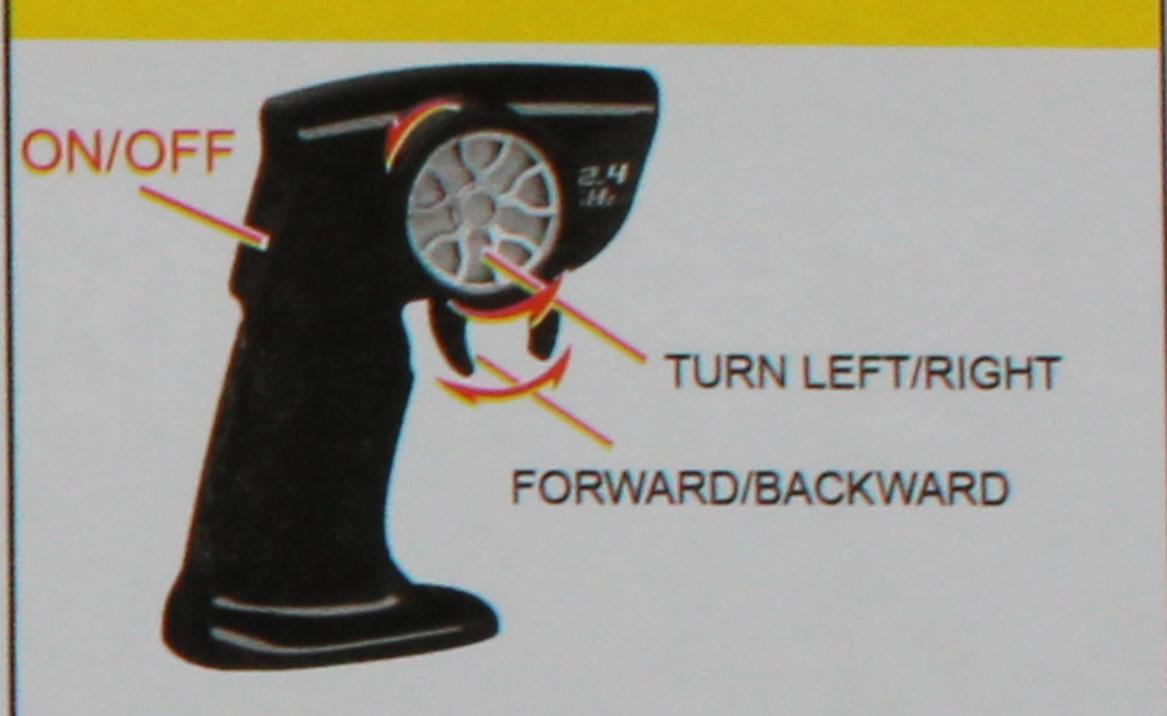

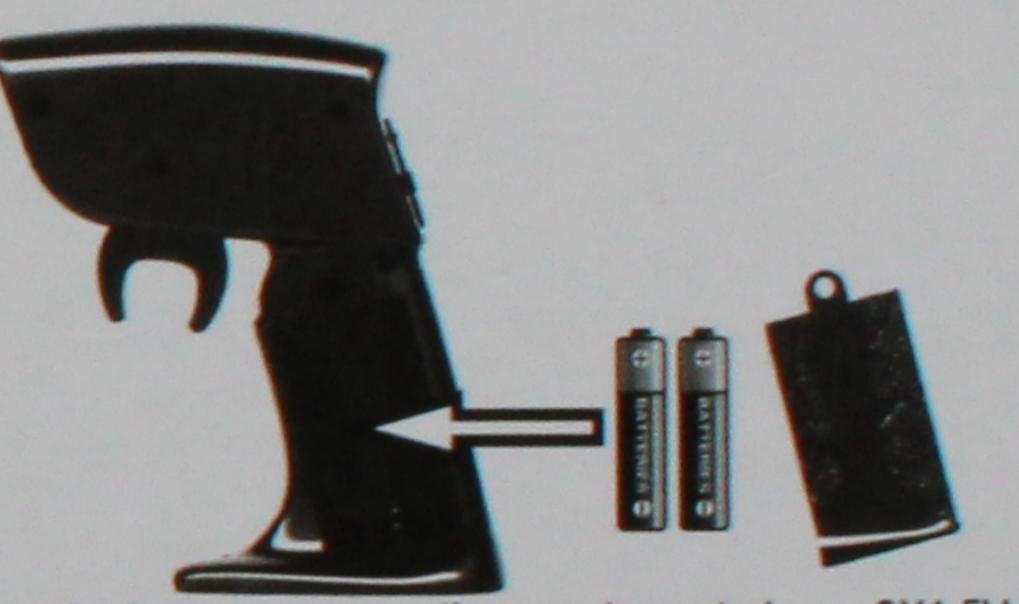

Open the battery cover on the remote control, use 2X1.5V "AA" batteries (not included), mount the remote control button battery cover. Follow the polarity of the battery compartment tip correctly into the battery, and avoid danger!

SPECIFICATIONS COLOURS AND CONTENTS MAY VARY FROM ILLUSTRATIONS

MADE IN CHINA

No.699-151