



KidzSonic is specially designed to help young children care for their teeth.

- **DeepClean bristles to help clean between teeth.**
  - shorter bristles clean the tooth's surface
  - longer bristles reach between teeth
- Perfect for children with gaps, missing or crooked teeth.
- **Small light-weight handle**
- **Small brush head**
- **Flashing 2 minute timer and 30-second reminder keeps kids brushing and helps teach good oral care habits.**
- **KidzSonic powers off after 2 minutes.**
- **Replacement brush head available**

**Changing the replaceable brush head**

To detach: Turn brush head anti-clockwise and pull upwards  
 To attach: Align the new brush head and turn it clockwise  
 Note: Notch on neck should align with inner notches of toothbrush head to lock in place

**Replacing the battery**

Turn battery cap anti-clockwise to remove  
 Insert a new AAA battery  
 Align line marker on battery cap with line marker on brush handle. Turn clockwise to replace battery cap.

**Brushing Instructions**

- 1 Wet the bristles and apply appropriate amount of toothpaste
- 2 Divide oral area into up, down, left and right sections

- 3 Place toothbrush bristles against teeth at a slight angle towards the gum line
- 4 Press the power button to turn on the toothbrush, gently move the brush head across the teeth and gums with small up and down movements
- 5 Move to the next section when the brush pulses (at 30 seconds) until all four sections of the mouth have been brushed
- 6 Press the power button to turn off the brush ( brush will power off after 2 minutes)

**Replaceable Brush Heads**

Packs of 2 replaceable brush heads are available. Please see our website

[www.brushbaby.co.uk](http://www.brushbaby.co.uk)

**This product is not a toy. Adult supervision is required. Store out of children's reach.**

**Requires 1xAAA 1.5V battery**  
 Use only AAA alkaline batteries  
 Remove battery when product is stored for a long time or when battery is exhausted  
 Dispose of batteries properly

**Product specifications**  
 Du Pont bristles  
 22,000 strokes per minute  
 2 minute timer  
 Pulse every 30 seconds



**Warnings:** This product is not a toy. Adult supervision is required at all times. Store out of reach of children. Children shall not play with the appliance. Cleaning and users maintenance shall not be made by children. Adult assembly is required. Keep small parts out of reach of children. Toothbrushes can be used by children and persons with reduced physical, sensory or mental capabilities or lack of experience or knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.

Do not soak the product in water for a long period of time  
 Do not open, repair or alter the product without authorization. Do not place the product in high temperatures or direct sunlight.  
 The battery is to be inserted with the correct polarity. An exhausted battery is to be removed from the appliance and safely disposed of.  
 The battery supply terminals are not to be short-circuited.

CE GB4706.59-2008 LOT NU: 14010920

RoHS COMPLIANT



Brushbaby Ltd, Winchester SO24 9EZ UK  
 Made in China for Brushbaby Ltd

