

SENCOR®

SFH 7017WH

SFH 7057WH



EN ■ Hot Air Fan Heater

Translation of the original manual

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers.
- Children must not play with the appliance. Cleaning and maintenance performed by the user must not be performed by unsupervised children.
- In the event that the power cord is damaged, have it repaired at a professional service centre to prevent causing a dangerous situation. It is forbidden to use the appliance if it has a damaged power cord.
- Children younger than 3 years of age should be prevented from accessing the appliance unless they are under constant supervision.
- Children from 3 to 8 years of age may only turn this appliance on/off under the condition that it is located or installed in its intended normal operating position and that they are under supervision or were informed about the safe operation of the appliance and understand the potential hazards. Children from 3 to 8 years of age must not insert the plug into the power socket, regulate or clean the appliance or carry out maintenance performed by the user.



ATTENTION

Certain parts of this product may become very hot and cause burns. Special attention should be paid when children and handicapped people are present.



DO NOT COVER!



WARNING:

To prevent overheating, do not cover the heater.

- The heater must not be located directly underneath a power socket.
- Do not use the heater in the direct vicinity of a bath, shower or swimming pool.

- Before connecting the appliance to a power socket, check that the rated voltage on its rating label matches the electrical voltage in the power socket.
- Do not connect the appliance to an extension cord or multi-socket adapter.



Attention:

Do not use this appliance with a programmer, timer switch, a remote control system or any other device which would switch the appliance on automatically, because there is a danger of a fire if the appliance is covered or incorrectly located.

- The appliance is designed for use in households, offices and similar types of areas.
- Do not use the appliance in very dusty or humid rooms such as laundries or bathrooms, in areas where chemicals are stored, in industrial surroundings or outdoors.
- This appliance is not intended to be mounted on a wall.
- When the appliance is in operation, it must not be located on an unstable surface, e.g. sofa, carpets with very long and thick fibres, etc. The appliance must always be located on an even, dry and stable surface.
- Use the appliance in a vertical position.
- Do not use the appliance in rooms smaller than 4m².
- Free space of at least 1 m in front of the appliance and 50 cm behind the appliance must be maintained while it is running to ensure sufficient air circulation. Do not use the appliance in the near vicinity of curtains, drapes or other flammable materials.





Attention:

The appliance is not equipped with a device for controlling room temperature. Do not use the appliance in small spaces where there are people who are unable to leave the room on their own and if constant supervision is not provided.

- Do not subject people or animals to the direct flow of hot or cold air for an extended period of time. This could negatively affect their health.
- Do not insert any objects through the front air outflow grill or the back air inflow grill. This could lead to an electrical short circuit or damage the appliance.
- To avoid potential injury by electrical shock, do not submerge any part of this appliance under water or any other liquid.
- Do not touch the appliance with wet or damp hands when it is connected to a power socket.
- Do not leave the appliance without supervision while it is turned on and connected to a power socket. Do not leave the appliance in operation while sleeping.
- Always turn off the appliance and disconnect it from the power socket when not using it or before cleaning it.
- Keep the appliance in a clean condition.
- To avoid damaging the power cord, do not bend or twist it. Make sure that it does not come into contact with hot surfaces or sharp objects.
- Do not disconnect the appliance from the power socket by pulling on the power cord. This could damage the power cord or the socket. Disconnect the cord from the power socket by gently pulling the plug of the power cord.
- Do not use the appliance if it is not working correctly, if it has been damaged or has been submerged in water. To avoid the danger of injury by electrical shock, do not repair the appliance yourself or make any adjustments to it. Have all repairs or adjustments of the appliance performed at an authorised service centre. By tampering with the appliance, you risk voiding your legal rights arising from unsatisfactory performance or quality warranty.
- The manufacturer is not responsible for any damages caused by the incorrect use of this appliance.

A

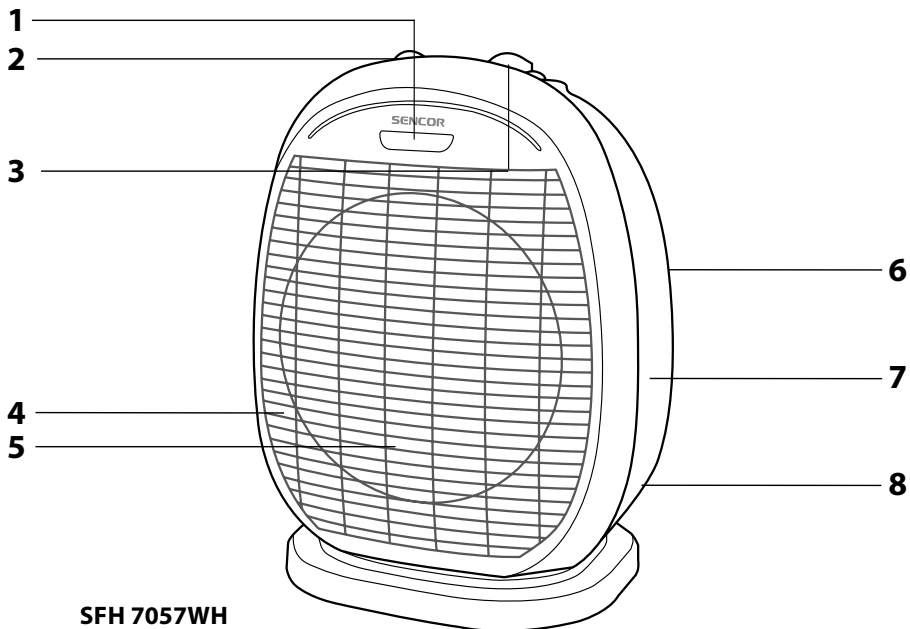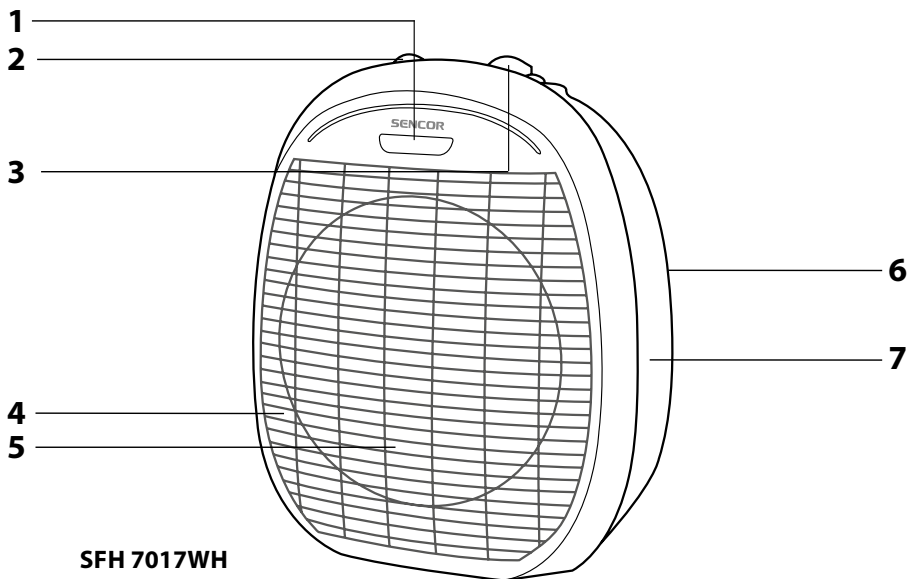

- Prior to using this appliance, please read the user's manual thoroughly, even in cases where you have previously familiarised yourself with the operation of similar types of appliances. Only use the appliance in the manner described in this user's manual. Keep this user's manual in a safe place where it can be easily retrieved for future use.
- We recommend saving the original cardboard box, packaging material, purchase receipt and responsibility statement of the vendor or warranty card for at least the duration of the legal liability for unsatisfactory performance or quality. In the event of transportation, we recommend that you pack the appliance in the original box from the manufacturer.

DESCRIPTION OF THE APPLIANCE


- | | |
|---|--|
| <p>A1 Power indicator light</p> <p>A2 Temperature control knob</p> <p>A3 Turn switch for starting just the fan, for setting the power level 1 or 2 and for turning off the appliance.</p> <p>A4 Air outlet grill</p> <p>A5 Fan and heating elements
These parts are hidden underneath the grill.</p> | <p>A6 Integrated carry handle (not shown)
it is located at the rear of the appliance.</p> <p>A7 Air inlet grill (not shown)
it is located at the rear of the appliance.</p> <p>A8 Oscillation toggle switch</p> |
|---|--|

OPERATING THE APPLIANCE

- Before first use, remove all packaging materials including promotional stickers and labels from the appliance.
- Locate the appliance in a suitable location in accordance with the safety instructions. Make sure that the inflow or outflow vents **A7** or **A4** are not blocked, that the temperature control knob **A2** is set to minimum and the switch **A3** is in position 0 (off). Connect the appliance to a power socket. After connecting the appliance to a power socket, indicator light **A1** will be lit.

1. SETTING AN OPERATING MODE

- Set the temperature control knob **A2** to maximum and select the desired operating mode using switch **A3**.

Setting switch A3	Description of operating mode
0	Off
	Air ventilation without heating. Only the fan is running. Heating elements are turned off.
1	Power is set to a low level (1 000 W). The fan and one of the two heating elements are running. The heating element heats the air and the fan ensures its flow into the room.
2	Power is set to a high level (2 000 W). The fan and both the heating elements are running. The heating elements heat the air and the fan ensures its flow into the room.



Note:

Upon first use or after it has not been used for an extended period of time, a slight odour may be sensed from the appliance. This is completely normal and will quickly disappear.

2. TEMPERATURE CONTROL KNOB SETTING

- The appliance is equipped with a thermostat that serves to maintain the desired temperature in the room.
- To heat up the air in the room as fast as possible, set switch **A3** to the high power level and the temperature control knob **A2** to maximum. When the desired temperature has been reached, slowly turn the temperature control knob **A2** anticlockwise until you hear a click. The set thermostat will automatically switch the fan and heating elements **A5** on and off to maintain the desired temperature.

3. OSCILLATION FUNCTION

- Setting the switch **A8** to position I will turn on the oscillation function. The hot air fan heater will automatically turn from side to side. To turn off oscillation, set the switch **A8** to position 0. This function is only available on model SFH 7057WH.

4. TURNING OFF

- When you have finished using it, turn off the oscillation function (only on model SFH 7057WH), set the temperature control knob **A2** to minimum, set switch **A3** to position 0 (off) and disconnect the power cord from the power socket. After disconnecting the appliance from the power socket, indicator light **A1** will turn off. Allow the appliance to cool down.

AUTOMATIC SHUT-OFF FUNCTION

- The appliance is equipped with a safety mechanism that automatically turns it off when it is accidentally knocked over. After returning the appliance back to the operating position, it will start running again. We recommend waiting 5 - 10 minutes before the appliance cools down.

THERMAL PROTECTION

- The appliance is equipped with a thermal fuse that turns it off upon overheating. Should such a situation occur, turn the appliance off and disconnect it from the power socket. Make sure that the air inlet and outlet openings **A7** or **A4** are not blocked. Allow the appliance to cool down before attempting to put it back into operation as this will give the thermal fuse time to reset.
- If you are unable to put the appliance back into operation, contact an authorised service centre.

CLEANING AND MAINTENANCE

- Before cleaning it, make sure that the appliance is turned off and disconnected from the power socket. If the surface of the appliance is hot, allow it to cool down.
- Use a dry or lightly dampened wiping cloth to clean the surface of the appliance. Then thoroughly wipe everything dry. Dust that has settled inside the appliance can be vacuumed out using a vacuum cleaner through the air inlet and outlet grills **A7** and **A4**.
- For cleaning, do not use cleaning products with an abrasive effect, solvents, etc. Otherwise, outer surface of the appliance may be damaged. Do not submerge the appliance or its power cord in water or any other liquids.

TECHNICAL SPECIFICATIONS

Rated voltage range	220 - 240 V ~
Rated frequency.....	50 - 60 Hz
Rated power	1 800 - 2 000 W
Power input settings.....	1 000 W / 2 000 W
Electrical shock protection class.....	..II
Noise level	53 dB(A)

The declared noise emission level is 53 dB(A), which represents a level A of sound power with respect to a reference sound power of 1 pW.

Changes to text and technical parameters are reserved.



Explanation of technical terminology

Safety class for electrical shock protection:

Class II – Electrical shock protection is provided by double or heavy-duty insulation.

INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of used packaging material at a site designated for waste in your municipality.

DISPOSAL OF USED ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on products or original documents means that used electric or electronic products must not be added to ordinary municipal waste. For proper disposal, renewal and recycling hand over these appliances to determined collection points. Alternatively, in some European Union states or other European countries you may return your appliances to the local retailer when buying an equivalent new appliance.

Correct disposal of this product helps save valuable natural resources and prevents potential negative effects on the environment and human health, which could result from improper waste disposal. Ask your local authorities or collection facility for more details.

In accordance with national regulations penalties may be imposed for the incorrect disposal of this type of waste.

For business entities in European Union states

If you want to dispose of electric or electronic appliances, ask your retailer or supplier for the necessary information.

Disposal in other countries outside the European Union

This symbol is valid in the European Union. If you wish to dispose of this product, request the necessary information about the correct disposal method from the local council or from your retailer.



This product meets all the basic requirements of EU directives related to it.