


STEP 1




1. Open the cover on the top of the container and fill the container with water. Do not fill the container completely. The water level should be 2cm from the top of the container

STEP 2

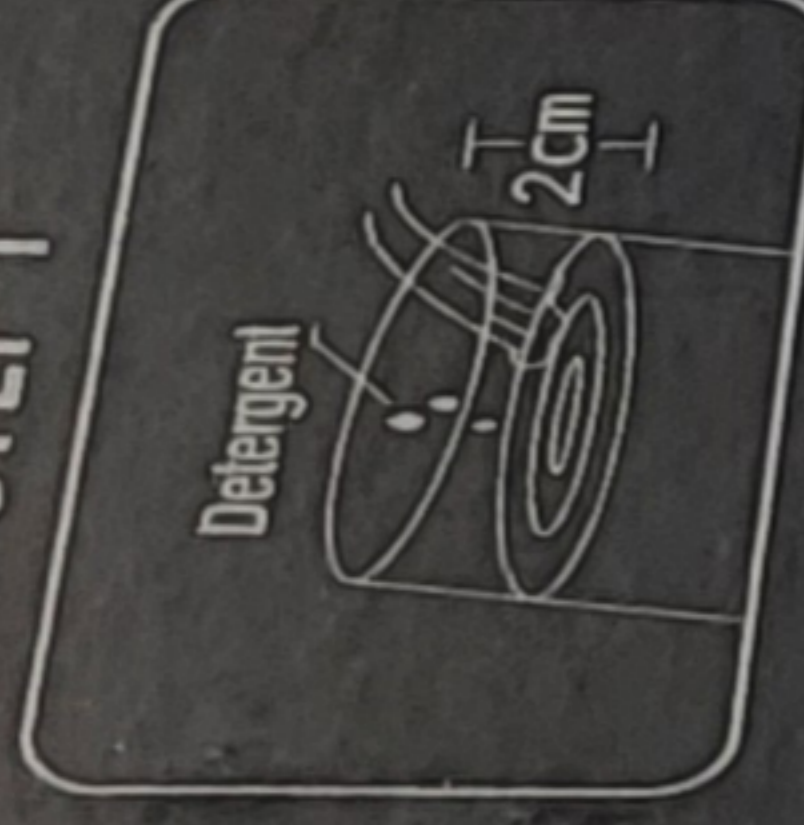


2. Turn on the switch after connecting the USB cable, and wait for about 30 seconds so that the detergent dissolve evenly in the water.

STEP 3

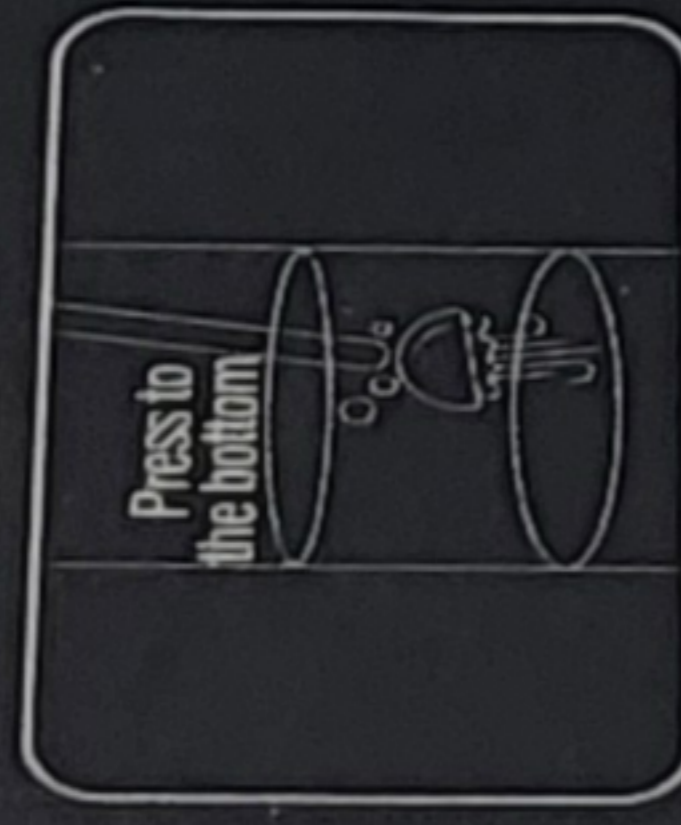


3. Take the jellyfish out of the plastic bag and put them into water, and use a stick to press the jellyfish to release the bubbles(if any) in the jellyfish cap.

STEP 4

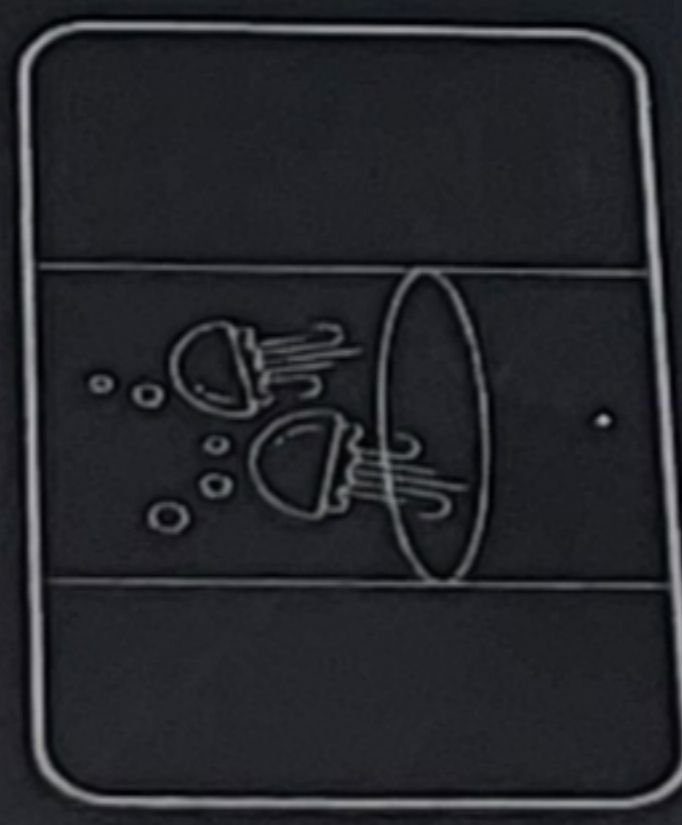

4. Clear the surface of the product, turn on the switch and enjoy the show now.

STEP 5

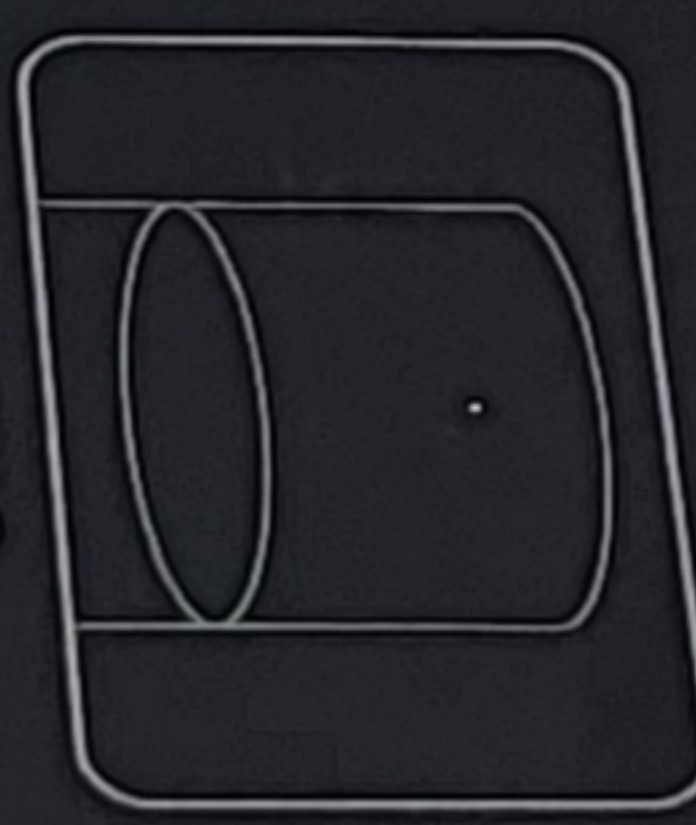

5. When you turn on the left side of button the light color will change automatically. The right side button is the "Light option" you can choose the color you like.

Notes:

1. The product must be placed on a flat object when viewed or operated
2. Water or water droplets are strictly prohibited to infiltrate into the product base or its DC outlet outside the base. Do not attempt to separate the container from the base.
3. the operating voltage of the product is 5V, please do not use adapters to operate beyond this voltage, in case of burning out the circuit.

